

**How to confirm FW version for X725/X735?**

- 1. Menu+Play+Power to power on**
- 2. After power on, press [Menu] to confirm version.**

**PS : After each F/W update, please enter factory mode to execute [Format Memory] => [Reset Default],**