






Digital Projector Quick Start Guide

Home Cinema Series | TH575i/TH575C

BenQ PN: 4J.JRF02.002_V1.01

© 2026 BenQ Corporation. All rights reserved. Rights of modification reserved.

Package contents

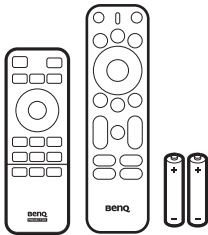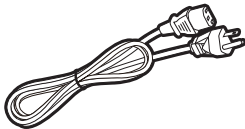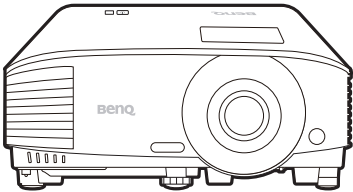

(Remote control and availability of batteries varies by region)



StreamX1
(Availability varies by region)




Regulatory Statements



Setup


1

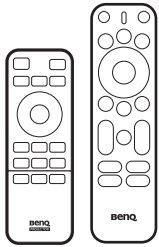


(AAA batteries. Purchased separately if not included)

2

(Required only for models with StreamX1)

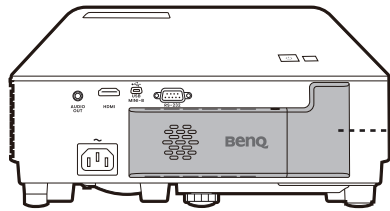


1

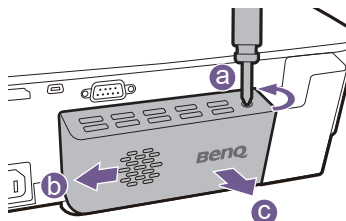


(A cross-pointed screwdriver. Not included)


2

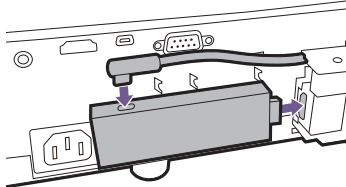


3

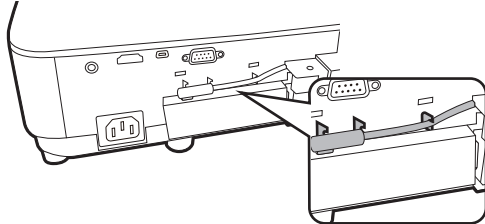


4

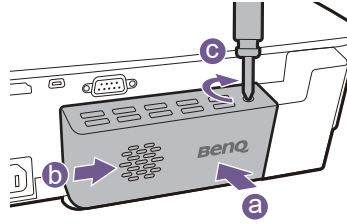

3

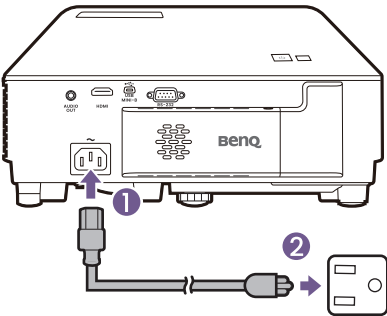


4

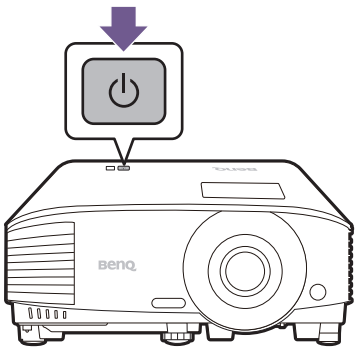


5

Start setup

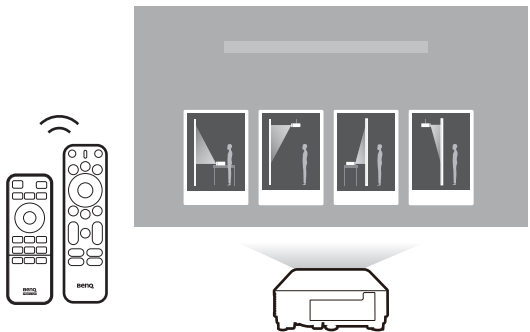

✓ All done. Enjoy!

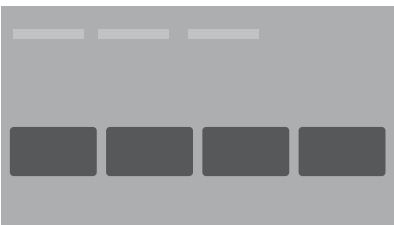

(Image may vary by region)



P/N: 4J.6ST01.002

 Image adjustments

Image focus



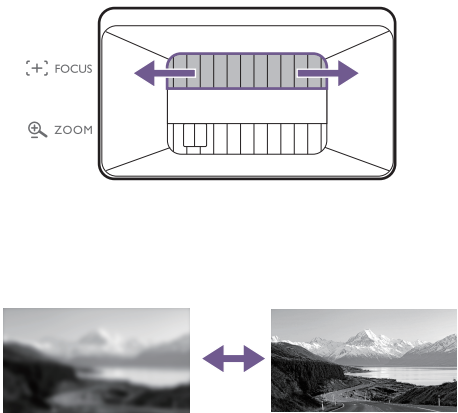


Image zoom

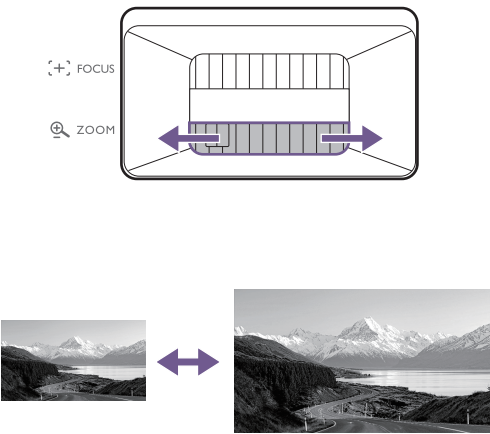

 Ceiling mounting

Screw type: M4 / Compatible BenQ ceiling mount: CM00G3

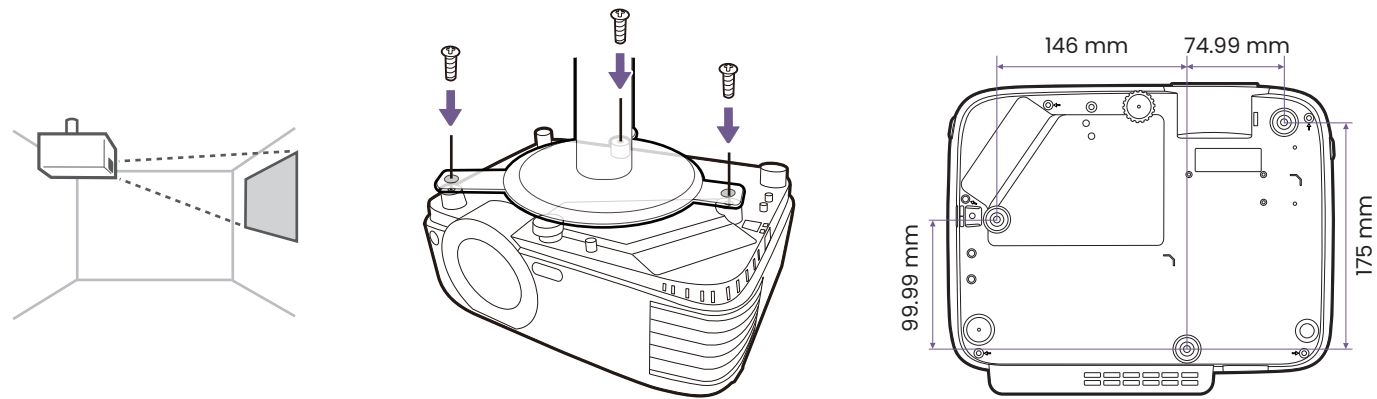

 Input selection

