

BenQ User Manual Addendum

Remote control

Numeric buttons

Enters numbers in network settings.

 Numeric buttons 1, 2, 3, 4 cannot be pressed when asked to enter password.

Utilizing the password function

Setting a password

3. As pictured to the right, the four arrow keys (▲, ►, ▼, ◀) respectively represent 4 digits (1, 2, 3, 4). According to the password you desire to set, press the arrow keys to enter six digits for the password.

Menu operation

Menu system

Main menu	Sub-menu	Options
1. DISPLAY	Teaching Template	Blackboard Off/Letter Formation/Worksheet/Coordinate Chart
		Whiteboard Off/Letter Formation/Worksheet/Coordinate Chart

Description of each menu

Function	Description	
1. DISPLAY menu	Teaching Template	Provides several preset patterns for various teaching purposes. Choose Blackboard or Whiteboard first by pressing ▲/ ▼ and press ◀/ ► to choose the pattern you need. Press MODE/ENTER to activate the pattern.
5. SYSTEM SETUP Advanced menu	Reset All Settings	 For models with HDMI input, Color Space Conversion setting will still remain.

Supported timing for HDMI (HDCP) input (for the MX710/MX711/MX762ST series)

The below timings support 3D function.

Resolution	Mode	Vertical Frequency (Hz)	Horizontal Frequency (kHz)	Pixel Frequency (MHz)
640 x 480	VGA_60	59.940	31.469	25.175
800 x 600	SVGA_60	60.317	37.879	40.000
1024 x 768	XGA_60	60.004	48.363	65.000
1280 x 768	1280 x 768_60	60	47.396	68.25
	1280 x 768_60	59.870	47.776	79.5
1280 x 800	WXGA_60	59.810	49.702	83.500
1280 x 1024	SXGA_60	60.020	63.981	108.000
1280 x 960	1280 x 960_60	60.000	60.000	108
1360 x 768	1360 x 768_60	60.015	47.712	85.500
1440 x 900	WXGA+_60	60	55.469	88.75
	WXGA+_60	59.887	55.935	106.500
1400 x 1050	SXGA+_60	59.978	65.317	121.750
1024 x 576@60Hz	Netbook Timing	60.00	35.820	46.996

Timing	Resolution	Vertical Frequency (Hz)	Horizontal Frequency (kHz)	Pixel Frequency (MHz)	Remark
480i	720 x 480	59.94	15.73	13.5	HDMI only