



i500

Digital Projector Personal Smart Series
User Manual

Copyright and disclaimer

Copyright

Copyright © 2018 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

All other logos, products, or company names mentioned in this manual may be the registered trademarks or copyrights of their respective companies, and are used for informational purposes only.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by BenQ Corporation is under license.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of BenQ Corporation to notify any person of such revision or changes. This user manual aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit <http://www.benq.com> for the latest version of this manual.

Warranty

BenQ warrants this product against any defects in material and workmanship, under normal usage and storage.

Proof of purchase date will be required with any warranty claim. In the event this product is found to be defective within the warranty period, BenQ's only obligation and your exclusive remedy shall be replacement of any defective parts (labor included). To obtain warranty service, immediately notify the dealer from which you purchased the product of any defects.

Important: The above warranty shall be void if the customer fails to operate the product in accordance with BenQ's written instructions, especially the ambient humidity must be in-between 10% and 90%, temperature in-between 0°C and 35°C, altitude lower than 3000 meters, and avoiding to operate the projector in a dusty environment. This warranty gives you specific legal rights, and you may have other rights which vary from country to country.

For other information, please visit www.BenQ.com.

Statement regarding hyperlinks and third-party websites

BenQ is not responsible for the content of the websites or of similar resources, which are maintained and controlled by third parties, that may be linked from this product. Providing links to those websites or to similar resources does not mean that BenQ makes any warranty or representation to their content by expression or by implication.

Any third party content or service preinstalled in this product is provided "as is". BenQ does not, by expression or by implication, make any warrant to the content or to the services provided by third parties. BenQ does not warrant or guarantee that the content or services provided by third parties are accurate, effective, most up-to-date, legal, or complete. Under no circumstances shall BenQ be liable for the content or services provided by third parties including their negligence.

Services provided by third parties may be terminated temporarily or permanently. BenQ does not warrant or guarantee that any content or services provided by third parties are in good condition at any time, and is not liable for the termination of the said content and services.

In addition, BenQ is not involved in any transactions you conduct in the websites or similar resources maintained by third parties.

You should contact the content or service providers for any questions, concerns, or disputes.

Table of contents

Copyright and disclaimer	2
Copyright	2
Disclaimer	2
Warranty	2
Statement regarding hyperlinks and third-party websites	3
Package contents	10
Standard accessories	10
Introduction	11
Projector features	11
Front and upper side view	13
Controls and functions	17
Control panel	17
Remote control	18
Installation	22
Choosing a location	22
Projection dimensions	24
Connecting with video equipment	27
Connecting a USB flash drive	30
Operations	31
Starting up the projector	31
Using the security bar	37


Selecting an input source	37
Adjusting the projection angle	39
Fine-tuning the image clarity	40
Correcting keystone	40
Wireless Internet Connection	41
The Bluetooth speaker	44
Pairing with the Bluetooth speaker	44
Ending a Bluetooth connection	45
Deactivating the Bluetooth speaker	45
BenQ Launcher	46
Operating under the BenQ Launcher mode	46
Accessing the BenQ Launcher main page	46
Using the BenQ Launcher applications	47
Accessing the BenQ Launcher menus	47
Using the BenQ Launcher Settings page	50
Using the All Apps page	52
Changing network settings	52
Inputting text	53
Navigating the OSD menus	54
About the OSD menus	54
Using the OSD menu	56
Maintenance	63
Care of the projector	63
Cleaning the lens	63
Cleaning the projector case	63
Transporting the projector	64

LED Lamp information.....	64
Getting to know the lamp hour.....	64
Extending lamp life	64
Troubleshooting	68
Specifications	70
Projector specifications.....	70
Regulatory Statements	80


Important safety instructions

Your projector is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that you follow the instructions mentioned in this manual and marked on the product.


1. Please read this user manual before you operate your projector.
Keep this manual in a safe place for future reference.

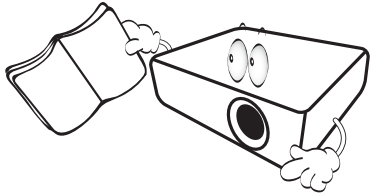


2. Always place the projector on a level, horizontal surface during operation.
 - Do not place the projector on an unstable cart, stand, or table as it may fall and be damaged.
 - Do not place inflammables near the projector.
 - Do not use if tilted at an angle of more than 10 degrees left to right, nor at angle of more than 15 degrees front to back.

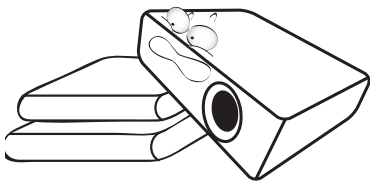

3. Do not store the projector on end vertically. Doing so may cause the projector to fall over, causing injury or resulting in damage.

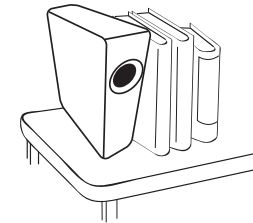


4. Do not place the projector in any of the following environments:
 - Space that is poorly ventilated or confined. Allow at least 50 cm clearance from walls and free flow of air around the projector.
 - Locations where temperatures may become excessively high, such as the inside of a car with all windows closed.
 - Locations where excessive humidity, dust, or cigarette smoke may contaminate optical components, shorten the projector's lifespan and darken the screen.

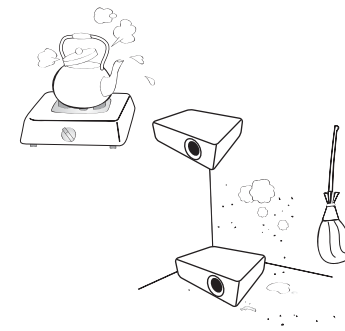


- Locations near fire alarms.
- Locations with an ambient temperature above 35°C/95°F.


- Locations where the altitudes are higher than 3000 m (10000 feet).

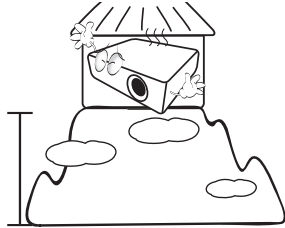


- Do not block the vents holes while the projector is on (even in standby mode).
 - Do not cover the projector with any item.
 - Do not place the projector on a blanket, bedding or any other soft surface.

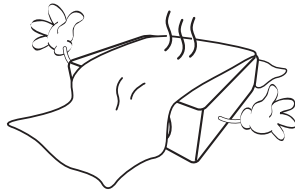


- In areas where the mains power supply voltage may fluctuate by ± 10 volts, it is recommended that you connect the projector through a power stabilizer, surge protector or uninterruptible power supply (UPS) as appropriate to your situation.

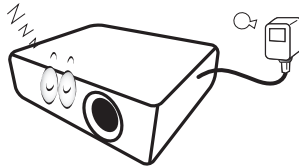


- Do not step on the projector or place any objects upon it.

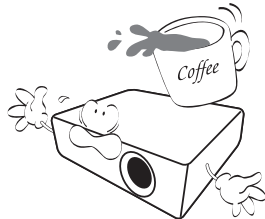


- Do not place liquids near or on the projector. Liquids spilled into the projector will void your warranty. If the projector does become wet, disconnect it from the power point and call BenQ to have the projector repaired.

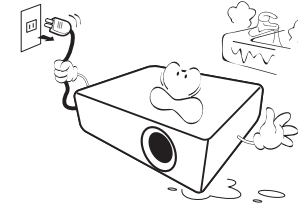


- Do not look straight into the projector lens during operation. It may harm your sight.

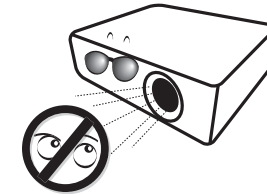


- Do not operate the projector lamp beyond the rated lamp life. Excessive operation of lamps beyond the rated life could cause a lamp to break on rare occasions.

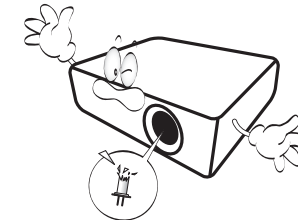

- The lamp becomes extremely hot during operation. Allow the projector to cool for approximately 45 minutes prior to removing the lamp assembly for replacement.

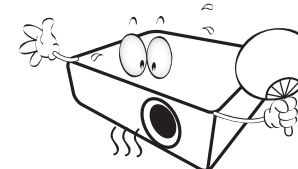


12. This projector is capable of displaying inverted images for ceiling installation.

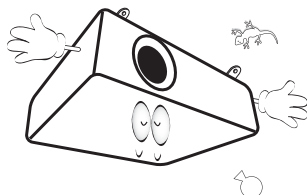


13. Do not attempt to disassemble this projector. There are dangerous high voltages inside which may cause death if you should come into contact with live parts.

Under no circumstances should you ever undo or remove any other covers. Refer servicing only to suitably qualified professional service personnel.

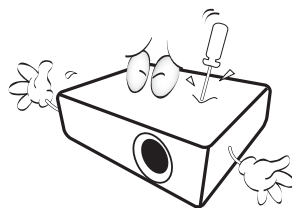

! Please keep the original packing for possible future shipment. If you need to pack your projector after use, adjust the projection lens to an appropriate position, put the lens cushion around the lens, and fit the lens cushion and projector cushion together to prevent damage during transportation.

14. When you think service or repair is required, take the projector only to a suitably qualified technician.

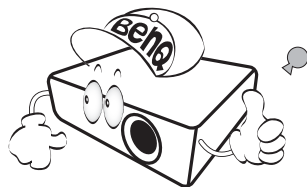

Moisture condensation

Never operate the projector immediately after moving it from a cold location to a hot location. When the projector is exposed to such a change in temperature, moisture may condense on the crucial internal parts. To prevent the projector from possible damage, do not use the projector for at least 2 hours when there is a sudden change in temperature.

Avoid volatile liquids

Do not use volatile liquids, such as insecticide or certain types of cleaner, near the projector. Do not have rubber or plastic products touching the projector for a long time. They will leave marks on the finish. If cleaning with a chemically treated cloth, be sure to follow the cleaning product's safety instructions.

Disposal

This product contains the following materials which are harmful to human bodies and environment.

- Lead, which is contained in solder.
- Mercury, which is used in the lamp.

To dispose of the product or used lamps, consult your local environment authorities for regulations.




The illustrations and the images shown in this document are for your reference. The actual content may vary by the product supplied for your region.


Package contents

Carefully unpack and verify that you have the items below. Some of the items may not be available depending on your region of purchase. Please check with your place of purchase.

Standard accessories

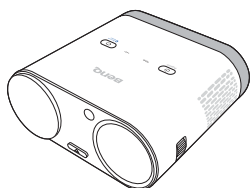


Projector

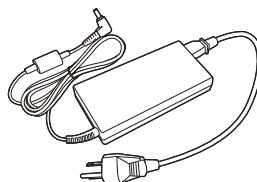


Adapter



Remote Control with Battery

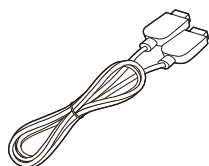

HDMI Cable

 

Warranty Card



Quick Start Guide



- Some of the accessories may vary from region to region.
- The warranty card is only supplied in some specific regions. Please consult your dealer for detailed information.

Introduction

Projector features

- **Full HD compatible**

The projector is compatible with Standard Definition TV (SDTV) 480i, Enhanced Definition television (EDTV) 480p, 576i, 576p and High Definition TV (HDTV) 720p, 1080i/p 60Hz formats, with the 1080p format providing clear image reproduction.

- **Good picture quality**

The projector provides excellent picture quality due to its resolution, 500 lm brightness, high contrast ratio, vivid color and rich gray-scale reproduction.

- **Built-in Bluetooth speakers**

The two built-in 5W chamber speakers feature the capability of wirelessly connecting to any Bluetooth-enabled device media player to broadcast any music played by the device.

- **WLAN capabilities**

The projector is able to connect to any WLAN access point to access the internet and utilize streaming apps.

- **Wide variety of inputs and video formats**

The projector supports a wide variety of inputs for connection to your video, computer, and smart equipment, including personal computer (both Mac and PC) and HDMI source.

- **Convenient Android-based BenQ Launcher**

The projector operates using the Android-based **BenQ Launcher** which complemented by a WLAN connection allows you to project/broadcast media via embedded or downloaded streaming apps.

- **Advanced LED light source**

The projector features a long lasting LED lightbulb that provides a longer lifespan than traditional bulbs.

- **Short throw lens**

The projector provides a roughly 80" display from a 1 meter distance, that makes it extremely suitable for areas with limited space such as a study, bedroom, or small apartment.


- **High brightness**

The projector features super high brightness to achieve excellent picture quality in ambient light conditions, outperforming ordinary projectors.

- **Vivid color reproduction**
The projector features the capability of representing 1.07 billion colors.
- **Auto Keystone**
The projector offers an automatic keystone adjustment function which adjusts the projected image accordingly.
- **3D function**
To enjoy the 3D movies, videos, and sporting events in a more realistic way by presenting the depth of the images through HDMI.
- **Media playback from USB storage devices**
The projector supports playing of media including multiple video and music file formats that are located on any USB storage devices connected to the USB port on the projector.
- **Portability**
The projector is small and light, making it useful for business trips and leisure activities. You can view documents, videos and photos anywhere.

Projector exterior view

Front and upper side view

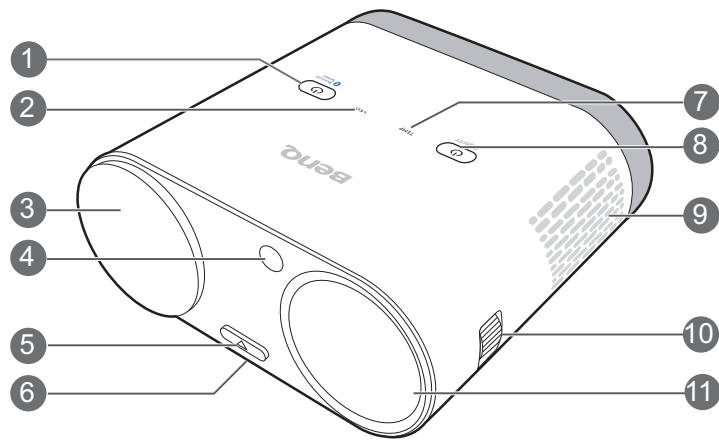

1. **Bluetooth button** (See [Control panel on page 17](#) for details.)

2. **LED indicator light**

3. **Lens cap holder**

This magnetic component holds the lens cap while the projector is in use.

4. **Front IR sensor**

5. **Quick-release button**

6. **Quick-release adjuster foot** (located underneath the projector)

7. **TEMPerature indicator light**

8. **Power button**


9. **Vent** (cool air intake)

10. **Focus ring**

11. **Projection lens**

Rear and upper side view

See [Connection on page 26](#) for connection details.

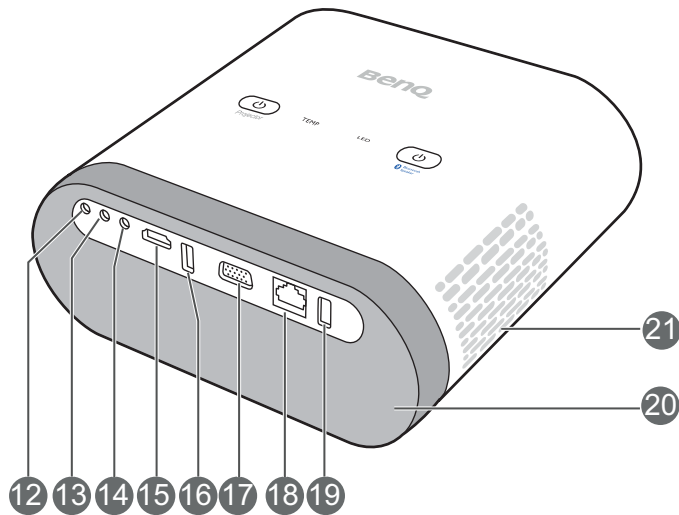

 The image above features the rear view with the IO port cover removed. For ease of use when removing the magnetic IO port you can place it on the speaker grill as a temporary holding place.

12. Microphone in jack

13. Audio input jack

14. Audio output jack

15. HDMI port

This port can also be used for charging the connected HDMI compatible smart device as long as the power is fed to the projector.

16. USB 3.0 Type-A port

Used to connect a USB storage device to project/broadcast media stored on the device. You may also connect a wireless keyboard/mouse via this USB port.



This USB port also allows you to charge attached USB-enabled devices (i.e. a smartphone, tablet, etc.).

17. RGB (PC)/Component video (YPbPr/YCbCr) signal input jack

18. LAN RJ-45 Port


Used to connect the projector to LAN port on an internet access port for internet access.

19. USB 2.0 Type-A port

Used to connect a USB storage device to project/broadcast media stored on the device. You may also connect a wireless keyboard/mouse via this USB port.



This USB port also allows you to charge attached USB-enabled devices (i.e. a smartphone, tablet, etc.).

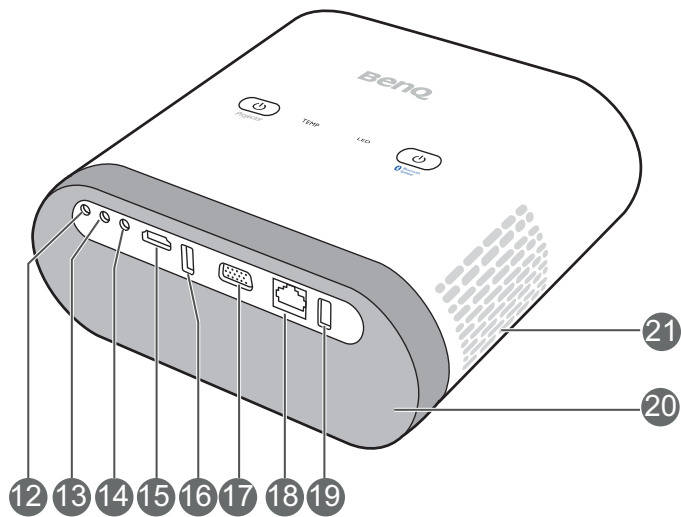

20. Speaker Grill


Inside the speaker grill is the two 5-watt chamber speakers.

21. Vent (cool air intake)



The image above features the rear view with the IO port cover removed. For ease of use when removing the magnetic IO port you can place it on the speaker grill as a temporary holding place.

Rear and left side view

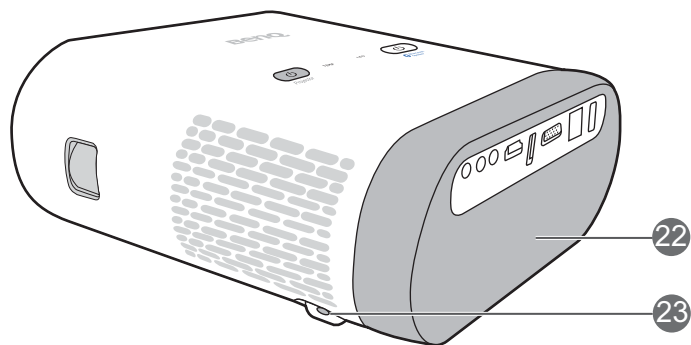

The image above features the rear view with the IO port cover removed. For ease of use when removing the magnetic IO port you can place it on the speaker grill as a temporary holding place.

22. Rear IR sensor


23. Rear power jack



Please only use the supplied power adapter to avoid possible dangers such as electric shock and fire.

Controls and functions

Control panel

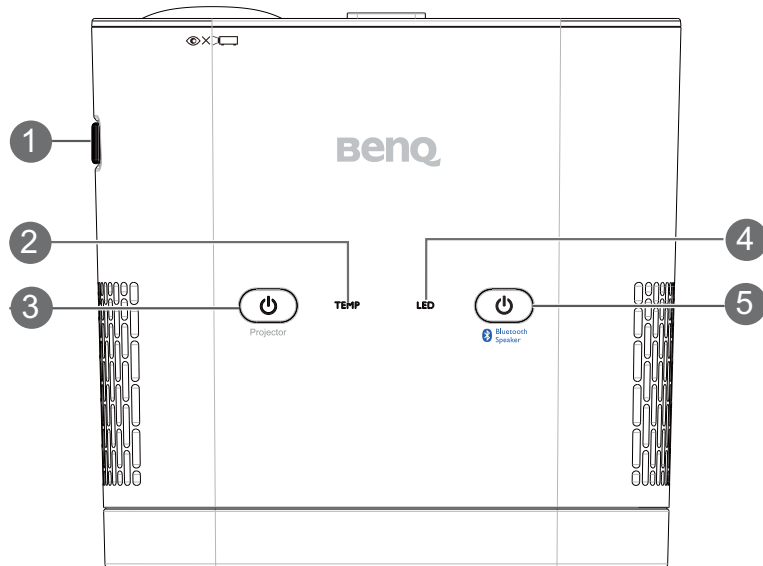

1. Focus ring

Adjusts the focus of the projected image.

2. TEMPerature warning light

Lights up red if the projector's temperature becomes too high. See [Indicators on page 66](#) for more details.

3. ⏻ POWER

Toggles the projector between standby mode and on. The icon on the Power button also acts as the power indicator light. See [Starting up the projector on page 31](#) and [Indicators on page 66](#) for more details.


4. LED indicator light

Indicates the system or error status of the projector. See [Indicators on page 66](#) for more details.

5. Bluetooth button

Activates Bluetooth for the projector's wireless speakers. The icon on the Bluetooth button also acts as the Bluetooth indicator light. See [Wireless Internet Connection on page 41](#) and [Indicators on page 66](#) for more details.

Remote control

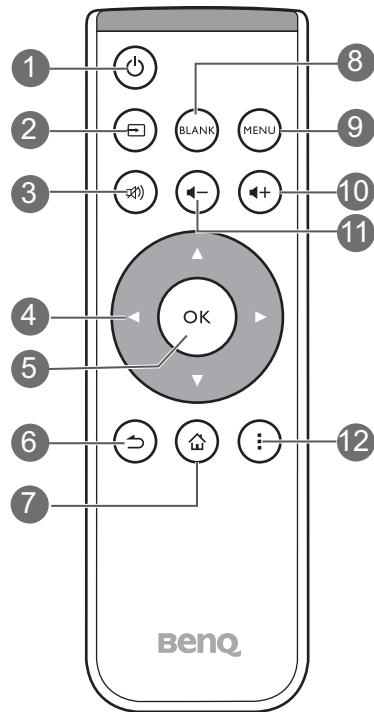

1. **Power**

Toggles the projector between on and off mode.

2. **Source**

Launches the Source On-Screen Display (OSD) menu (the source menu will automatically close after 30 seconds of inactivity).

3. **Mute**

Toggles projector audio between on and off.

4. **Arrow keys (◀Left, ▶Right, ▲Up, ▼Down)**


- When the OSD menu is activated, these keys are used as directional arrows to select the desired menu items and to make adjustments.
- When the OSD menu is off and you are under the **BenQ Launcher** mode, these keys are used as directional arrows to select the desired menu items and to make adjustments.

5. **OK**

- Confirms the selected OSD menu item.
- When the OSD menu is off and you are under **BenQ Launcher** mode, use the key to confirm the selection on the **BenQ Launcher** menu.

6. **BACK**

- Goes back to previous OSD menu, exits and saves menu settings.
- When the OSD menu is off and you are under **BenQ Launcher** mode, use the key to return to the previous layer.

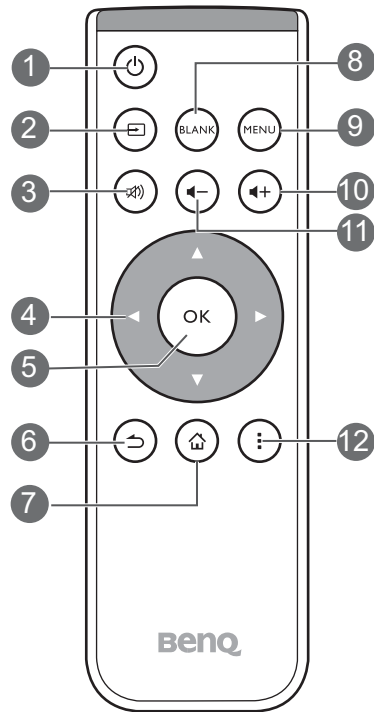

7. **HOME**

Press this key to enter the home menu of the **BenQ Launcher** mode.



This key is only available when the projector is under **BenQ Launcher** mode.

8. **BLANK**

Switches the projected image to either a blank screen or switches the blank screen back to the original projected image.

9. **MENU**

Opens the projectors OSD menu.

10. **Volume Up**

Increases the projector volume.

11. **Volume Down**


Decreases the projector volume.

12. **Options**

Launches the options menu for the currently opened app in **BenQ Launcher** mode.

Activating the remote control batteries


1. Pull out the plastic battery shield between the battery contacts on your remote control and the battery, as illustrated.

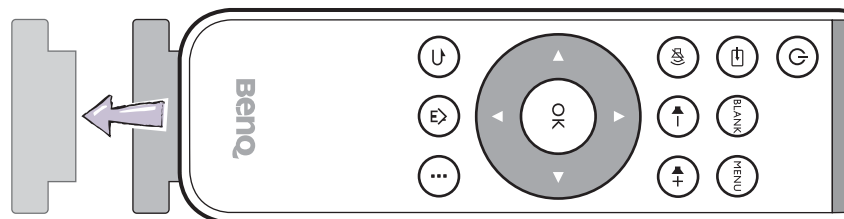

- Avoid leaving the remote control and battery in an excessive heat or humid environment like the kitchen, bathroom, sauna, sunroom or in a closed car.
- Replace only with the same or equivalent type recommended by the battery manufacturer.
- Dispose of the used batteries according to the manufacturer's instructions and local environment regulations for your region.
- Never throw the battery into a fire. There may be danger of an explosion.
- If the battery is drained or if you will not be using the remote control for an extended period of time, remove the battery to avoid damage to the remote control from possible battery leakage.

Replacing the remote control battery

1. Push and hold the locking arm while pulling out the battery holder.
2. Insert the new battery in the holder. Note that the positive side of the battery should face outward.
3. Push the holder into the remote control.

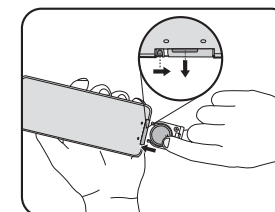


Remote control effective range


The remote control must be held at an angle within 15 degrees perpendicular to the projector's IR remote control sensor(s) to function correctly. The distance between the remote control and the sensor(s) should not exceed 7 meters (~ 23 feet).

Make sure that there are no obstacles between the remote control and the IR sensor(s) on the projector.

- **Operating the projector from the front**

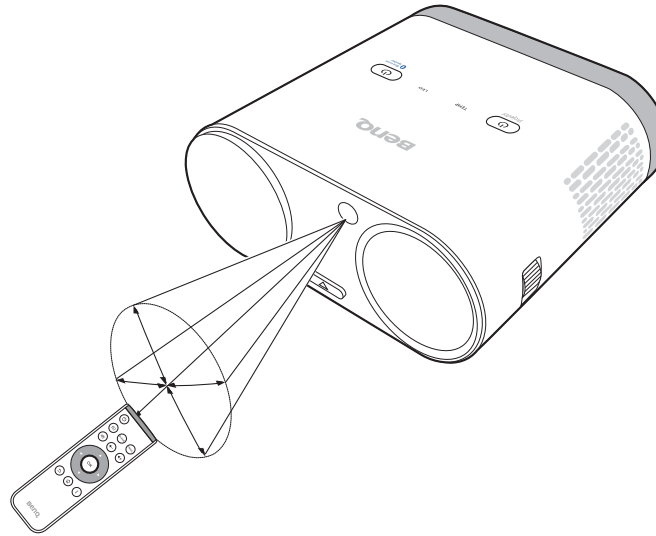

- **Operating the projector from the rear**

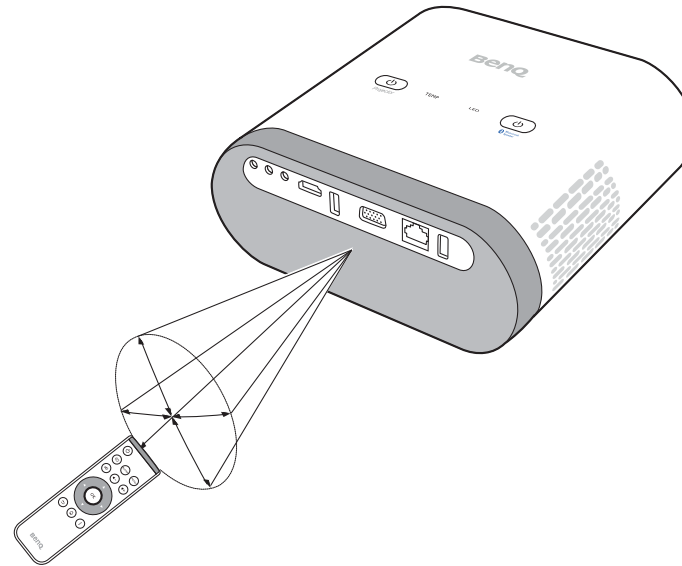

Installation

Choosing a location

Before choosing an installation location for your projector, take the following factors into consideration:

- Size and position of your screen
- Electrical outlet location
- Location and distance between the projector and the rest of your equipment
- Location and distance between the projector and the wireless access point, or if using a LAN cable, the internet hub.

You can install your projector in the following ways.


1. Front:

Select this location with the projector placed near the floor in front of the screen.

This is the most common way to position the projector for quick setup and portability.

Turn on the projector and make the following settings:

MENU > Settings > Projector Position > Front

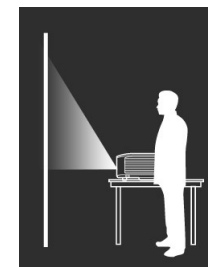

2. Rear:


Select this location with the projector placed near the floor behind the screen.



Turn on the projector and make the following settings:

MENU > Settings > Projector Position > Rear



A special rear projection screen is required.

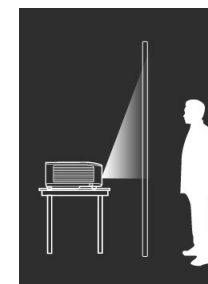

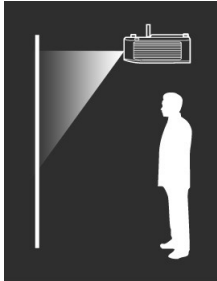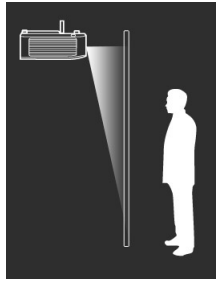
3. Front Ceiling: Select this location with the projector elevated near the ceiling in front of the screen. Turn on the projector and make the following settings: MENU > Settings > Projector Position > Front Ceiling  The projector does not feature ceiling mount components/equipment so when choosing to use a front ceiling location you must place it on an elevated location of your choice.	
4. Rear Ceiling: Select this location with the projector elevated from the ceiling behind the screen. Turn on the projector and make the following settings: MENU > Settings > Projector Position > Rear Ceiling  A special rear projection screen is required.  The projector does not feature ceiling mount components/equipment so when choosing to use a front ceiling location you must place it on an elevated location of your choice.	

Obtaining a preferred projected image size

The projected image size is determined by the distance from the projector lens to the screen, and the video format.

Projection dimensions

Use the illustration and tables below to help you determine the projection distance.

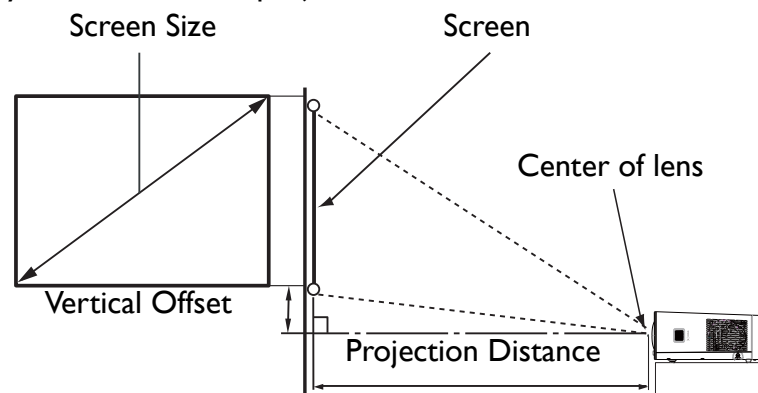

Screen size				Projector distance (mm)	
Diagonal		H (mm)	W (mm)	Average	Max. distance
Inch	mm				
60	1524	808	1292	388	775
70	1778	942	1508	452	905
80	2032	1077	1723	517	1034
90	2286	1212	1939	582	1163
100	2540	1346	2154	646	1292
120	3048	1615	2585	775	1551

Screen size				Projector distance (mm)	
Diagonal		H (mm)	W (mm)	Average	Max. distance
Inch	mm				
140	3556	1885	3015	905	1809
160	4064	2154	3446	1034	2068
180	4572	2423	3877	1163	2326
200	5080	2692	4308	1292	2585




All measurements are approximate and may vary from the actual sizes. If you want a permanent installation of the projector, we recommend that you use the actual projector to physically test the projection size, distance, and the projector's optical characteristics prior to the installation. This helps you determine the exact mounting position which best suits your installation.

Connection

When connecting a signal source to the projector, be sure to:

1. Turn all equipment off before making any connections.
2. Use the correct signal cables for each source.
3. Make sure the cables are firmly inserted.
4. Place the projector within range of the wireless AP you plan to connect it to.

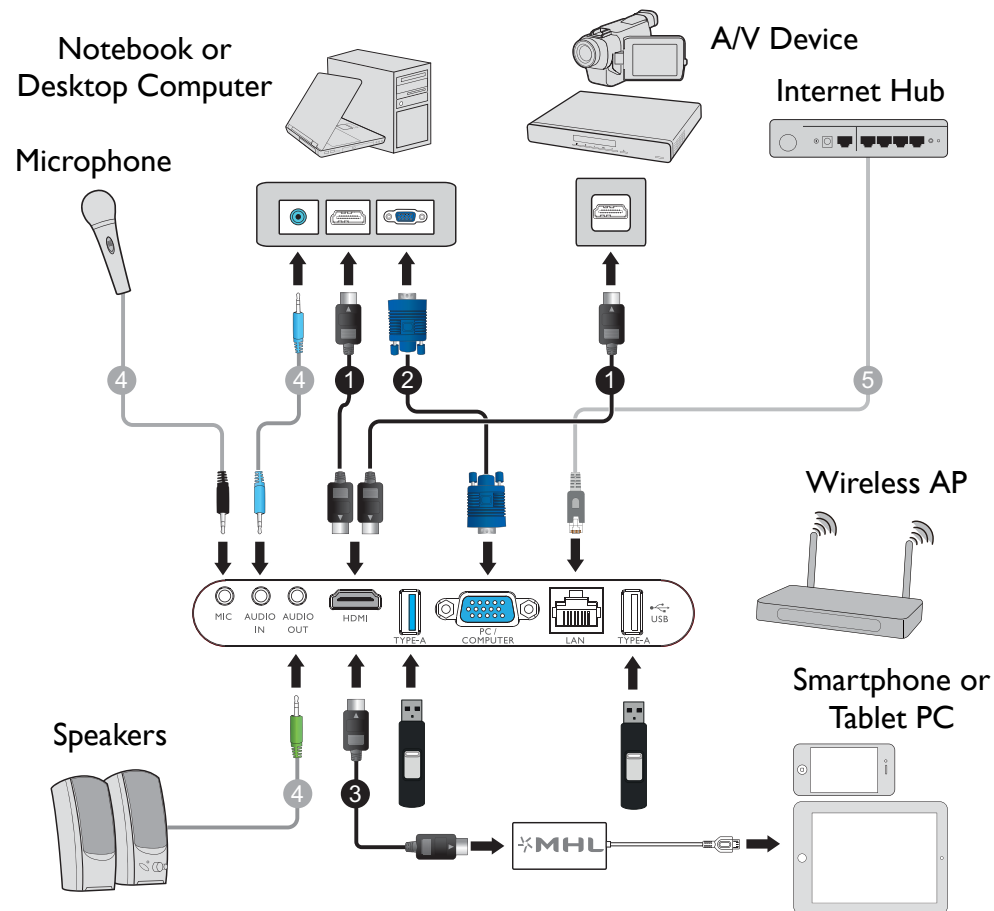




- In the connection illustrations shown above, some cables may not be included with the projector (see [Projector exterior view on page 13](#)). They are commercially available from electronics stores.
- The illustrations above are for reference only. The rear connecting jacks available on the projector vary with each projector model.

1. HDMI cable
2. VGA cable
3. HDMI to Micro USB cable
4. Audio 3.5" cable
5. LAN RJ-45 cable

Connecting with video equipment

 You only need to connect the projector to a video source device using just one of the following connecting methods. Each video source provides different picture quality. The method you choose most likely depends upon the availability of matching terminals on both the projector and the video source device as described below:

Terminal name	Terminal appearance	Reference	Picture quality
HDMI		• Connecting HDMI devices • Connecting smart devices	● Best
PC (D-SUB)		Connecting a computer	● Better




- In the connection illustrations shown below, some cables may not be included with the projector (see [Projector exterior view on page 13](#)). They are commercially available from electronics stores.

Connecting HDMI devices

HDMI (High-Definition Multimedia Interface) supports uncompressed video data transmission between compatible devices like DTV tuners, DVD players, Blu-ray players and displays over a single cable. You should use an HDMI cable when making a connection between the projector and HDMI devices.


HDMI device: DVD player, digital tuner, etc.

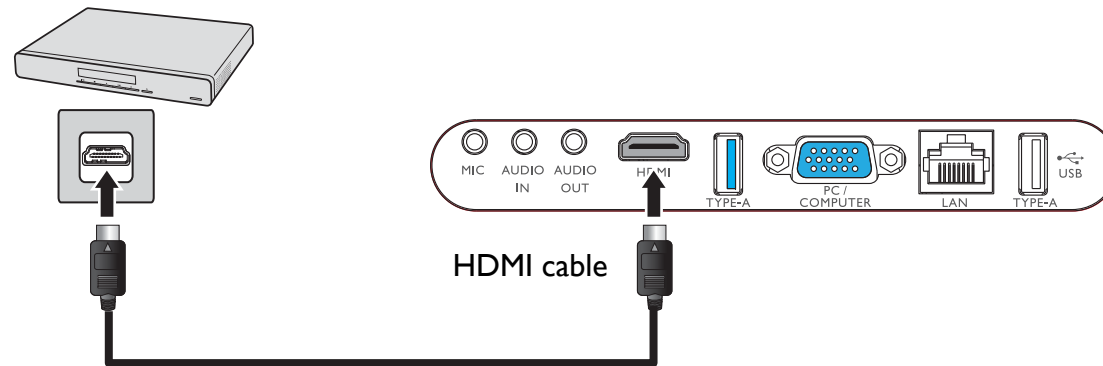

Connecting with a computer


Using a VGA cable

Connect the projector to a computer with a VGA cable, and a separate audio cable (only if you want to broadcast audio from the computer).

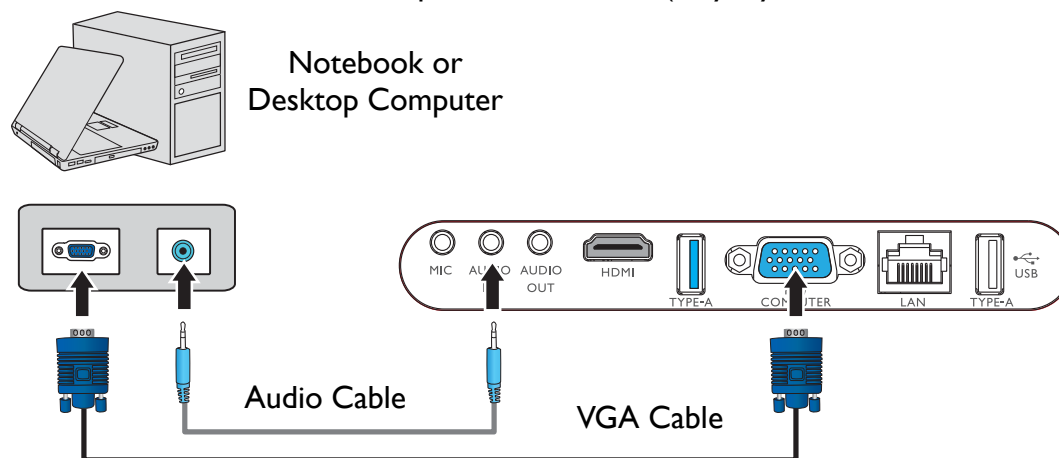

Using an HDMI cable

Connect the projector to a computer with an HDMI cable.

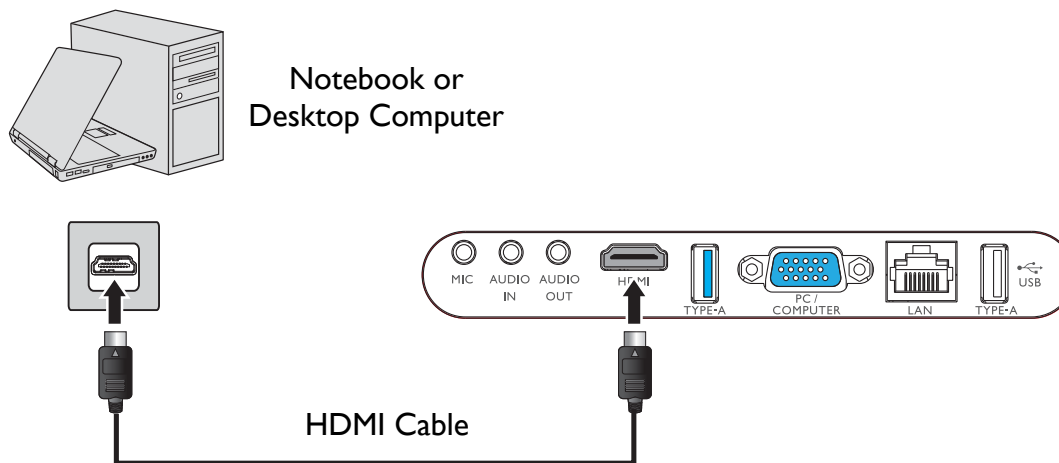




- Some computers feature HDMI ports that do not transmit audio, in such cases a separate audio cable must be connected to the projector.
- Many laptops do not turn on their external video ports when connected to a projector. Usually a key combination like Fn + F3 or CRT/LCD key turns the external display on/off. Locate a function key labeled CRT/LCD or a function key with a monitor symbol on the laptop. Press Fn and the labeled function key simultaneously. Refer to your laptop's documentation to discover your laptop's key combination.

Connecting a USB flash drive


Connect a USB flash drive to one of the USB ports on the rear of the projector to view media files stored on the flash drive.

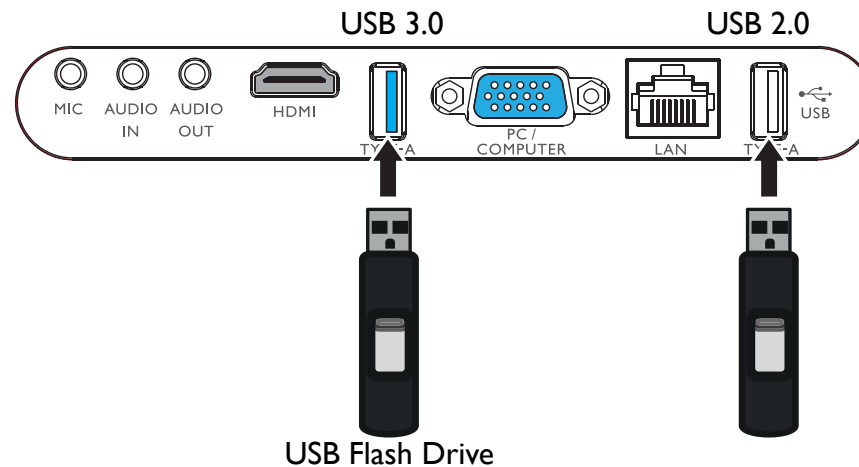

Operations

Starting up the projector

1. Plug the power cable into the projector and a power outlet. Turn on the power outlet switch (where fitted). The **POWER indicator light** on the projector lights orange after power has been applied.

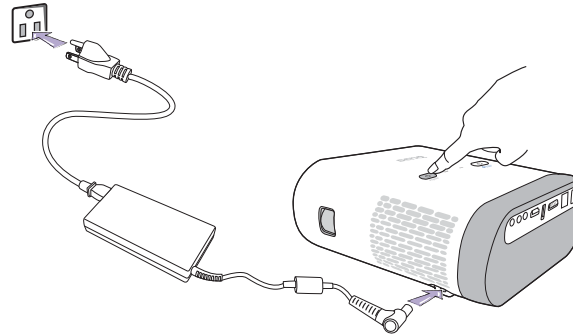

! Please use the supplied power cable to avoid possible dangers such as electric shock and fire.

2. Connect any video equipment to the respective port on the rear of the projector. If you do not want to project video via such equipment but want to access the **BenQ Launcher**, you do not need to connect any video equipment.

! For more details on connection options, see [Connection on page 26](#).

3. Press  on the projector or  on the remote control to start the projector. As soon as the lamp lights up, the **POWER indicator light** flashes green and stays green when the projector is on.

The fans start operating, and a start-up image displays on the screen while it warms up; this process may take a few minutes. The projector does not respond to further commands while it is warming up.


4. If this is the first time you turn on the projector, the setup wizard appears to guide you through setting up the projector. If you have already done this, skip this step and move on to step 5.
 - Use the arrow keys (///) on your remote control to move through the menu items.

- Use **OK** to confirm the selected menu item.

 The Setup Wizard screenshots below are for reference only and may differ from the actual design.


Step 1:

Specify **Projector Position**.

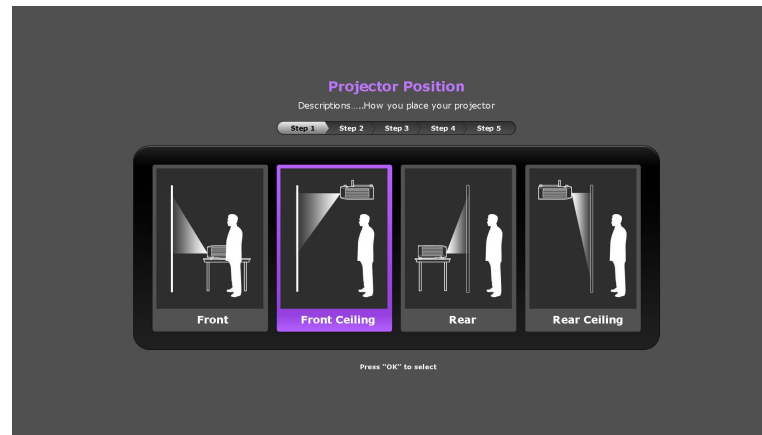


 For more information about projector position, see [Choosing a location on page 22](#).

Step 2:
Specify OSD **Language**.

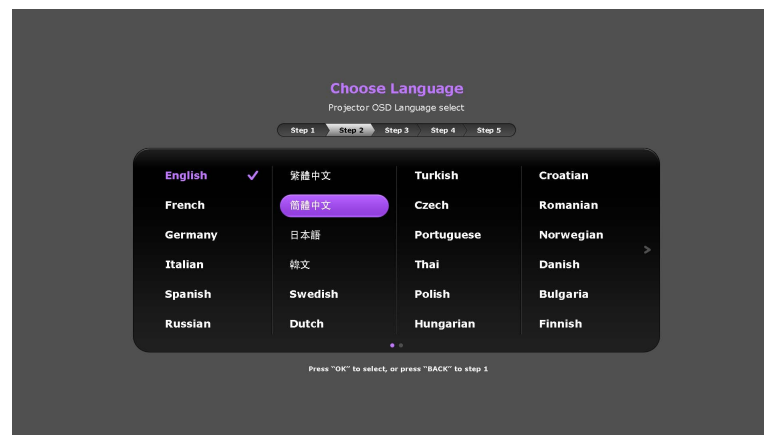


 Available languages may vary by the product supplied for your region and may be updated without prior notice.

Step 3:
Specify **Auto Keystone**.

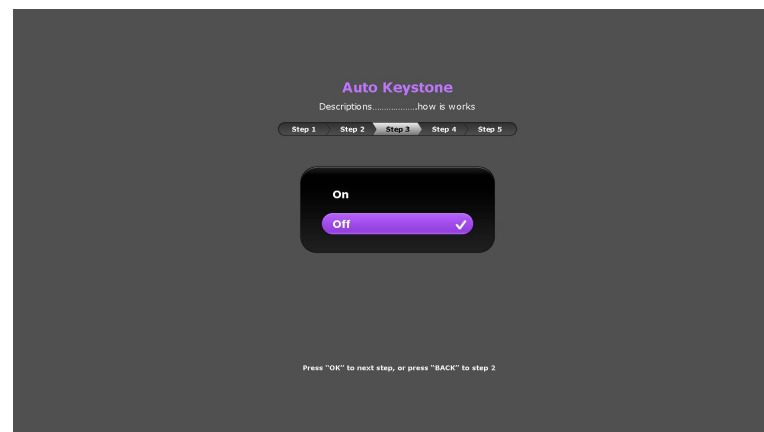



Step 4:
Specify **Auto Source**.

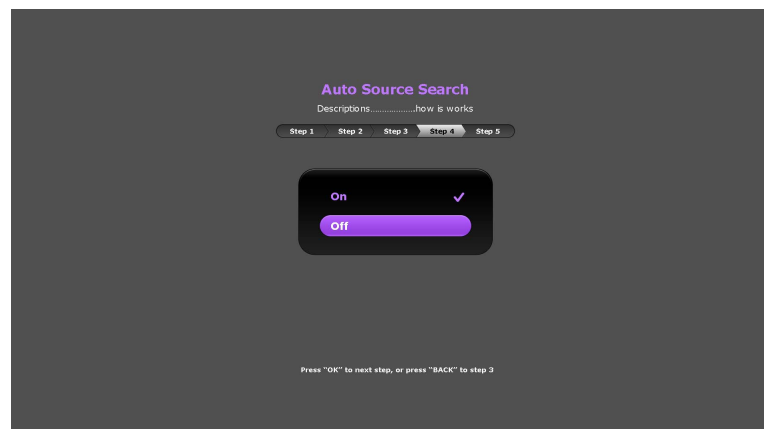

Step 5:
Specify the **Network Settings** (either connecting to a WLAN AP or using LAN connection).

! You may need to enter a password if you choose to connect to a **WLAN AP**.

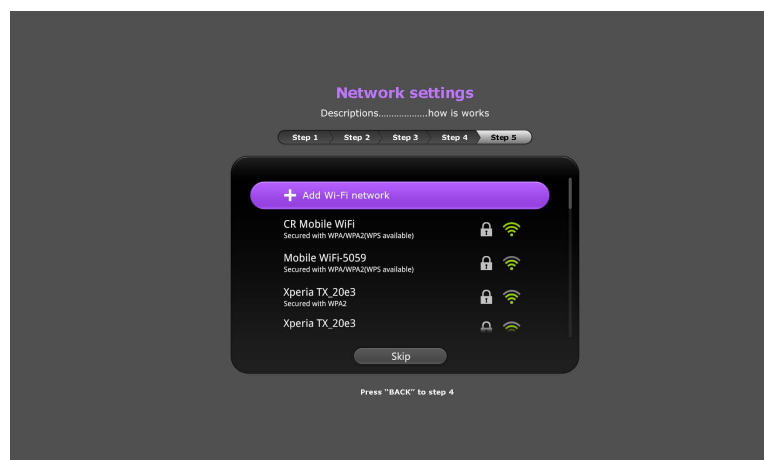

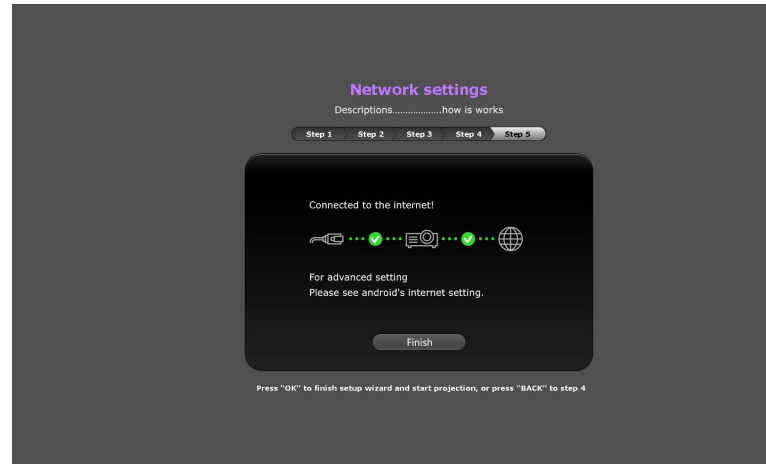


For more information about changing your network settings, see [Choosing a location on page 22](#).

Now you've completed the initial setup.

5. Switch on the connected equipment.
6. The projector starts to search for available input signals. The current input signal being scanned displays on the screen. If the projector is unable to detect a valid signal, the projector will automatically open the **BenQ Launcher**. You may press  on your remote control to select your desired input signal.
7. If the horizontal frequency of the input source exceeds the range supported by the projector, the **"No Signal"** message displays on the screen. It will remain on-screen until you change the horizontal frequency of the input source to an appropriate one.

Shutting down the projector

1. Press  on the projector or  on your remote control. The projector displays a shutdown confirmation message.
2. Press  or  a second time. The **POWER indicator light** flashes orange and the fans run for about two minutes to cool the lamp. The projector does not respond to any commands during the cooling process.
3. When the cooling process ends, the **POWER indicator light** will show a solid orange.

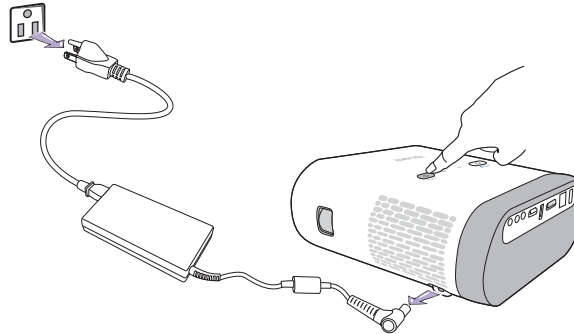

If the projector will not be used for an extended period, unplug the power cable from the power outlet.




- **Avoid turning on the projector immediately after turning it off as excessive heat may shorten lamp life.**
- **The actual lamp life may vary due to different environmental conditions and usage.**

Securing the projector

Using the security bar

The projector has to be installed in a safe place to prevent theft. It has a security lock bar located at the bottom of the projector which you can use to secure the projector via a variety of purchasable self-locking cables.

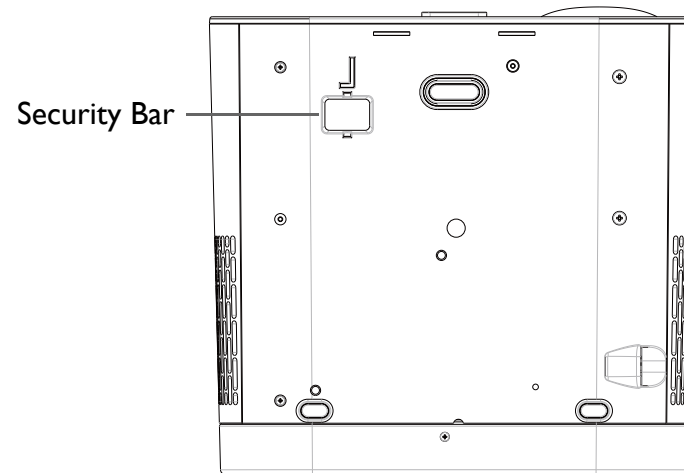

Selecting an input source


The projector can be connected to multiple equipment at the same time. However, it only displays one full screen at a time. When starting up, the projector automatically searches for the available signals.

If you want the projector to always automatically search for signals:

- Press the **MENU** button on your remote control.
- Under the OSD menu, go to the **Settings** menu, and then enable **Auto Source Search** (see [Auto Source Search on page 61](#)).

To select the video source:

1. Press  on your remote control to display the source selection bar.

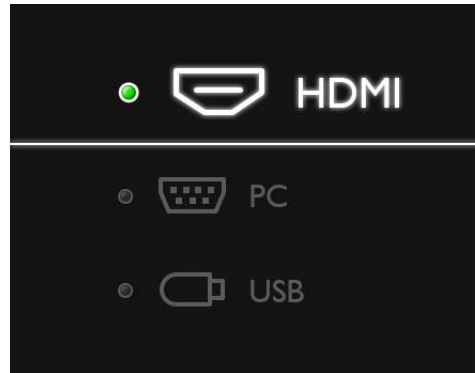

2. Press / until your desired signal is selected and press **OK**.

Once detected, the selected source information displays on the screen for seconds. If there are multiple pieces of equipment connected to the projector, repeat steps 1-2 to search for another signal.

 **The native display resolution of this projector is in a 16:10 aspect ratio. For best display picture results, you should select and use an input signal which outputs at this resolution. Any other resolutions will be scaled by the projector depending upon the Aspect Ratio setting, which may cause some image distortion or loss of picture clarity. See [Aspect Ratio](#) on page 59 for details.**

Adjusting the projected image


Adjusting the projection angle

The projector is equipped with a quick-release adjuster foot and a rear adjuster foot. These adjusters change the image height and projection angle.

To adjust the projection angle:

- Press the quick-release button and lift the front of the projector. Once the image is positioned as desired, release the quick-release button to lock the foot in position.
- To retract the foot, hold up the projector while pressing the quick-release button, then slowly lower the projector.


 **If the screen and the projector are not perpendicular to each other, the projected image becomes vertical trapezoidal. To correct this, see [Auto Keystone](#) on page 61 for details.**

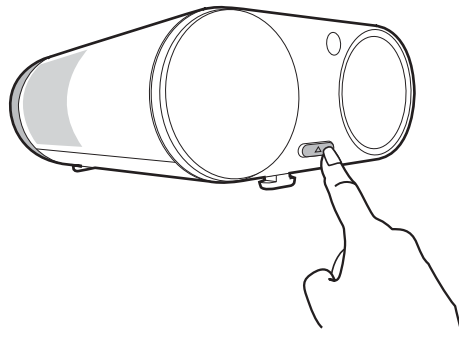

 **Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyes.**

Fine-tuning the image clarity

To sharpen the picture, rotate the focus ring on the projector.

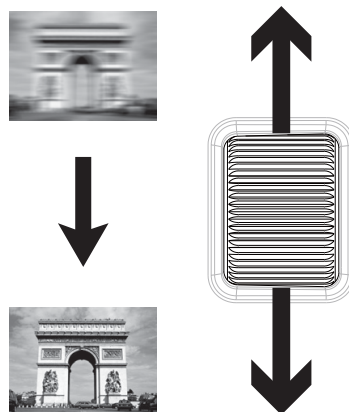


Correcting keystone

Keystoning refers to the situation where the projected image is noticeably wider at either the top or bottom. It occurs when the projector is not perpendicular to the screen.

You may correct this in the following way.

- **Using the OSD settings menu**
 - Select **Keystone**.

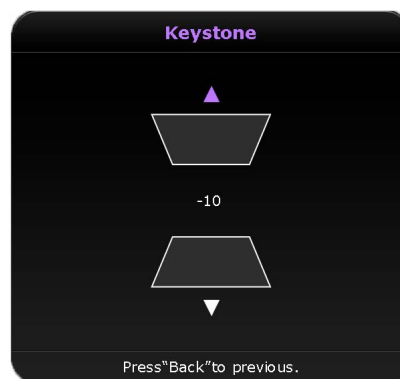




- To correct keystone at the top of the image, use ▲ on your remote control.
- To correct keystone at the bottom of the image, use ▼ on your remote control.
- When done, press **BACK** to save your changes and exit.

 You may only make these adjustments if **Auto Keystone** is disabled in the **Setting** menu, see [Auto Keystone on page 61](#) for details.


Wireless Internet Connection

To connect your projector to the internet, or to switch wireless internet connection:


1. Power on the projector.
2. Select **Settings** in the main menu of the BenQ Launcher interface.

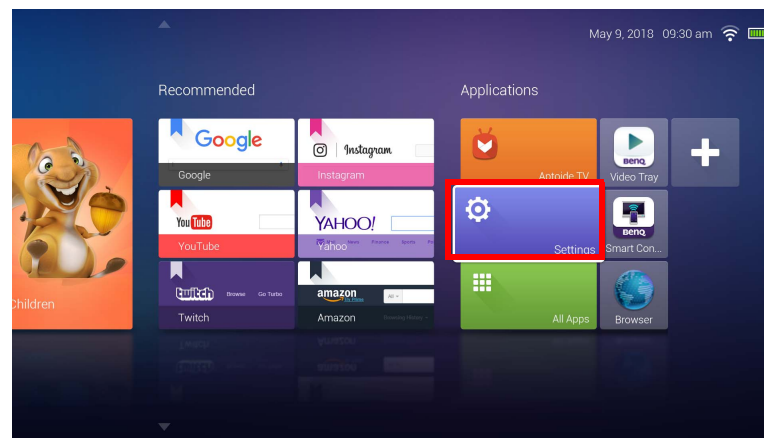


3. Select **Internet** in the **Settings** menu.

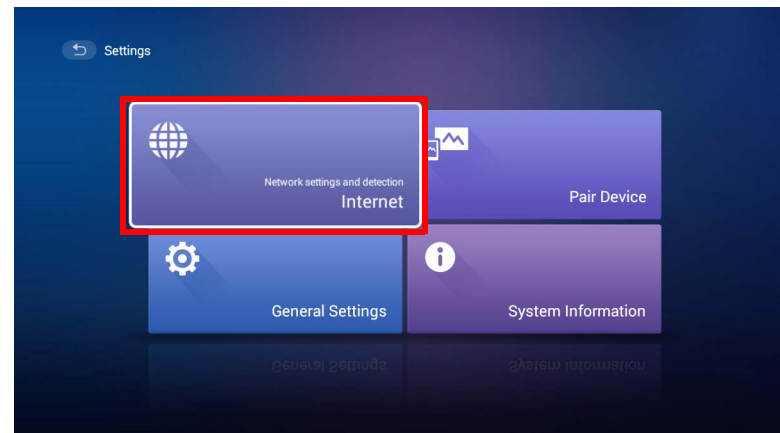


4. Select **Wireless** in the **Internet** menu.

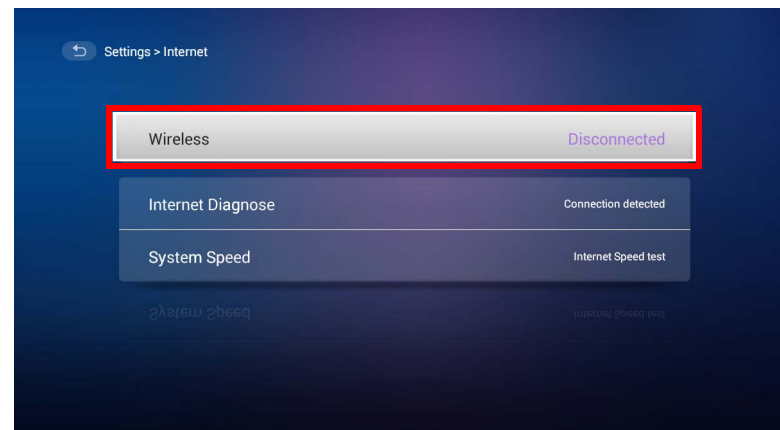

5. Select the SSID for the wireless AP you want to connect to.

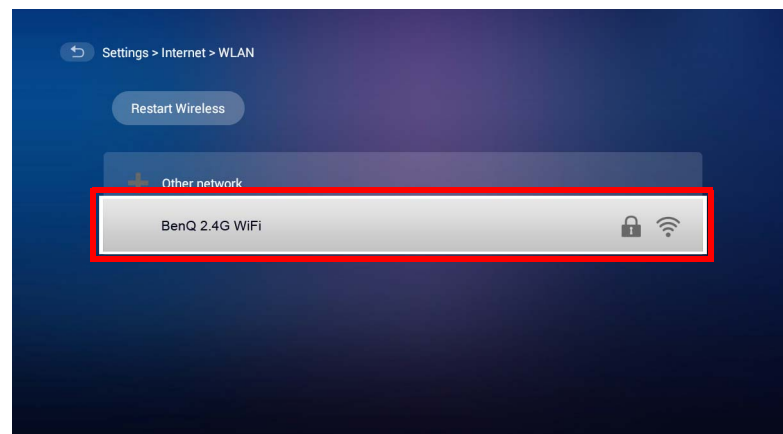


6. If you chose a secured SSID for the first time, a window appears to prompt you to enter the appropriate password. Press ◀/▶/▲/▼ on your remote control to select the corresponding keys on the virtual keypad to enter your password. After you have entered the password, select (1) **Next** and then (2) **Connect** to connect.

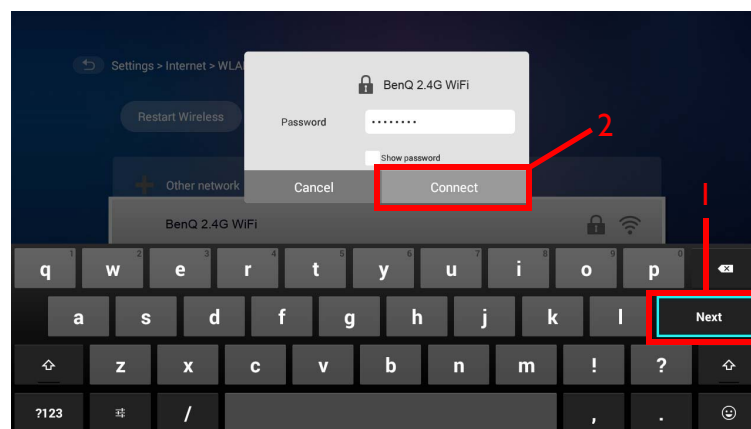

The password will be stored in the projector's memory. In the future, if you select the same SSID again, you will not be prompted to enter a password unless you delete the SSID from the projector's memory.

- Once you have successfully connected to the wireless AP a wireless connection icon will appear at the top right corner of the **BenQ Launcher** interface.

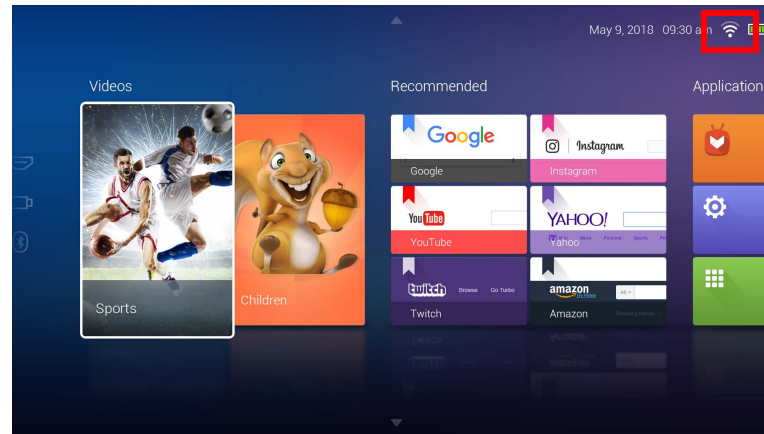

The Bluetooth speaker

Once the projector is properly connected to a power source and on standby mode you can use the speakers located at the rear of the projector to wirelessly broadcast audio from any Bluetooth-enabled mobile device.

 The **Bluetooth speaker and the projector cannot work simultaneously, in order to use the Bluetooth speaker the projector must be on standby mode.**

Pairing with the Bluetooth speaker

Pairing is the process by which your mobile device creates a connection to the Bluetooth speaker for the first time. Once both devices have been successfully paired each device will have the corresponding device's pairing information stored internally and both will be able to connect automatically when they are within ~10 meter range of each other and Bluetooth is enabled on both devices.

To pair your mobile device to the Bluetooth speaker:

- Press the Bluetooth button on the top of the projector.

 **If your projector is on when you press the Bluetooth button, a prompt will display asking you to confirm whether or not you want to activate the Bluetooth speaker and put the projector on standby, confirm this selection. After confirming the selection your projector will automatically be placed on standby.**

2. The LED indicator on the Bluetooth button will begin alternating between blue and orange flashes indicating that it is searching for nearby Bluetooth devices.
3. Enable Bluetooth on your mobile device and select your projector in the list of available Bluetooth connections.
4. The LED indicator on the Bluetooth button will light up blue indicating that your mobile device and the projector's Bluetooth speaker have successfully paired and connected.
5. When your mobile device and the projector's speaker have successfully connected, you can broadcast audio media from your mobile device via the Bluetooth speaker; the LED indicator on the Bluetooth button will breathe blue indicating that the Bluetooth speaker is in operation.

Once you have successfully paired your mobile device with the Bluetooth speaker, pairing information will be stored on both devices and a connection will automatically be made when Bluetooth is enabled on both devices and both devices are within range of each other.



- If you press the Bluetooth button to activate the Bluetooth speaker on the projector and do not make a pairing/connection within 10 minutes, the LED indicator on the Bluetooth button will light up orange, indicating that the Bluetooth speaker has failed to connect. Press the Bluetooth button again to re-activate the Bluetooth speaker.
 - If your mobile device has successfully connected to the Bluetooth speaker but has moved out of range of the Bluetooth signal or there has been a disturbance in the signal, the LED indicator on the Bluetooth button will alternate between blue and orange flashes indicating that it is searching for available Bluetooth connections. Once a connection is available again the speaker will automatically connect with the device.
-

Ending a Bluetooth connection

In cases where you want to disconnect a mobile device from the Bluetooth speaker but keep Bluetooth on, press the Bluetooth button on the top of the projector twice. After ending the Bluetooth connection, the LED indicator on Bluetooth button will alternate between blue and orange indicating that it is searching for nearby Bluetooth devices. In this instance you can create a connection between the speaker and another mobile device.

Deactivating the Bluetooth speaker

To deactivate the Bluetooth speaker and place Bluetooth on standby mode press and hold the Bluetooth button for over a second. Once you release the button, the LED indicator on the Bluetooth button will turn off indicating that it is in standby mode. At this point you may use the projection function on the projector.

BenQ Launcher


BenQ Launcher is a multimedia platform that integrates various applications ranging from entertainment, education, games, online shopping, TV, and other practical functions that caters to your everyday needs.

 Under **BenQ Launcher** mode, please use your remote control or an optional wireless keyboard/mouse for operating **BenQ Launcher** functions. The projector's control panel keys are limited to control projector functions.

Operating under the **BenQ Launcher** mode

Accessing the **BenQ Launcher** main page

When the projector is not projecting an image from a connected source be in **BenQ Launcher** mode by default. If the projector is projecting a source you can return to **BenQ Launcher** mode by pressing  on your remote control.

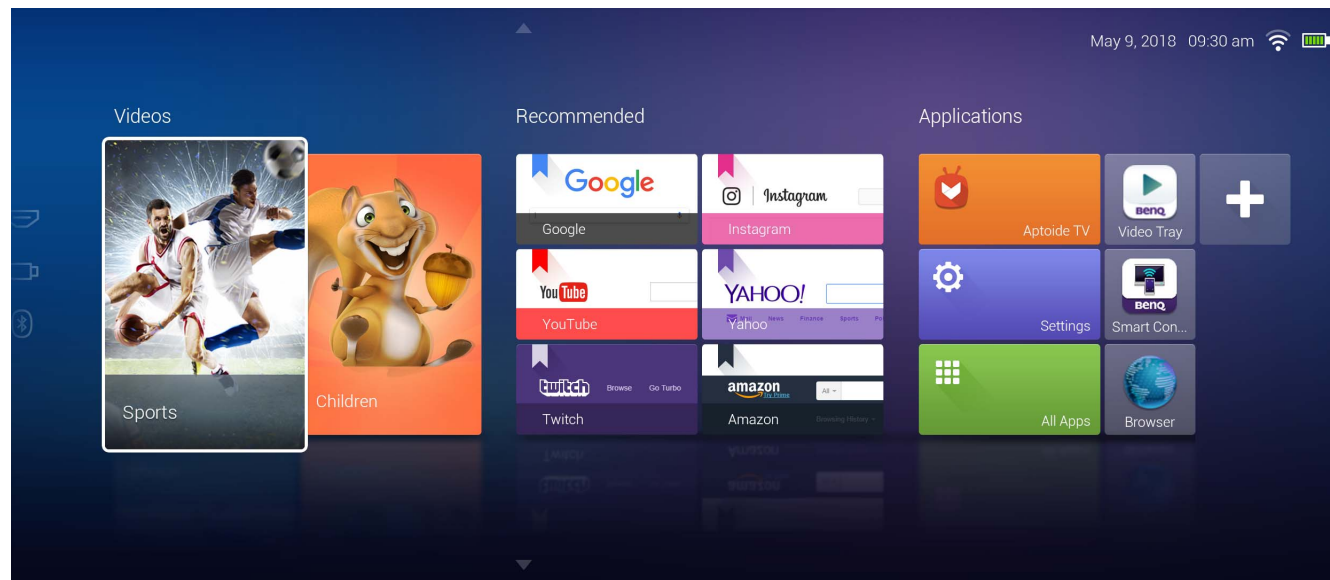

 Actual screen may vary based on your **BenQ Launcher** firmware version.

Using the **BenQ Launcher** applications

 Before you start using **BenQ Launcher** applications, make sure you are connected to the Internet via a wired or wireless connection. See [Using the All Apps page on page 52](#) for connection instructions.

The main menu of the **BenQ Launcher** mode features four main sections.

- **Videos section** - Shortcuts to direct streaming of sports or family shows.
- **Recommended section** - A rotating selection of recommended websites **BenQ** selects for users of the projector.
- **Applications section** - A group of apps that help you configure the **BenQ Launcher**, and access more apps from the **BenQ Launcher**. They include the following menus:
 - **Aptoide TV** - A marketplace which allows you to download and install various apps for the projector.
 - **Settings** - Basic settings for the projector and **BenQ Launcher**. See the [Using the BenQ Launcher Settings page on page 50](#) for more details.
 - **All Apps** - A menu of all apps installed on the projector.
- **App Shortcuts section** - A group of shortcuts to apps installed on the projector. See [Adding/Removing app shortcuts on page 52](#) for more details.

 Navigating to the very left side of the main page will bring up the input source list.

Navigating the **BenQ Launcher**:


1. From the **BenQ Launcher** main menu, press ◀/▶/▲/▼ on your remote control to select the desired service and press **OK**.
2. Follow on screen instructions for further operations.

Accessing the **BenQ Launcher** menus

Within the **BenQ Launcher** mode there are multiple menus that can be accessed pressing ◀/▶/▲/▼ on your remote control from the main menu.

Using the **Notification** menu and **Clean Tool** function

Press **▲** twice on your remote control from the main menu to choose either the **Notification** menu or **Clean Tool** function and press **OK** to enter the menu.

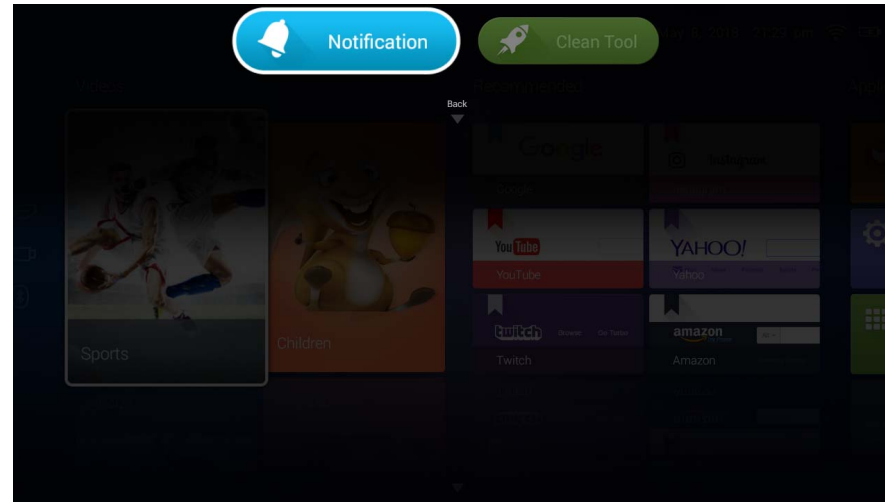


Actual screen may vary based on your **BenQ Launcher** firmware version.

- **Notification** - Select this menu to view any app or system related messages for the projector.
- **Clean Tool** - Select this function to clear the memory cache for the projector, which speeds up the performance of the **BenQ Launcher**.

Using the **History** menu

Press ▼ twice on your remote control from the main menu to view a list of recently opened apps.

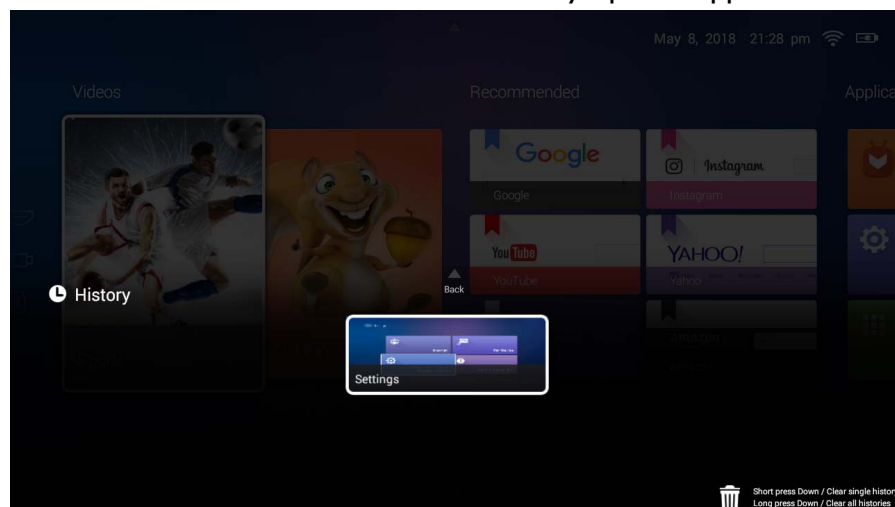

Actual screen may vary based on your BenQ Launcher firmware version.

To re-open an app from the **History** menu use ◀/▶ on your remote control to navigate to the app you want to re-open, and then press **OK** to re-open that app.


To clear an app from the **History** menu use ◀/▶ on your remote control to navigate to the app you want to clear, and then press ▼ to clear that app from the History menu, you can also press and hold ▼ to clear all apps from the **History** menu.

Using the input source menu

Press ◀ on your remote control from the main menu to access the input source menu. See [Selecting an input source on page 37](#) for more details on input sources.

Using the BenQ Launcher Settings page

The **Settings** page for the **BenQ Launcher** offers a set of configurations that allow you to make adjustments to the **BenQ Launcher** environment.

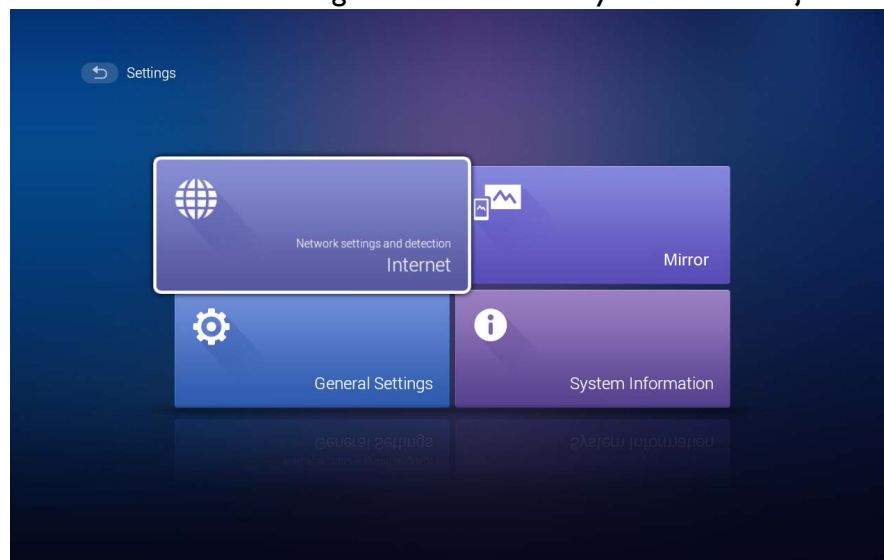

 Actual screen may vary based on your BenQ Launcher firmware version.

BenQ Launcher Settings overview

Submenu	Functions and Descriptions
Internet	Allows you to: • Connect to the Internet via an Ethernet connection. • Connect to the Internet via a wireless connection. See Using the All Apps page on page 52 for more details. • Test the speed of your Internet connection. • Perform Network diagnostic.

Submenu	Functions and Descriptions
Mirror	Allows you show the connected smart device's screen from the projector. To perform the screen mirroring function, follow the instructions in the connected device's user manual.
General Settings	Allows you to: • Change the language for the projector. • Change the language input type. • Change the wallpaper. • Change the name for the projector.  The name for the projector is the name that displays when pairing a Bluetooth device to the projector for use of the Bluetooth speakers. • Change the location where installed applications are stored.
System Information	Allows you to: • Manage the apps installed on the projector. • Upgrade the system to the latest version via the Internet or the connected media flash drive.  For each system upgrade, the system will send a notice message to remind all users to undergo system upgrade. Make sure you have stable wireless connection during system upgrades. • View the following system information: • Device ID • Device Name • Device Model • Build number • View operation instructions, such FAQ and user manual • Complete a factory data reset.  When you perform a factory data reset all the data stored in your projector will be deleted including apps, and media files. The settings for the projector will also revert back to the factory default settings.

Using the **All Apps** page

The **All Apps** page in the system section of the main page allows you view and launch all apps installed on the projector.

To open an app:

1. Press ◀/▶/▲/▼ on your remote control to select the App you want to launch and press **OK** to launch.

Adding/Removing app shortcuts

To add an app to the App Shortcuts section of the main page:

1. Select the **+** box from the App Shortcuts section on the main page, a menu of all the apps installed on your projector will be displayed.
2. From the list of apps press **OK** on your remote control to check the box for the apps you want to add to the App Shortcuts section, or press **OK** on your remote control un-check the box for the apps you want to remove from the App Shortcuts section.
3. Press ⇨ to confirm your selections and return to the **BenQ Launcher** main page.

Changing network settings

The **BenQ Launcher** allows you to change your wireless connection settings via the **WLAN Settings** menu within the **Internet** menu, which can be accessed by selecting the **Settings** menu from the System section in the main menu.

To change or connect to the Internet via Wireless LAN:

1. Ensure WLAN is enabled in the WLAN field.
2. Press ▲/▼ on your remote control to select the desired SSID for the Wireless AP you want to connect to and press **OK**.
3. When connecting to an SSID:
 - If you chose a secured SSID for the first time, a window appears to prompt you to enter the appropriate password. Press ◀/▶/▲/▼ on your remote control to select the corresponding keys on the virtual keypad to enter your password. After you have entered the password, select **Connect** and press **OK** to connect.

 The password will be stored in the projector's memory. In the future, if you select the same **SSID** again, you will not be prompted to enter a password unless you delete the **SSID** from the projector's memory.

Inputting text

Various menus within the **BenQ Launcher** may require that you input text. To input text in a text field:


1. Select the text field where you want to input text.
2. Press **OK** on your remote control, a full alphanumeric keyboard will appear on screen.
3. Press ◀/▶/▲/▼ on your remote control to navigate the keyboard, and press **OK** to select the letter/key/symbol you want to enter into the text field.
4. Press ⏏ at anytime to exit out of the keyboard.

Navigating the OSD menus


About the OSD menu

To let you make various adjustments or settings on the projector and the projected image, the projector provides a multilingual On-Screen Display (OSD) menu, which contains primary menu functions. (See [Using the OSD menu on page 56](#))

To access the OSD menu, press **MENU** on your remote control.

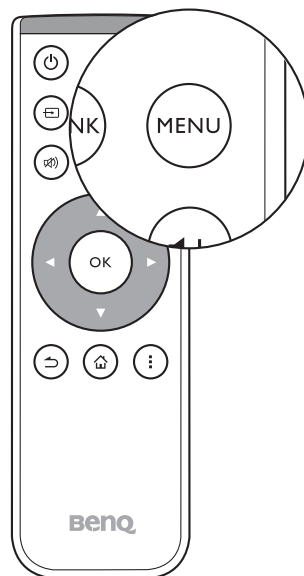


The following is the OSD menu:

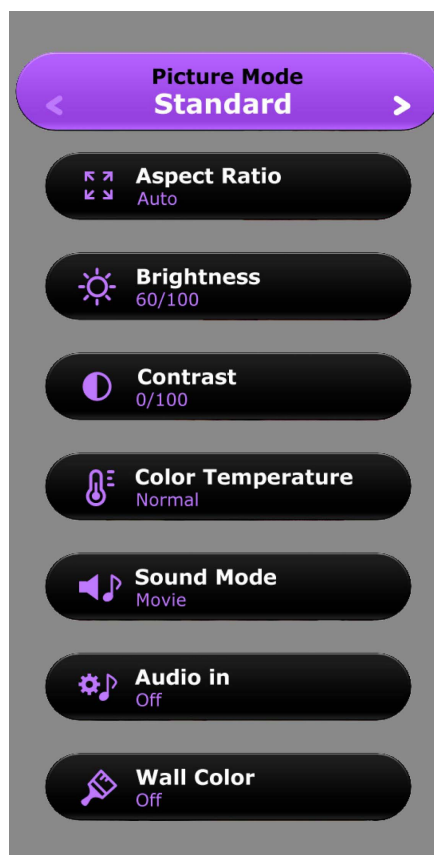

 Use the arrow keys (◀/▶/▲/▼) on your remote control to move through the menu items, and use **OK** to confirm the selected menu item.

The following is the **Settings** menu of the OSD menu:

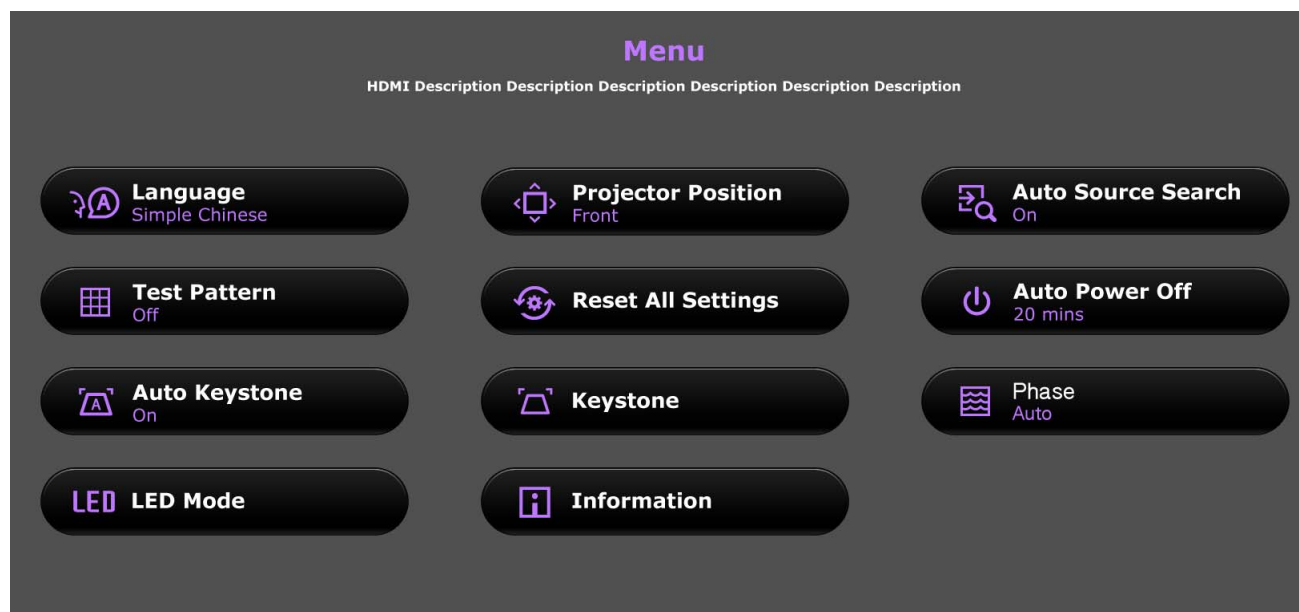

 When selecting items within the Setting menu press **OK**, and then (◀/▶/) to toggle through the options. Press ⇨ when you want to confirm your selection and return to navigating the Settings menu.

Using the OSD menu

The OSD menu provides primary menu functions. Available menu items may vary depending on the connected video sources or specified settings. Menu options that are not available will become grayed out.





To access the OSD menu, press **MENU** on your remote control.

- Use the arrow keys (◀/▶/▲/▼) to move through the menu items.
- Use **OK** to confirm the selected menu item.

 Certain menu items may appear only when input signals are connected and may not appear when no input signals are connected.

Menu	Submenus and descriptions	
Picture Mode	Selects a preset picture mode to suit your operating environment and input signal picture type. The preset picture modes are described as below:	
	Bright	Maximizes the brightness of the projected image. This mode is suitable for environments where extra-high brightness is required, such as using the projector in well lit rooms.
	Vivid	Being slightly brighter than Cinema mode, it is suitable for playing movies in rooms where there is a small amount of ambient light, eg. your bedroom.
	Game	Picture settings appropriate for playing video games.
	Cinema	Well-balanced color saturation and contrast with a low brightness level, this is most suitable for enjoying movies in a totally dark environment (as you would find in a commercial cinema).
	User	Recalls the customized settings.
Brightness	Adjusts the brightness of the picture. When adjusting this control the black areas of the picture appear just as black and details in the dark areas are visible. The higher the value the brighter the picture, while the lower the value, the darker the picture. 	
Contrast	Adjusts the degree of difference between dark and light in the picture. After adjusting the Brightness value, adjust Contrast to set the peak white level. The higher the value the greater the contrast. 	
Color	Adjusts the color saturation level -- the amount of each color in a video picture. Lower settings produce less saturated colors; setting to the minimum value makes the image black and white. If the image setting is too high, colors on the image will be overpowering, which makes the image unrealistic.	

Menu	Submenus and descriptions	
Color Temperature	The options available for color temperature* settings vary according to the connected input signal.  There are many different shades that are considered to be “white” for various purposes. One of the common methods of representing white color is known as the “color temperature” . A white color with a low color temperature appears to be reddish white. A white color with a high color temperature appears to have more blue in it.	
	Cool	Makes images appear bluish white.
	Normal	Maintains the normal colorings for white.
	Warm	Makes images appear reddish white.
Sound Mode	Selects a sound effect mode to your preference. The following preset sound modes are provided: Cinema, Music, and Game.	

    Menu	Submenus and descriptions
Aspect Ratio	The native display resolution of this projector is in a 16:10 aspect ratio. However you may use this function to display projected pictures in a different aspect ratio In the following illustrations, the black portions are inactive areas and the white portions are active areas.
	Auto Scales a picture proportionally to fit the projector's native resolution in its horizontal and vertical width. This makes the most use of the screen and maintains the aspect ratio of a picture. 
	Real The image is projected as its original resolution, and resized to fit within the display area. For input signals with lower resolutions, the projected image will display smaller than if resized to full screen. You could move the projector towards the screen to increase the image size if necessary. You may also need to refocus the projector after making these adjustments. 
	4:3 Scales the picture so that it is displayed in the center of the screen with a 4:3 aspect ratio. 
	16:9 Scales the picture so that it is displayed in the center of the screen with a 16:9 aspect ratio. 
	16:10 Scales the picture so that it is displayed in the center of the screen with a 16:10 aspect ratio. 

Menu	Submenus and descriptions	
Audio Input Source	Selects the audio input source for the projector. The following Audio Input Source options are provided.	
	LINE IN	Selects the audio device that is connected via the AUDIO IN jack at the rear of the projector as the audio input source.
	MIC IN	Selects the microphone that is connected via the MIC IN jack at the rear of the projector as the audio input source.
Wall Color	Adjusts the color settings of the image to suit the color of the wall on which the image is projected. The following Wall Color options are provided: Off , Light Yellow , Light Green , Blue , Pink , and Blackground .	
3D	This projector supports playing three-dimensional (3D) content transferred through your 3D-compatible video devices and contents, such as game consoles (with 3D game discs), 3D Blu-ray players (with 3D Blu-ray discs), 3D TV (with 3D channel), and so on. After you have connected the 3D video devices to the projector, wear the BenQ 3D glasses and make sure the power is on to view 3D contents.  When watching 3D contents: • The image may seem misplaced, however, this is not a product malfunction. • Take appropriate breaks when watching 3D content. • Stop watching 3D content if you feel fatigue or discomfort. • Keep a distance from the screen of about three times the effective height of the screen when watching 3D content. • Children and people with a history of oversensitivity to light, heart problems, or have any other existing medical condition should be refrained from watching 3D content. The default setting is Auto and the projector automatically chooses an appropriate 3D format when detecting 3D contents. If the projector cannot recognize the 3D format, manually choose a 3D mode according to your preference.  When this function is enabled: • The brightness level of the projected image decreases. • The Picture Mode cannot be adjusted.	
Settings	Press OK to enter its submenu. See below for more details.	
	 When selecting items within the Settings menu press OK, and then (◀/▶/) to toggle through the options. Press ⇨ when you want to confirm your selection and return to navigating the Settings menu.	
	Language	Sets the language for the On-Screen Display (OSD) menus and the BenQ Launcher .

Menu	Submenus and descriptions	
	Projector Position	The projector can be installed on in a high location or behind a screen. See Choosing a location on page 22 for details.
	Auto Source Search	Sets whether the projector searches automatically for input sources. Select On to enable the projector to scan for input sources until it acquires a signal. If the function is set to Off , the projector selects the last used input source.
	Test Pattern	Enable this function to display the grid test pattern, which helps you adjust the image size and focus so as to check if the projected image is free of distortion.
	Reset All Settings	Returns all settings to the factory preset values.  The following settings will still remain: Keystone , Language and Projector Position .
	Auto Power Off	Sets the time interval in which the projector will automatically power when inactive. The following Auto Power Off options are provided: Disable , 5 mins , 15 mins , and 20 mins .
	Auto Keystone	Enable this function to allow the projector to automatically adjust the keystone settings when powered on. See Correcting keystone on page 40 for more details.
	Keystone	Adjusts the keystone settings for the projected image. See Correcting keystone on page 40 for more details.  This function is only available when Auto Keystone is disabled.
	Phase	Adjusts the clock phase to reduce picture distortion.  This function is only available when PC is selected as the input source.
	LED Mode	Selects the projector LED lamp power from the following modes. • Normal: Provides full lamp brightness. • Economic: Reduces system noise and power consumption by 30%. If the Economic mode is selected, the light output will be reduced and result in darker projected pictures.

Menu	Submenus and descriptions	
	Information	Displays the following information about your projector. • Source: Displays the current signal source. • Picture Mode: Displays the current Picture Mode. • Resolution: Displays the native resolution of the input source. • Color System: Displays input system format. • Equivalent Lamp Hour: Displays the number of hours the lamp has been used. • Firmware Version: Displays the firmware version of your projector.  Some information is given only when certain input sources are in use.

Maintenance

Care of the projector

Your projector needs little maintenance. The only thing you have to do on a regular basis is keep the lens clean.

Never remove any parts of the projector. Contact your dealer or local customer service center if the projector fails to operate as expected.

Cleaning the lens

Clean the lens whenever you notice dirt or dust on the surface.

Before cleaning any part of the projector, turn it off using the proper shutdown procedure (see [Shutting down the projector on page 36](#)), unplug the power cable, and let it cool down completely.

- Use a canister of compressed air to remove dust.
- If there is dirt or smears, use lens-cleaning paper or moisten a soft cloth with lens cleaner and gently wipe the lens surface.
- Never use any type of abrasive pad, alkaline/acid cleaner, scouring powder, or volatile solvent, such as alcohol, benzene, thinner or insecticide. Using such materials or maintaining prolonged contact with rubber or vinyl materials may result in damage to the projector surface and cabinet material.

 **Never touch the lens with your finger or rub the lens with abrasive materials. Even paper towels can damage the lens coating. Only ever use a proper photographic lens brush, cloth, and cleaning solution. Do not attempt to clean the lens while the projector is switched on or is still hot from previous use.**

Cleaning the projector case

Before cleaning any part of the projector, turn it off using the proper shutdown procedure (see [Shutting down the projector on page 36](#)), unplug the power cable, and let it cool down completely.

- To remove dirt or dust, wipe the case with a soft, dry, lint-free cloth.
- To remove stubborn dirt or stains, moisten a soft cloth with water and a neutral detergent. Then wipe the case.

 **Never use wax, alcohol, benzene, thinner or other chemical detergents. These can damage the case.**

Storing the projector

To store the projector for an extended time:

- Make sure the temperature and humidity of the storage area are within the recommended range for the projector. Refer to Specifications or consult your dealer about the range.
- Retract the adjuster feet.
- Remove the batteries from the remote control.
- Pack the projector in its original packing or equivalent.

Transporting the projector

It is recommended that you ship the projector with its original packing or equivalent.

LED Lamp information

Getting to know the lamp hour

When the projector is in operation, the duration (in hours) of lamp usage is automatically calculated by the built-in timer.

To obtain the lamp hour information:

1. Press **MENU** and then use the arrow keys (◀/▶/▲/▼) to go to **Settings > Information** and press **OK**.
2. The **Equivalent Lamp Hour** information displays.
3. Press **BACK** to exit.

Extending lamp life

The projection lamp is an 500AL LED bulb which features an lamp life far beyond traditional bulbs, yet it is still a consumable item. To keep the lamp life as long as possible, you can change the following settings via the OSD menu.

To access the OSD menu, see [Using the OSD menu on page 56](#) for details.

Setting LED Mode

Setting the projector in Economic mode extends the lamp life.

LED mode	Description
Normal	100% lamp brightness
Economic	Economic mode dims the projector's LED lamp which will lower power consumption, extend the LED lamp life and reduce the projector's noise level. The reduced light output will result in darker projected pictures. If you set your projector to Economic mode choose Normal to return to the default normal mode.

1. Select **MENU > Settings > LED Mode** and press **OK**.
2. Press (**◀/▶**) to move to your desired mode, and press **OK**.
3. When done, press **⏏** to save your changes and exit.

Setting Auto Power Off

This function allows the projector to turn off automatically if no input source is detected after a set period of time.

1. Select **MENU > Settings > Auto Power Off** and press **OK**.
2. Press (**◀/▶**) to select a time period. If the preset time lengths are not suitable for your presentation, select **Disable**, and the projector will not automatically shut down.
3. When done, press **⏏** to save your changes and exit.

Indicators

There are two indicators which show the status of the projector and the Bluetooth speaker. Check the following information about the indicator lights. If there is anything wrong, turn the projector off and contact your dealer.

- **When the projector is in a normal state**

		TEMP	LED	Status & description
Orange	Off	Off	Off	Projector and Bluetooth in stand-by mode
Orange	Alternating Blue and Orange	Off	Off	• Projector is in stand-by mode • Bluetooth is in search mode, or Bluetooth has lost connection and is in search mode
Orange	Orange	Off	Off	• Projector is in stand-by mode • Bluetooth has been in search mode for over 10 minutes and has not made a connection
Orange	Blue	Off	Off	• Projector is in stand-by mode • Bluetooth is connected
Orange	Blue Breathing (1 sec intervals)	Off	Off	• Projector is in stand-by mode • Bluetooth speaker is operating
Green Flashing	Off	Off	Off	• Projector is powering up • Bluetooth is off
Green	Off	Off	Off	• Projector is operating • Bluetooth is off
Orange Flashing	Off	Off	Off	Projector is powering-down and in cooling mode

- **When the projector is undergoing system updates or in an abnormal state**

 Projector	 Bluetooth Speaker	TEMP	LED	Status & description
Red Flashing	Off	Red Flashing	Red Flashing	Projector is downloading a firmware update
Green	Off	Off	Red	Firmware is finished, once the indicators turn off the projector has returned to a normal state
Green	Off	Green	Red Flashing	Burn-in is OFF
Off	Off	Off	Red	The projector's lamp is not functioning properly
Red	Off	Red	Off	Fan 1 is not working properly
Red	Off	Red Flashing	Off	Fan 2 is not working properly
Green	Off	Red	Off	The projector's temperature is over the stage 1 limit
Green	Off	Red Flashing	Off	The projector's temperature sensor 1 is not working properly
Green Flashing	Off	Red	Off	The projector's temperature is over the stage 2 limit.
Green Flashing	Off	Red Flashing	Off	The projector's temperature sensor 2 is not working properly
Red Flashing	Off	Green	Off	The projector's temperature is over the stage 3 limit.
Red Flashing	Off	Green Flashing	Off	The projector's temperature sensor 3 is not working properly

Troubleshooting

Problem	Cause	Remedy
The projector does not turn on.	There is no power from the power cable.	Plug the power cable into the AC inlet on the rear of the projector, and plug the power cable into to the power outlet. If the power outlet has a switch, make sure that it is switched on.
	Attempting to turn the projector on again during the cooling process.	Wait until the cooling down process has completed.
No picture.	The video source is not turned on or connected correctly.	Turn the video source on and check that the signal cable is connected correctly.
	The projector is not correctly connected to the input source device.	Check the connection.
	The input source has not been correctly selected.	Select the correct source with the  key on the remote control.
Image is unstable.	The connection cables are not securely connected to the projector or the signal source.	Correctly connect the cables to the appropriate terminals.
Picture is blurred.	The projection lens is not correctly focused.	Adjust the focus of the lens using the focus ring.
	The projector and the screen are not aligned properly.	Adjust the projection angle and direction as well as the height of this projector if necessary.
	The lens cover is still closed.	Remove the lens cover.
Remote control does not work correctly.	The batteries are out of power.	Replace both of the batteries with new ones.
	There is an obstacle between the remote control and the projector.	Remove the obstacle.
	You are too far away from the projector.	Stand within 8 meters (26.2 feet) of the projector.

Problem	Cause	Remedy
3D content does not display correctly	The 3D glasses are out of battery.	Recharge the 3D glasses.
	The settings in the 3D menu are not set correctly.	Correctly set the settings in the 3D menu.
	Your Blu-ray Disc is not in 3D format.	Use a 3D Blu-ray Disc and try again.
	The input source has not been correctly selected.	Select the correct source with the SOURCE key on the projector or remote control.

Specifications

Projector specifications



All specifications are subject to change without notice.

Optical

Resolution

1280 (H) x 800 (V)

Display system

Mstar ARM A7 Quad-Core CPU

Lens F/Number

F = 1.6, f = 6.154 mm

Lamp Type

OSRAM PIW LED

Lamp Life (Normal/Economic)

20,000/30,000 hours



Lamp life results will vary depending on environmental conditions and usage.

Audio

Supported Audio (HDMI Mode)

- Supports LPCM, two audio channels
- Supported audio sampling rates: 32kHz, 44.1kHz, and 48kHz
- Supported audio bit rates: 16 bits, 20 bits, and 24 bits

Supported Audio (DVI/PC Mode)

Analog audio is supported through the PC audio input port

Electrical

Power supply

AC100–240V, 3.5 A, 50-60 Hz (Automatic)

Power consumption

75 W (Typical); < 0.5 W (Standby)

Mechanical

Weight

1.3 Kg (2.87 lbs)

Output terminals

Speaker

(Stereo) 5 watt x 2

Audio signal output

Audio jack x 1

USB

USB port 2.0 Type-A x 1

USB port 3.0 Type A x 1



The **USB** ports only output power, which allows you to charge attached **USB-enabled** devices (i.e. a smartphone, tablet, etc.).

Wireless

2.4G/5G, Dual band, 2T2R

2.4G

Frequency band: 2400 - 2483.5 MHz

Maximum Output Power: 18.22 dbm

5G

Frequency band: 5150 - 5250 MHz

Maximum Output Power: 17.18 dbm

Control

IR receiver x 2

Input terminals

Computer input

D-Sub 15-pin (female) x 1

Video signal input

SD/HDTV signal input

Digital - HDMI x 1

Audio signal input

Audio in

PC audio jack x 1

Microphone jack x 1

USB

USB port 2.0 Type-A x 1

USB port 3.0 Type A x 1

Environmental Requirements

Operating temperature

0°C–40°C at sea level

Operating relative humidity


10%–90% (without condensation)

Operating altitude

0–1499 m at 0°C–35°C

Dimensions (with adjustment feet not extended)

215.63 mm x 201.7 mm x 93.16 mm (W x D x H)

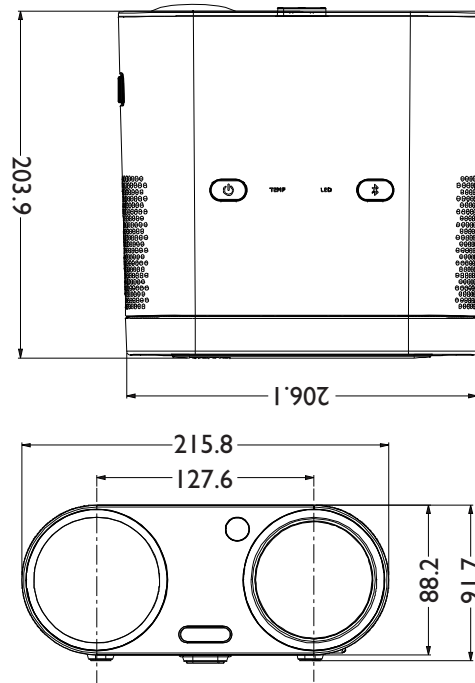

Timing chart

Supported timing for video input

Timing	Resolution	H. Frequency (KHz)	V. Frequency (KHz)	Dot Clock Frequency (MHz)
480i****	720 (1440) x 480	15.73	59.95	27
480p****	720 x 480	31.47	59.94	27
576i	720 (1440) x 576	15.63	50	27
576p	720 x 576	31.25	50	27
720/50p**	1280 x 720	37.5	50	74.25
720/60p*	1280 x 720	45.00	60	74.25
1080/24P**	1920x1080	27	24	74.25
1080/25P	1920x1080	28.13	25	74.25
1080/30P	1920x1080	33.75	30	74.25
1080/50i*****	1920x1080	28.13	50	74.25
1080/60i*****	1920x1080	33.75	60	74.25
1080/50p***	1920x1080	56.25	50	148.5
1080/60p***	1920x1080	67.5	60	148.5



***Supported timing for 3D signal with Frame Packing, Top-Bottom format, Side-by-Side, and Frame Sequential format.**

****Supported timing for 3D signal with Frame Packing, Top-Bottom format, and Side-by-Side format.**

*****Supported timing for 3D signal with Top-Bottom and Side-by-Side format.**

******Supported timing for 3D signal with Frame Sequential format.**

*******Supported timing for 3D signal with Side-by-Side format.**

Supported timing for PC input

Timing	Resolution	H. Frequency (KHz)	V. Frequency (KHz)	Dot Clock Frequency (MHz)
640 x 480	VGA_60	59.940	31.469	25.175
	VGA_72	72.809	37.861	31.500
	VGA_75	75.000	37.500	31.500
	VGA_85	85.008	43.269	36.000
800 x 600	SVGA_60	60.317	37.879	40.000
	SVGA_72	72.188	48.077	50.000
	SVGA_75	75.000	46.875	49.500
	SVGA_85	85.061	53.674	56.250
1024 x 768	XGA_60*	60.004	48.363	65.000
	XGA_70	70.069	56.476	75.000
	XGA_75	75.029	60.023	78.750
	XGA_85	84.997	68.667	94.500
1152 x 864	1152 x 864_75	75.00	67.500	108.000
1280 x 720	1280 x 720_60*	60	45.000	74.250
	1280 x 720_120	120	90.000	148.500
1280 x 768	1280 x 768_60	59.870	47.776	79.5
1280 x 800	WXGA_60*	59.810	49.702	83.500
	WXGA_75	74.934	62.795	106.500
	WXGA_85	84.880	71.554	122.500

Timing	Resolution	H. Frequency (KHz)	V. Frequency (KHz)	Dot Clock Frequency (MHz)
1280 x 1024	SXGA_60	60.020	63.981	108.000
	SXGA_75	75.025	79.976	135.000
1360 x 768	1360 x 768_60	60.015	47.712	85.500
1440 x 900	WXGA+_60	59.887	55.935	106.500
1400 x 1050	SXGA+_60	59.978	65.317	121.750
1600 x 1200	UXGA	60.000	75.000	162.000
1680 x 1050	1680 x 1050_60	59.954	65.290	146.250
640 x 480@67Hz	MAC13	66.667	35.000	30.240
832 x 624@75Hz	MAC16	74.546	49.722	57.280
1024 x 768@75Hz	MAC19	74.93	60.241	80.000
1152 x 870@75Hz	MAC21	75.06	68.68	100.00
1920 x 1080@60Hz	1920 x 1080_60 (Reduce Blanking)	60	67.5	148.5

 The timings showing above may not be supported for due to EDID file and VGA graphic card limitations. It is possible that some timings cannot be chosen.

Supported file formats

File type	File extension	Description
Documents	Adobe PDF 1.0 - 1.4 (.pdf)	
	MS PowerPoint 97 - 2010 (.ppt, .pptx)	
	MS Excel 95 - 2010, Office XP (.xls, .xlsx)	
	MS Word 95 - 2010, Office XP (.doc, .docx)	
Photos	JPG (.jpg, .jpeg), BMP (.bmp)	
Music	MP3, MP2, MP1, OGG, AAC, WAV	
Video	AVI (XVID, MJPEG)	
	DVIX (MJPEG, XVID)	
	DAT (MPEG I)	
	MPG (MPEG I)	
	MPEG (MPEG I)	
Subtitles	SRT (.srt)	• Subtitle files must be in the same directory as the video files. • The name of subtitle files must be the same as the name of the corresponding video files. • SRT only supports UTF (unicode 8).



Bit rate range: If the peak bit rate of a video file is larger than 10MB, it might cause video playback lag.

Regulatory Statements

For Assessment of Photobiological Safety of Lamps and Lamp Systems

Risk Group 1

According to the classification of photobiological safety of lamps and lamp systems, this product is Risk Group 1, IEC 62471-5:2015 and/or IEC 62471-1:2006 (if applicable).

Risk Group 2

1. According to the classification of photobiological safety of lamps and lamp systems, this product is Risk Group 2, IEC 62471-5:2015 (as Figure 1) and/or IEC 62471-1:2006 (Figure 2) (if applicable).
2. Possibly hazardous optical radiation emitted from this product
3. Do not stare at operating lamp. May be harmful to the eyes.
4. As with any bright source, do not stare into the direct beam.



Figure 1: IEC 62471-5:2015

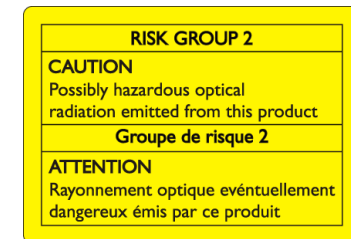


Figure 2: IEC 62471-1:2006

Risk Group 3

1. According to the classification of photobiological safety of lamps and lamp systems, this product is Risk Group 3, IEC 62471-5:2015 and/or IEC 62471-1:2006 (if applicable).
2. Possibly hazardous optical radiation emitted from this product
3. Do not look at operating lamp. Eye injury may result.
4. No direct exposure to the beam shall be permitted.

5. Operators shall control access to the beam within the hazard distance or install the product at the height that will prevent spectators' eyes from being in the hazard distance.
6. Hazard distance (HD): Refer to the user manual of the purchased model.

Battery caution (if product includes remote control)

- Do not put the remote control in the direct heat, humidity & Avoid fire.
- Do not drop the remote control.
- Do not expose the remote control to water or moisture, this could result in malfunction.
- Confirm there is no object between the remote control and the remote sensor of the product.
- When the remote control will not be used for an extended period, remove the batteries.

Battery safety notice (if product includes remote control)

The use of the wrong type of batteries may cause chemical leaks or explosion. Please note the following:

- Always ensure that the batteries are inserted with the positive and negative terminals in the correct direction as shown in the battery compartment.
- Different types of batteries have different characteristics. Do not mix different types.
- Do not mix old and new batteries. Mixing old and new batteries will shorten battery life or cause chemical leaks from the old batteries.
- When batteries fail to function, replace them immediately.
- Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately using a dry cloth, and replace the batteries as soon as possible.
- Due to varying storage conditions, the battery life for the batteries included with your product may be shortened. Replace them within 3 months or as soon as you can after initial use.
- There may be local restrictions on the disposal or recycling of batteries. Consult your local regulations or waste disposal provider.

FCC statement (for the United States only)

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

WiFi: 5.15-5.25GHz indoor use only

Accessibility Requirements for Rehabilitation Act of 1973, Section 508

BenQ's commitment to accessible products allows us to support government in making accessible technology choices. BenQ's LCD monitors and projectors are compliant with Section 508 guidelines by including the assistive features as below:

- BenQ's monitors have colored "Power" indicators. While the indicator shows green, it means that the monitor is using the full power. While the indicator shows yellow or amber, it means that the monitor is in suspend or sleep mode and is using less than 2watts of electricity.

- BenQ's monitors have a variety of settings of pre-programmed flicker-free timing to make the screen shown on the monitor readily accessible. The default timing setting is automatically turned on every time the monitor is powered up, and thus reduces the hassle of user intervention.
- BenQ's monitors and projectors have options for brightness and contrast adjustments that text and images could be displayed differently to meet the demands of the visually impaired. Other similar adjustments are also available by using the On-Screen Display (OSD) controls on the products.
- BenQ's multimedia monitors and projectors usually have one or two speakers for audio performance which allow users (including hearing impaired) to interact with the computer systems connected. Speaker controls are typically located on the front-panel.
- Firmware of BenQ's monitors and projectors contain unique product information that helps computer systems to identify BenQ products and activate their Plug-and-Play function when connected.
- All BenQ's monitors and projectors are compatible with the PC99 standard. For example, connectors are color-coded to help users easily connecting products to computer systems correctly.
- Some models of BenQ's monitors and projectors contain additional USB and DVI ports for connection to more devices such as a special headphone to assist the hearing impaired.
- All BenQ monitors and projectors come with user manuals on compact discs which could be easily read by commercial software such as Adobe Reader via a connected computer system. These documents are also available on the BenQ's web site (www.BenQ.com). Other types of documents may be available upon requests.
- BenQ's customer service provides answers and assistance to all our customers through phone calls, facsimiles, e-mails, or web sites.

RoHS Statement

This product is compliant to implemented RoHS (Restriction of Hazardous Substances) type regulations worldwide, including but not limited to China, India, Japan, Korea and European Union.

Turkey RoHS

EEE Yönetmeliğine Uygundur Elektrikli Ve Elektronik Eşyalarda Bazı Zararlı Maddelerin Kullanımının Sınırlanmasına Dair Yönetmelik

Ukraine RoHS

України ТЕХНІЧНИЙ РЕГЛАМЕНТ обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні (від 3 грудня 2008 р. N 1057): Обладнання відповідає вимогам Технічного регламенту обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні

India RoHS

Restriction on Hazardous Substances statement(India)

This product complies with the "India" E-waste Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or PolyBrominated Diphenyl Ethers in concentrations exceeding 0.1 weight% and 0.01 weight for cadmium except for exemptions set in Schedule 2 of the Rule.

Vietnam RoHS

Công ty BenQ tuyên bố rằng tất cả các sản phẩm mang nhãn hiệu BenQ được thiết kế và sản xuất phù hợp với Thông tư 30/2011/TT-BCT của Việt Nam về việc hạn chế các chất độc hại và nồng độ tối đa của chất độc cho phép trong các vật liệu đồng nhất (ngoại trừ các trường hợp miễn trừ được liệt kê trong Thông tư này)

IC statement (for Canadian users)

This Class B digital apparatus complies with Canadian ICES-3 (B).

Cet appareil numérique de la classe A est conforme à la norme NMB-3(B) du Canada.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

For UK only

- The mains lead (power cable) on the equipment comes with a moulded plug incorporating a fuse.
- The rating of the fuse is indicated on the pin face of the plug and, if it requires replacing, a fuse approved by ASTA or BSI to BS 1362 of the same rating must be used.
- If the plug has a detachable fuse cover, remember to place the fuse cover back if you need to change the fuse.
- Do NOT use a plug without the fuse cover. If the fuse cover is missing, contact your nearest BenQ Customer Service Center for assistance.

CE DOC

DECLARATION OF CONFORMITY (English)

The device complies with the requirements set out in the Council Directives on the Approximation of the Laws of the Member States relating Electromagnetic Compatibility (2014/30/EU) and Low Voltage Directive (2014/35/EU) and Radio Equipment Directive (2014/53/EU), the Restriction of The Use of Certain Hazardous Substances in Electrical And Electronic Equipment Directive (2011/65/EU), Turkish EEE Directive; Turkish ErP (Decision 2010/643); the Commission Regulation (EC) No 1275/2008 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to eco-design requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment, and the Directive 2009/125/EC of the European parliament and of the council establishing a framework for the setting of eco-design requirements for energy-related products.

DÉCLARATION DE CONFORMITÉ (Français)

Cet appareil est conforme aux exigences énoncées dans les directives du Conseil sur le rapprochement des législations des États membres concernant la compatibilité électromagnétique (2014/30/CE) et la Directive basse tension (2014/35/CE), la Directive équipements radio (2014/53/EC), la directive relative à la limitation de l'utilisation de certaines substances dangereuses dans les équipements électriques et électroniques (2011/65/UE), la directive EEE turc, ErP turc (décision 2010/643), le règlement (CE) n° 1275/2008 mettant en œuvre la directive 2005/32/CE du Parlement européen et du Conseil en ce qui concerne les exigences d'écoconception pour le mode veille et arrêt de la consommation d'énergie électrique d'appareils électriques et électroniques et matériel de bureau, et de la Directive 2009/125/EC du Parlement européen et du Conseil établissant un cadre pour la fixation d'exigences en matière d'écoconception applicables aux produits liés à l'énergie.

DECLARACIÓN DE CONFORMIDAD (Español)

Este dispositivo cumple con los requisitos establecidos en las Directivas del Consejo sobre la Aproximación de las Leyes de los Estados Miembros en relación con la Directiva de Compatibilidad Electromagnética (2014/30/EC) y Directiva de Bajo Voltaje (2014/35/EC) y la Directiva de equipos de radio (2014/53/EC), la Directiva sobre la restricción del uso de ciertas sustancias peligrosas en equipos eléctricos y electrónicos (2011/65/UE), la directiva EEE turca; ErP turca (Decisión 2010/643); Reglamento (CE) n° 1275/2008 de la Comisión, por el que se desarrolla la Directiva 2005/32/CE del Parlamento Europeo y del Consejo en lo concerniente a los requisitos de diseño ecológico aplicables al consumo de energía eléctrica en los modos preparado y desactivado de los equipos eléctricos y electrónicos domésticos y de oficina y la Directiva 2009/125/EC del Parlamento Europeo y del Consejo por la que se instaure un marco para el establecimiento de requisitos de diseño ecológico aplicables a los productos relacionados con la energía.

KONFORMITÄTSERKLÄRUNG (Deutsch)

Dieses Gerät erfüllt die Voraussetzungen, welche in den Richtlinien zur Angleichung der Rechtsvorschriften der Mitgliedstaaten in Bezug auf elektromagnetische Kompatibilität (2014/30/EC), Niederspannungsrichtlinie (2014/35/EC), Richtlinie für Funkanlagen (2014/53/EC), Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten (2011/65/EU), Türkische EEE-Direktive, Türkische ErP (Entscheidung 2010/643), Kommissionreglementierung (EC) Nr. 1275/2008 zur Ausführung der Direktive 2005/32/EC des Europaparlamentes und des Rats für Öko-Design-Voraussetzungen für Stromverbrauch im Standby- und Aus-Modus von Elektro- und Elektronikgeräten für den Heim- und Bürogebrauch und die Direktive 2009/125/EC des Europaparlamentes und des Rats zur Etablierung eines Rahmens zum Aufstellen von Voraussetzungen für Öko-Designs für Energie verbrauchende Produkte aufgestellt wurden.

DICHIARAZIONE DI CONFORMITÀ (Italiano)

Il dispositivo è conforme con i requisiti esposti nel Consiglio Direttivo in materia di Approssimazione delle Leggi degli Stati Membri in relazione alla Compatibilità Elettromagnetica (2014/30/EC) e alla Direttiva basso voltaggio (2014/35/EC) e alla Direttiva sugli Apparati Radio (2014/53/EC), Direttiva sulla restrizione dell'uso di sostanze pericolose nelle apparecchiature elettriche ed elettroniche (RoHS) (2011/65/UE), Direttiva EEE turca, ErP turca (Decisione 2010/643), Regolamento della Commissione (EC) No 1275/ 2008 che implementa la Direttiva 2005/32/EC del Parlamento europeo e del Consiglio in merito ai requisiti di ecodesign per il consumo di alimentazione elettrica in modalità standby e spento per le apparecchiature elettriche domestiche e di lavoro, e la Direttiva 2009/ 125/EC del Parlamento europeo e del Consiglio che stabilisce la struttura dell'impostazione dei requisiti di ecodesign per prodotti basati su energia.

ЗАЯВЛЕНИЕ О СООТВЕТСТВИИ (Русский)

Это устройство соответствует требованиям Комиссии на основе законов государств-участников относительно электромагнитной совместимости (2014/30/EC), директиве для низковольтного оборудования (2014/35/EC) и Директива о радиооборудовании (2014/53/EC), Директивы по ограничению использования некоторых опасных веществ в электрическом и электронном оборудовании (2011/65/EU), Турецкой директивы EEE, Турецкой ErP (Решение 2010/643); Правил комиссии (EC) No 1275/2008 обеспечивающей выполнение Директивы 2005/32/EC Европейского Парламента и Совета относительно требований экодизайна для потребления энергии в режиме ожидания и в режиме отключения бытовым электрическим и электронным оборудованием и офисной техникой, и Директивой 2009/125/EC Европейского парламента и совета, установившего рамки для создания требований экодизайна для электроприборов.

KONFORMITETSDEKLARATION(Svenska)

Denna enhet uppfyller kraven i rådets direktiv om tillnärmning av medlemsstaternas lagstiftning om elektromagnetisk kompatibilitet (2014/30/EG) och lågspänningsdirektiv (2014/35/EG) och direktivet om radioutrustning (2014/53/EC), begränsning av användningen av vissa farliga ämnen i elektriska och elektroniska produkter (2011/65/EU), turkiskt EEE-direktiv, turkiskt ErP (beslut 2010/643); kommissionsbestämmelse (EG) nr. 1275/2008 med

implementering av direktiv 2005/32/EG i Europaparlamentet och rådet för att fastställa krav på ekodesign för standby- och av-läge för strömförbrukning i elektriska och elektroniska hushålls- och kontorsapparater, och Europaparlamentets och rådets direktiv 2009/125/EG om upprättande av en ram för att fastställa krav på ekodesign för energirelaterade produkter.

VERKLARING VAN OVEREENSTEMMING (Nederlands)

Dit apparaat voldoet aan de vereisten van de Richtlijn van de Raad betreffende de onderlinge aanpassing van de wetgevingen van de lidstaten inzake elektromagnetische compatibiliteit (2014/30/EG) en de Richtlijn betreffende Lage spanningen (2014/35/EG) en de Richtlijn betreffende Radioapparatuur (2014/53/EG), betreffende de beperkingen van het gebruik van bepaalde gevaarlijke stoffen in elektrische en elektronische apparatuur (2011/65/EU), Turkse EEE Richtlijn, Turkse ErP (Bepaling 2010/643), Verordening (EG) nr. 1275/2008 tot vaststelling van uitvoeringsbepalingen van Richtlijn 2005/32/EC van het Europees Parlement en de Raad, wat betreft voorschriften inzake ecologisch ontwerp voor het elektriciteitsverbruik van elektrische en elektronische huishoud- en kantoorapparatuur in de stand-by-stand en de uit-stand, en Richtlijn 2009/125/EC van het Europees Parlement en de Raad betreffende de totstandbrenging van een kader voor het vaststellen van eisen inzake ecologisch ontwerp voor energierelateerde producten.

Oświadczenie zgodności (Polski)

To urządzenie jest zgodne z wymaganiami ustalonymi Dyrektywą Rady o zbliżeniu przepisów prawnych państw członkowskich dotyczących kompatybilności elektromagnetycznej (2014/30/EC), dyrektywą niskiego napięcia (2014/35/EC), dyrektywa w sprawie urządzeń radiowych (2014/53/EC), dyrektywą ograniczenia stosowania niektórych niebezpiecznych substancji w wyposażeniu elektrycznym i elektronicznym (2011/65/UE), turecką dyrektywą EEE, turecką ERP (decyzja 2010/643), rozporządzeniem komisji (WE) nr 1275/2008 w sprawie wykonania dyrektywy 2005/32/WE Parlamentu Europejskiego i Rady w odniesieniu do wymogów dotyczących ekoprojektu dla zużycia energii przez elektryczne i elektroniczne urządzenia gospodarstwa domowego i urządzenia biurowe w trybie czuwania i wyłączenia oraz dyrektywą 2009/125/EC, ustanawiającą ogólne zasady ustalania wymogów dotyczących ekoprojektu dla produktów związanych z energią.

PROHLÁŠENÍ O SHODĚ (Čeština)

Toto zařízení odpovídá požadavkům stanoveným ve směrnici Rady o sblížení právních předpisů členských států týkajících se elektromagnetické kompatibility (2014/30/ES), ve směrnici týkající se nízkonapěťových zařízení (2014/35/ES), ve směrnici o rádiových zařízeních (2014/53/ES), ve směrnici o omezení používání některých nebezpečných látek v elektrických a elektronických zařízeních (2011/65/EU), v turecké směrnici EEE, turecké ErP (rozhodnutí 2010/643); v nařízení Komise (ES) č. 1275/2008, kterým se provádí směrnice 2005/32/ES Evropského parlamentu a Rady týkající se požadavků na ekodesign z hlediska spotřeby elektrické energie u elektrických a elektronických zařízení v pohotovostním režimu a ve vypnutém stavu určených pro domácnosti a kanceláře a ve směrnici Evropského parlamentu a Rady 2009/125/ES o stanovení rámce pro určení požadavků na ekodesign výrobků spojených se spotřebou energie.

UYUM BEYANI (Türkçe)

Bu aygıt Üye Ülkelerin Yasalarının Yakınlaştırılması bağlamında Konsey Direktifleri dahilinde getirilen gereklilikler, Elektromanyetik Uyumluluk (2014/30/EC) ve Düşük Voltaj Direktifi (2014/35/EC) ve Radyo Ekipmanı Direktifi (2014/53/EC), Elektrikli ve Elektronik Aletlerde Tehlikeli Maddelerin Kullanımıyla İlgili Sınırlamalar Direktifi (2011/65/EU)'i, Türkiye EEE Direktifi, Türkiye ErP (Karar 2010/643); Avrupa Parlamentosu ve Konseyinin elektrikli ve elektronik ev aletleri ve büro ekipmanlarının bekleme ve kapalı moddayken elektrik tüketimleriyle ilgili eko-tasarım gereklilikleri bağlamında yayınlamış olduğu 2005/32/EC numaralı Direktifin uygulanmasıyla ilgili Komisyon Tüzüğü (EC) No 1275/2008 ve Avrupa Parlamentosu ve Konseyinin enerji sarfiyatıyla ürünlerin eko-tasarım gerekliliklerinin düzenlenmesi bağlamında bir çerçeve çizen 2009/125/EC numaralı Direktifiyle uyumludur.

DECLARAÇÃO DE CONFORMIDADE (Português)

O dispositivo está conforme aos requisitos definidos pelas Directivas do Conselho sobre a Aproximação das Leis dos Estados-Membros relativamente à Compatibilidade Electromagnética (2014/30/CE) e Directiva de Baixa Tensão (2014/35/CE) e Directiva relativa aos equipamentos de rádio (2014/53/CE), a restrição do uso de determinadas substâncias perigosas em equipamentos eléctricos e electrónicos (2011/65/EU), Directiva Turca EEE, ErP Turca (Decisão 2010/643), Regulamento da Comissão (EC) nº. 1275/2008 que implementa a Directiva 2005/32/EC do Parlamento Europeu e do Conselho relativamente aos requisitos de eco-design para consumo de energia eléctrica no modo de suspensão e desligado de equipamentos eléctricos e electrónicos domésticos e de escritório, e a Directiva 2009/125/EC do Parlamento Europeu e do Conselho, que estabelece uma base para a definição dos requisitos de eco-design para produtos relacionados com energia.

MEGFELELŐSÉGI NYILATKOZAT (Magyar)

Az eszköz megfelel a Bizottság tagállamainak harmonizált jogszabályainak az elektromágneses kompatibilitás (2014/30/EK) és a kisfeszültségű direktíva (2014/35/EK), a rádióberendezésekre vonatkozó irányelv (2014/53/EK), továbbá az elektromos eszközök egyes veszélyesanyag-felhasználását korlátozó direktíva (2011/65/EU), a török EEE direktíva; a török ErP (2010/643 döntés); a 1275/2008 sz. Bizottsági szabályozás (EK) (amely az Európai Parlament és a Bizottság 2005/32/EK sz. direktíváját vezeti be az elektromos és elektronikus háztartási és irodai eszközök környezetbarát kialakításával, környezetbarát készletléti és kikapcsolt állapotbeli fogyasztásával kapcsolatban) és az Európai Parlament és a Bizottság 2009/125/EK sz. direktíva (amely az energiahasználó termékek környezetbarát kialakítási követelményeinek keretrendszerét határozza meg) tekintetében.

ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ (Български)

Това устройство отговаря на изискванията, установени от директивите на Европейския съюз за хармонизиране на законодателствата на държавите-членки в областта на електромагнитната съвместимост (2014/30/ЕС), Директивата за ниско напрежение (2014/35/ЕС), Директивата за радиосъоръженията (2014/53/ЕС), Директивата за ограничаване на употребата на някои опасни вещества в електрическото и електронното оборудване (2011/65/ЕС), турската EEE Директива, турската платформа ErP

(Решение 2010/643), Регламент № 1275/2008 на Комисията (ЕС) по изпълнение на Директива 2005/32/ЕС на Европейския парламент и на Съвета относно изискванията по отношение на екологичния дизайн за потребление на електроенергия в режим на готовност и изключено положение от електронни и електрически домакински уреди и офис оборудване и Директива 2009/125/ЕС на Европейския парламент и на Съвета, които установяват работна рамка за създаване на изисквания за екологичен дизайн насвързани с енергетиката продукти.

DEKLARACIJA O USKLAĐENOSTI (Hrvatski)

Uređaj je u skladu sa zahtjevima navedenim u Direktivama komisije za usklađivanje zakona država članica u svezi elektromagnetske kompatibilnosti (2014/30/EC) i Direktivom za niske napone (2014/35/EC) i Direktiva za radio uređaje (2014/53/EC), Direktivi o ograničenju upotrebe određenih opasnih tvari u električnoj i elektroničkoj opremi (2011/65/EU), EEE direktivi Turske, Turkskim ErP (Odluka 2010/643); Propisu komisije (EC) br. 1275/2008 o implementiranju Direktive 2005/32/EC Europskog parlamenta i Vijeća po pitanju ekodizajnerskih zahtjeva za električnu potrošnju u mirovanju i isključenom stanju električne i elektroničke opreme u kućanstvu i uredima, te Direktive 2009/125/EC Europskog parlamenta i Vijeća koja uspostavlja radni okvir za određivanje ekodizajnerskih zahtjeva za energetske proizvode.

DECLARAȚIE DE CONFORMITATE (Română)

Acest dispozitiv este în conformitate cu prevederile stabilite prin Directivele Consiliului privind apropierea legislațiilor statelor membre cu privire la compatibilitatea electromagnetică (2014/30/CE) și Directiva privind joasa tensiune (2014/35/CE) și Directiva privind echipamentele hertziene (2014/53/CE), Directiva de Restricție a Utilizării Anumitor Substanțe Periculoase în Echipamentele Electrice și Electronice (2011/65/UE), Directive EEE pentru Turcia; ErP Turcia (Decizia 2010/643); Regulamentul Comisiei (EC) Nr. 1275/2008 de implementare a Directivei 2005/32/EC a Parlamentului European și a Consiliului cu privire la elementele de design ecologic pentru consumul energetic al echipamentelor electrice și electronice de uz casnic și de birou în modurile de așteptare și oprire și Directiva 2009/125/EC a Parlamentului European și a Consiliului pentru stabilirea unui cadru de lucru în îndeplinirea cerințelor de design ecologic al produselor cu consum energetic.

OVERENSSTEMMELSESERKLÆRING (Dansk)

Apparatet er i overensstemmelse med kravene i Rådets direktiver om indbyrdes tilnærmelse af medlemsstaternes lovgivning om elektromagnetisk kompatibilitet (2014/30/EF) og lavspændingsdirektivet (2014/35/EF) og direktiv om radioudstyr (2014/53/EF), begrænsning af anvendelsen af visse farlige stoffer i elektrisk og elektronisk udstyr (2011/65/EU), Tyrkisk EEE direktiv; Tyrkiet - effektiv retningsudstrålet effekt (beslutning 2010/643), Kommissionens forordning (EF) nr. 1275/2008 om gennemførelse af direktiv 2005/32/EF af Europa-Parlamentets og Rådets direktiv med hensyn til krav til miljøvenligt design for elforbrug i standbytilstand og slukket tilstand af elektrisk og elektronisk husholdnings- og kontorudstyr, og direktiv 2009/125/EF af Europa-Parlamentet og Rådet om rammerne for fastlæggelse af krav til miljøvenligt design af energiforbrugende produkter.

VAATIMUSTENMUKAISUUSVAKUUTUS (Suomi)

Laite täyttää sähkömagneettista yhteensopivuutta koskevan EMC-direktiivin (2014/30/EY), pienjännitedirektiivin (2014/35/EY), radiolaitedirektiivi (2014/53/EY) ja vaarallisten aineiden käytön rajoittamista sähkö- ja elektroniikkalaitteissa koskevan direktiivin (2011/65/EU), turkkilaisen EEE-direktiivin; turkkilaisen ErP:n (päättös 2010/643); komission asetuksen (EY) N:o 1275/2008 direktiivin 2005/32/EY täytäntöönpanosta kotitalouksissa ja toimistoissa käytettävien sähkö- ja elektroniikkalaitteiden lepovirtakulutuksen ekologista suunnittelua koskevien vaatimusten osalta sekä Euroopan parlamentin ja neuvoston direktiivin 2009/125/EY energiaan liittyvien tuotteiden ekologiselle suunnittelulle asetettavien vaatimusten puitteista.

SAMSVARSERKLÆRING (Norwegian)

Enheten er i samsvar med de angitte kravene i EU-direktivene om tilnærming av lovene i medlemslandene angående elektromagnetisk kompatibilitet (2014/30/EC), lavspenning (2014/35/EC) og radioutstyrsdirektiv (2014/53/EC), begrensningen i bruk av visse farlige substanser i EU-direktivet for elektrisk og elektronisk utstyr (2011/65/EU), det tyrkiske EEE-direktivet, tyrkisk ErP (beslutning 2010/643), EU-kommisjonsforskrift nr. 1275/2008 som iverksetter EU-parlamentets og EU-rådets direktiv 2005/32/EC angående øko-designkrav til strømforbruk i beredt og avslått elektrisk og elektronisk utstyr til hjem og kontor og EU-parlamentets direktiv 2009/125/EC som etablerer et rammeverk for etableringen av øko-designkrav for energirelaterte produkter.

WEEE Directive

WEEE directive (English)



WEEE



Battery

Disposal of Waste Electrical and Electronic Equipment and/or Battery by users in private households in the European Union.

This symbol on the product or on the packaging indicates that this can not be disposed of as household waste. You must dispose of your waste equipment and/or battery by handling it over to the applicable take-back scheme for the recycling of electrical and electronic equipment and/or battery. For more information about recycling of this equipment and/or battery, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Directive DEEE (Français)



WEEE



Pile

Mise au rebut des déchets d'équipements électriques et électroniques et/ou des piles par les particuliers dans l'Union Européenne.

Ce symbole figurant sur le produit ou l'emballage signifie que celui-ci ne peut pas être jeté avec les ordures ménagères. Vous devez mettre vos déchets d'équipements et/ou piles au rebut en le déposant dans un point de collecte prévu à cet effet afin que les équipements électroniques et électriques et/ou piles soient recyclés. Pour de plus amples informations sur le recyclage de ce produit et/ou cette pile, veuillez prendre contact avec l'organisme local compétent, le service d'élimination des déchets ménagers ou le point de vente du produit. Le recyclage des matériaux aidera à conserver les ressources naturelles et à s'assurer qu'ils seront recyclés d'une façon que cela protège la santé humaine et l'environnement.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Directiva WEEE (Español)



WEEE



Batería

Residuos de aparatos eléctricos y electrónicos y/o batería por parte de los usuarios domésticos privados en la Unión Europea.

El símbolo que muestra el producto o el embalaje indica que no puede ser desechado como residuo doméstico. Para desechar el equipo siga las directrices aplicables para el reciclaje de equipo eléctrico y electrónico y/o batería.

Para obtener más información sobre el reciclaje de este equipo y/o batería, póngase en contacto con el ayuntamiento, la tienda donde adquirió el equipo o el servicio de recogida de basuras. Al reciclar materiales ayudamos a conservar el medio natural y a garantizar el reciclaje de manera que proteja la salud y el medioambiente.

Recycling information: See <http://www.benq.com/support/recycle> for details.

WEEE-Richtlinie (Deutsch)



WEEE



Batterie

Entsorgung von Elektro- und Elektronikgeräten bzw. Batterien in Privathaushalten der Europäischen Union.

Das Symbol auf der Produktverpackung zeigt an, dass dieses Gerät nicht mit dem normalen Hausmüll entsorgt werden darf. Sie sind verpflichtet, Ihre Altgeräte bzw. Batterien entsprechend der geltenden Bestimmungen für die Wiederverwertung von Elektro- und Elektronik-Altgeräten bzw. Batterien zu entsorgen. Weitere Informationen über das Recycling dieses Geräts bzw. Batterie erhalten Sie von Ihren örtlichen Behörden, Ihrem Fachhändler oder der lokalen Rücknahmestelle. Fachgerechtes Wertstoffrecycling spart nicht nur wertvolle Ressourcen, sondern schützt auch Umwelt und Gesundheit.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Direttiva WEEE (Italiano)



WEEE



Batteria

Smaltimento di apparecchi elettrici ed elettronici e/o batterie nell'Unione Europea da parte di utenti privati.

Questo simbolo sul prodotto o sulla confezione indica che l'articolo non può essere smaltito come i normali rifiuti domestici. È necessario smaltire le apparecchiature e/o batterie secondo quanto previsto dagli schemi di recupero per il riciclaggio di apparecchiature elettriche e elettroniche e/o batterie. Per ulteriori informazioni sul riciclaggio di questo apparecchio e/o batteria, contattare l'ente della propria città, il negozio dove è stato acquistato l'apparecchio o il proprio servizio di smaltimento rifiuti domestici. Il riciclaggio dei materiali contribuisce a ridurre il consumo di risorse naturali e assicura che i materiali siano riciclati tutelando la salute umana e l'ambiente.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Директива WEEE (Русский)



WEEE



Аккумулятор

Утилизация электрического и электронного оборудования и/или аккумуляторов населением в Европейском союзе.

Данный символ на изделии или на упаковке означает, что данное изделие запрещается утилизировать наравне с бытовыми отходами. Вы должны сдавать все пришедшие в негодность устройства и/или аккумуляторы для утилизации на специальный пункт сбора электрических или электронных устройств и/или аккумуляторов. Для получения подробных сведений о переработке этого оборудования и/или аккумуляторов обратитесь в местные органы управления, магазин, в котором был приобретен продукт, или службу по сбору бытовых отходов. Переработка материалов поможет сохранить природные ресурсы и обеспечит безопасность для здоровья людей и окружающей среды.

Recycling information: See <http://www.benq.com/support/recycle> for details.

WEEE-direktiv (Svenska)



WEEE



Batteri

Riktlinjer för kassering av avfall som utgörs av eller innehåller elektriska eller elektroniska produkter och/eller batteri, gällande hushåll i EU.

Den här symbolen kan finnas på produkten eller på förpackningen och betyder att produkten inte kan kasseras som vanligt hushållsavfall. När du vill kassera produkten och/eller batteri måste du lämna in den på det ställe som avses för återvinning av elektriska eller elektroniska produkter och/eller batteri. Om du vill ha mer information om återvinning av den här typen av utrustning och/eller batteri kan du vända dig till din kommun, ditt inköpsställe eller till den lokala sophämtningen. Genom att återvinna materialet i produkten kan vi spara på naturtillgångarna och försäkra oss om att produkten återvinns på ett sätt som skyddar människors hälsa och miljön.

Recycling information: See <http://www.benq.com/support/recycle> for details.

WEEE-richtlijn (Nederlands)



WEEE



Accu

Wegwerpen van elektrische en elektronische apparatuur en/of accu's door huishoudens in de Europese Unie.

Dit symbool geeft aan dat het product niet met het huishoudelijke afval kan worden aangeboden. U moet afgedankte apparatuur en/of accu's wegwerpen door ze in te leveren op de inzamelpunten voor elektrische en elektronische apparatuur en/of accu's. Voor meer informatie over het hergebruik van deze apparatuur en/of de accu neemt u contact op met uw gemeente, de winkel waar u de apparatuur hebt gekocht of de milieudienst van de gemeente. Door het recyclen van de materialen worden natuurlijke hulpbronnen behouden en helpt u de natuur en de volksgezondheid te beschermen.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Dyrektywa WEEE (Polski)



WEEE



Bateria

Utylizacja odpadów z urządzeń elektrycznych i elektronicznych lub baterii przez użytkowników prywatnych w Unii Europejskiej.

Ten symbol na urządzeniu lub opakowaniu oznacza, że nie może być ono utylizowane razem z odpadami domowymi. Zużyty sprzęt lub baterie należy przekazać do odpowiedniego punktu zwrotu sprzętu elektrycznego i elektronicznego w celu wtórnego przetworzenia. Szczegółowe informacje dotyczące wtórnego przetwarzania tych urządzeń lub baterii można uzyskać, kontaktując się z lokalną administracją, sprzedawcą lub lokalnym przedsiębiorstwem oczyszczania. Przetwarzanie wtórne materiałów pomaga w zachowaniu surowców naturalnych i utylizacji w sposób przyjazny dla ludzkiego zdrowia i środowiska.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Směrnice WEEE (Čeština)



WEEE



Baterie

Likvidace vyřazených elektrických a elektronických zařízení nebo baterií v domácnostech uživatelů v Evropské unii.

Tento symbol na výrobku nebo na jeho obalu znamená, že dané zařízení nelze vyhodit do běžného domovního odpadu. Vyřazené elektrické nebo elektronické zařízení nebo baterii je nutno zlikvidovat odevzdáním k recyklaci v souladu s platným plánem recyklace elektrických a elektronických zařízení nebo baterií. Další informace o recyklaci tohoto zařízení nebo baterií získáte u místních úřadů, v obchodě, kde jste výrobek zakoupili nebo u společnosti, která se zabývá likvidací domovního odpadu.

Recyklace materiálů pomáhá chránit přírodní zdroje a zaručuje likvidaci výrobku způsobem, který je šetrný k lidskému zdraví a životnímu prostředí.

Recycling information: See <http://www.benq.com/support/recycle> for details.

WEEE direktifi (Türkçe)



WEEE



Pil

Avrupa Birliği ülkelerinde özel ev eşyası kullanıcıları tarafından Elektrikli ve Elektronik Cihazların ve/veya Pillerin Atılması.

Ürün yada ambalaj üzerindeki bu sembol, bunun evsel atık olarak işlem görmemesi gerektiğini ifade etmektedir. Atık cihazınızı ve/veya pilleri, elektrikli ve elektronik cihazların ve/veya pillerin geri dönüşümü için uygulanabilir geri alma şemasına göre ele alarak atmalısınız. Bu cihazın ve/veya pillerin geri dönüşümü hakkında daha fazla bilgi edinmek için lütfen cihazı satın aldığınız yerel bayiye veya dükkana yada ev eşyası uzaklaştırma servisine başvurun. Materyallerin geri dönüşümü, doğal kaynakların korunmasını ve insan sağlığına ve çevreye zarar verilmeksizin geri dönüştürülmesini güvence etmektedir.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Directiva REE (Português)



WEEE



Bateria

Eliminação de Resíduos de Equipamentos Eléctricos e Electrónicos e/ou Baterias por particulares na União Europeia.

Este símbolo no produto ou na embalagem indica que não pode ser eliminado como lixo doméstico. Deverá eliminar os resíduos dos seus equipamentos e/ou baterias entregando-os nos pontos de recolha aplicáveis para reciclagem de equipamentos de equipamentos eléctricos e electrónicos e/ou baterias. Para mais informações sobre a reciclagem destes equipamentos e/ou baterias, contacte a sua câmara municipal, a loja onde adquiriu o equipamento ou serviço de recolha de lixo doméstico. A reciclagem de materiais contribuirá para a conservação dos recursos naturais e assegura que são reciclados de forma a proteger a saúde humana e o ambiente.

Recycling information: See <http://www.benq.com/support/recycle> for details.

WEEE irányelv (Magyar)



WEEE



Akkumulátor

Az Európai Unióban a háztartások elektromos és elektronikus hulladékainak és/vagy az akkumulátorok kezeléséről szóló irányelv.

A terméken vagy a csomagoláson ez a szimbólum azt jelzi, azt a háztartási hulladékoktól külön kell kezelni. A készüléket és/vagy az akkumulátorokat az elektronikus és elektromos hulladékokra és/vagy az akkumulátorokra érvényes újrahasznosítási rendszer keretein belül kell leadni újrahasznosításra. A készülék és/vagy akkumulátorok újrahasznosítás céljára való begyűjtéséről bővebb információt kaphat a helyi önkormányzatnál, a vásárlás helyén vagy a háztartási hulladékot elszállító szolgáltatójánál. Az anyagok újrahasznosításra való begyűjtése hozzájárul a természeti erőforrások megőrzéséhez és biztosítja, hogy a hulladékok szelektálása az emberi egészséget és a környezetet védő módon történjék.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Директива WEEE (Български)



WEEE

Изхвърляне на отпадъчно електрическо и електронно оборудване и/или батерии от потребители в частни домакинства в Европейския съюз.



Батерия

Този символ върху продукт или неговата опаковка указва, че не може да бъде изхвърлян заедно с останалите домакински отпадъци. Трябва да изхвърлите отпадъчното оборудване и/или батерии, като го предадете в подходящ пункт за събиране и рециклиране на електрическо и електронно оборудване и/или батерии. За повече информация относно рециклирането на този уред и/или батерии, моля, свържете се със съответния офис във Вашия град, с магазина, от който сте закупили продукта или с местната служба за събиране на битови отпадъци. Рециклирането на материалите ще спомогне за запазване на природните ресурси и ще осигури рециклиране по запазващ човешкото здраве и околната среда начин.

Recycling information: See <http://www.benq.com/support/recycle> for details.

WEEE direktiva (Hrvatski)



WEEE

Odlaganje u otpad električnih i elektroničkih uređaja i/ili baterija iz kućanstava u Europskoj uniji.



Baterija

Ovaj simbol na proizvodu ili pakiranju naznačuje da se ovaj proizvod ne može odbaciti s kućnim otpadom. Uređaje za otpad i/ili baterije trebate odložiti u otpad u skladu s pravilima povrata, zbrinjavanja i reciklaže električnih i elektroničkih uređaja i/ili baterija. Više informacija o recikliranju ovog uređaja i/ili baterije, potražite u vašem mjesnom uredu, u trgovini gdje ste kupili proizvod ili u službi koja prikuplja vaš kućni otpad. Recikliranje materijala pomoći će očuvanju prirodnih resursa i osigurati recikliranje na način koji štiti ljudsko zdravlje i prirodni okoliš.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Directiva WEEE (Română)



WEEE



Baterie

Evacuarea deșeurilor echipamentelor electrice și electronice și/sau bateriilor de către utilizatorii casnici din Uniunea Europeană.

Acest simbol de pe produs sau de pe ambalaj indică că acest produs nupoate fi evacuat ca deșeu casnic. Trebuie să evacuați deșeurile de echipamente și/sau bateria prin predarea conform schemei de preluare pentru reciclare a componentelor electrice și electronice și/sau a bateriilor. Pentru informații suplimentare privind reciclarea acestui echipament și/sau a bateriei, contactați primăria orașului dvs., magazinul de unde ați achiziționat echipamentul sau serviciul de salubritate pentru deșeuri menajere. Reciclarea acestor materiale va ajuta la păstrarea resurselor naturale și asigură că sunt reciclate într-o modalitate care protejează viața și mediul oamenilor.

Recycling information: See <http://www.benq.com/support/recycle> for details.

Οδηγία WEEE (Ελληνικά)



WEEE



Μπαταρία

Απόρριψη άχρηστου ηλεκτρολογικού και ηλεκτρονικού εξοπλισμού ή/και μπαταριών από χρήστες σε νοικοκυριά εντός της Ευρωπαϊκής Ένωσης.

Το παρόν σύμβολο στο προϊόν ή τη συσκευασία υποδηλώνει ότι αυτό δεν μπορεί να απορριφθεί με τα οικιακά απορρίμματα. Πρέπει να φροντίζετε για την απόρριψη του άχρηστου εξοπλισμού σας ή/και μπαταριών, παραδίδοντάς τα σε αρμόδιο φορέα παραλαβής με σκοπό την ανακύκλωση ηλεκτρολογικού και ηλεκτρονικού εξοπλισμού ή/και μπαταριών. Για περισσότερες πληροφορίες σχετικά με την ανακύκλωση του παρόντος εξοπλισμού ή/και μπαταριών, παρακαλούμε απευθυνθείτε στο αρμόδιο γραφείο του δήμου, στο κατάστημα όπου αγοράσατε τον εξοπλισμό ή στην υπηρεσία αποκομιδής οικιακών απορριμμάτων. Η ανακύκλωση των υλικών θα βοηθήσει την εξοικονόμηση φυσικών πόρων και θα διασφαλίσει ότι αυτά ανακυκλώνονται με τρόπο που προστατεύει την ανθρώπινη υγεία και το περιβάλλον.

Recycling information: See <http://www.benq.com/support/recycle> for details.

WEEE-direktiv (Dansk)



WEEE



Batteri

Bortskaffelse af elektrisk og elektronisk affald og/eller batterier, anvendt i husholdningen i EU.

Dette symbol på produktet eller på emballagen angiver, at det ikke kan bortskaffes som husholdningsaffald. Du skal bortskaffe affald (udstyr) og/eller batterier ved at levere det/dem til relevante genbrugscentre for elektrisk og elektronisk udstyr og/eller batterier. For yderligere oplysninger om genbrug af dette udstyr og/eller batterier skal du kontakte kommunen, butikken hvor du købte udstyret eller dit affaldsselskab. Genbrugsmaterialer hjælper med at bevare naturlige ressourcer og sikre, at det genbruges på en måde, der beskytter sundheden og miljøet.

Oplysninger om genbrug: Se <http://www.benq.com/support/recycle> for yderligere oplysninger.

WEEE-direktiivi (Suomi)



WEEE



Akku

Sähkö- ja elektroniikkaromun ja/tai akkujen hävittäminen yksityisissä kotitalouksissa Euroopan unionin alueella.

Tämä merkintä tuotteessa tai sen pakkauksessa osoittaa, että tuotetta ei voida hävittää kotitalousjätteenä. Romulaitteet ja/tai akut tulee hävittää viemällä ne erilliskeräyspaikkaan sähkö- ja elektroniikkaromun ja/tai akkujen kierrätystä varten. Saat lisätietoja tämän laitteen ja/tai akun kierrättämisestä ottamalla yhteyttä alueesi jätehuoltoon, kotitalousjätteen kierrätyskeskukseen tai laitteen ostopaikkaan. Materiaalien kierrätys auttaa säilyttämään luonnonvaroja ja varmistamaan, että jätteet kierrätetään tavalla, joka suojelee ihmisten terveyttä ja ympäristöä.

Kierrätystiedot: Lisätietoja <http://www.benq.com/support/recycle>.

WEEE-direktiv (Norwegian)



WEEE



Batteri

Kassering av elektrisk og elektronisk utstyr og/eller batterier for brukere i private husholdninger i EU.

Dette symbolet på produktet eller på innpakningen angir at det ikke kan kasseres sammen med vanlig husholdningsavfall. Du må kaste utstyret og/eller batteriet ved å overlevere det til det aktuelle retursenteret for resirkulering av elektrisk og elektronisk utstyr og/eller batteriet. Hvis du vil ha mer informasjon om resirkulering og/eller batteriet, vennligst kontakt lokale myndigheter, butikken der du kjøpte utstyret eller en resirkuleringsstasjon. Resirkulering av materialer vil bidra til å bevare naturlige ressurser og sikre at det resirkuleres på en måte som beskytter menneskers helse og miljø.

Resirkuleringsinformasjon: Se <http://www.benq.com/support/recycle> hvis du vil ha detaljer.

For Mexico only (for RF module only)

El manual de usuario contendrá las siguientes leyendas o su equivalente en una posición notoria:

“La operación de este equipo está sujeta a las siguientes dos condiciones:

(1) es posible que este equipo o dispositivo no cause interferencia perjudicial y

(2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Korea Class B

사 용 자 안 내 문

이 기기는 가정용 (B 급) 으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적으로 하며 , 모든 지역에서 사용할 수 있습니다 .

한국에 해당 (RF 모듈이 포함된 제품의 경우)

해당 무선설비는 전파혼신 가능성이 있으므로 인명

안전과 관련된 서비스는 할 수 없음

日本専用です

VCCI (CLASS B)

この装置は、クラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをしてください。

この装置は、現在設置されている場所で妨害波の測定がされた情報技術装置であり、VCCI 協会の基準に適合しています。

従って、現在設置されている場所以外で使用する場合は、再び妨害波を測定し、VCCI に届け出をしなければなりません。

(RF モジュール付きの製品の場合)

電波法により 5GHz 帯は屋内使用に限ります。

電源についての安全対策

接地接続は必ず電源プラグを電源に接続する前に行ってください。また、接地接続を外す場合には必ず電源プラグを電源から切り離してから行って下さい。

同梱した電源コードセットは本機以外の電気機器で使用できません。

台湾区専用

若產品有無線 / 藍牙模組

本產品內含無線模組。若該無線模組支援 5GHz 頻帶，5.15GHz~5.25GHz 限於室內使用。

依低功率電波輻射性電機管理辦法要求

第 12 條經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第 14 條低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

使用電池的注意事項 (當產品附有遙控器時)

電池的使用方式或型號如果錯誤，可能會導致化學物質的洩漏或爆炸。請注意下列事項：

- 安裝電池時，請確認電池的正負極已依照電池室中所標示的方向正確安裝。
- 不同品牌與類型的電池 (例如碳鋅電池與鹼性電池) 具有不同的特性。請勿混合使用不同品牌與類型的電池。
- 當電池電量用盡時，請儘速更換新電池。換新電池時，請將全部電池一次換新。
- 長時間不使用遙控器時，請將電池從遙控器中取出。
- 請勿將新的和舊的電池混合使用。將新電池與舊電池混合使用會減短電池的使用壽命，或導致化學液從不良的電池中洩漏出來。
- 電池中洩漏出來的化學液可能會刺激皮膚並腐蝕金屬接點。假使有任何化學物質從電池中滲漏出來，請立即以乾布擦拭乾淨並更換電池。
- 耗盡的電池請依照相關之適用規章回收或丟棄。詳細資訊，請聯繫當地廢料管理機關。

台灣廢電池回收標誌



廢電池請回收

限用物質含有情況標示聲明

設備名稱：數位投影機						
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr+6)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
光機組件	○	○	○	○	○	○
電源元件	-	○	○	○	○	○
線材	○	○	○	○	○	○
電路板	-	○	○	○	○	○
塑膠組件	○	○	○	○	○	○
金屬件	-	○	○	○	○	○

風扇	○	○	○	○	○	○
包裝材料	○	○	○	○	○	○
配件	-	○	○	○	○	○
• 備考 1：“○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 • 備考 2：“-” 係指該項限用物質為排除項目。						

中国專用

电池安全注意事项 (当产品附有遥控器时)

使用错误类型的电池可能导致化学物质泄漏或爆炸。请遵循下列事项：

- 务必按照电池仓内的正极和负极标记以正确方向装入电池。
- 不同类型的电池具有不同的特性。请勿混用不同类型的电池。
- 请勿混用新旧电池。混用新旧电池会缩短电池使用时间或导致旧电池化学物质泄漏。
- 电池不能正常工作时，应立即更换它们。
- 电池泄漏的化学物质可能刺痛皮肤。如果电池泄漏出任何化学物质，应立即用干布擦拭干净，并尽快更换电池。
- 由于存放条件不同，电视随附的电池的使用时间可能缩短。在 3 个月内或在初次使用后尽快更换它们。
- 耗尽的电池请依照相关之适用规章回收或丢弃。详细信息，请联系当地废料管理机关。

WEEE 指令 (针对中国地区)

< 废弃电器电子产品回收处理管理条例 > 或 <China WEEE>

产品废弃时请交给当地有资质的回收单位处理。

< 废电池 >

本产品含有电池，废弃时请交给当地有资质的回收单位处理。

中国 RoHS



依据中国《电器电子产品有害物质限制使用管理办法》为控制和减少电子信息产品废弃后对环境造成的污染，促进生产和销售低污染电子信息产品，保护环境和人体健康，仅提供有关本产品可能含有有毒及有害物质如后：

部件名称	有毒有害物质或元素					
	铅及其化合物	汞及其化合物	镉及其化合物	六价铬化合物	多溴联苯（PBB）	多溴二苯醚（PBDE）
光机组件	O	O	O	O	O	O
电源组件	X	O	O	O	O	O
线材	O	O	O	O	O	O
电路板(*)	X	O	O	O	O	O
塑胶组件	O	O	O	O	O	O
金属件	X	O	O	O	O	O
风扇	O	O	O	O	O	O
包装材料	O	O	O	O	O	O
配件	X	O	O	O	O	O

*：电路板组件包括印刷电路板及其构成的零部件，如电阻、电容、集成电路、连接器等。

本表格依据 SJ/T 11364 的规定编制

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超过 GB/T 26572 规定的限量要求。

上表中打 "X" 的部件中，应功能需要，部分有害物质含量超出 GB/T 26572 规定的限量要求，但符合欧盟 ROHS 法规要求（属于豁免部分）。

有关中国《电器电子产品有害物质限制使用管理办法》之相关规定请参考信息产业部所公布之信息。