

**BenQ**

FP785

LCD Color Monitor

17.0" LCD Panel Size

User's Manual

# Welcome

## Copyright

Copyright © 2005 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

## Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of BenQ Corporation to notify any person of such revision or changes.

## Please follow these safety instructions for best performance, and long life for your monitor

### Power Safety

- The AC plug isolates this equipment from the AC supply.
- The power supply cord serves as a power disconnect device for pluggable equipment. The socket outlet should be installed near the equipment and be easily accessible.
- This product should be operated from the type of power indicated on the marked label. If you are not sure of the type of power available, consult your dealer or local power company.

### Care And Cleaning

- Cleaning. Always unplug your monitor from the wall outlet before cleaning. Clean the LCD monitor surface with a lint-free, non-abrasive cloth. Avoid using any liquid, aerosol or glass cleaners.
- Slots and openings on the back or top of the cabinet are for ventilation. They must not be blocked or covered. Your monitor should never be placed near or over a radiator or heat source, or in a built-in installation unless proper ventilation is provided.
- Never push objects or spill liquid of any kind into this product.

### Servicing

- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltages or other risks. If any of the above mentioned misuse or other accident such as dropping or mishandling occurs, contact qualified service personnel for servicing.

# Table of Contents



<b>Getting started</b>	<b>5</b>
<b>Getting to know your monitor</b>	<b>7</b>
Front View	7
Back View (1)	7
Back View (2): Locations of plugs & sockets	8
<b>How to install your monitor hardware</b>	<b>9</b>
Using the Monitor Mounting Kit (Optional)	11
Adjusting the viewing angle	12
<b>Getting the most from your BenQ monitor</b>	<b>13</b>
How to install the monitor on a new computer	14
How to upgrade the monitor on an existing computer	15
How to install on Windows XP systems	16
How to install on Windows 2000, ME, & 98 systems	17
How to complete the Windows Upgrade Device Driver Wizard	18
<b>How to adjust the screen resolution</b>	<b>20</b>
<b>How to adjust the screen refresh rate</b>	<b>21</b>
<b>How to set the picture optimization</b>	<b>22</b>
<b>How to adjust your monitor</b>	<b>23</b>
A Look at the Control Panel	23
Hot Key Mode	23
Main Menu Mode	24
<b>Troubleshooting</b>	<b>33</b>
Frequently Asked Questions (FAQ)	33
Need More Help?	34
<b>Supported operating modes</b>	<b>35</b>
<b>Specifications</b>	<b>36</b>



# 1 Getting started

When unpacking please check you have the following items. If they are missing or are damaged, please immediately contact the dealer at which you purchased the goods.

BenQ LCD Monitor	
Quick Start Guide	
CD-ROM Disk	
Power Cord	
Power Adapter	
Signal Cable: D-Sub	

Signal Cable: DVI-D	
Audio Cable	

## ② Getting to know your monitor

### Front View




1. "Mode" key
2. ► (Right) key
3. "Enter" key
4. "Exit" key
5. ◀ (Left) key
6. "iKey"

☞ For more information about these keys, please refer to Chapter 8 - "[How to adjust your monitor.](#)"

### Back View (1)



## Back View (2): Locations of plugs & sockets

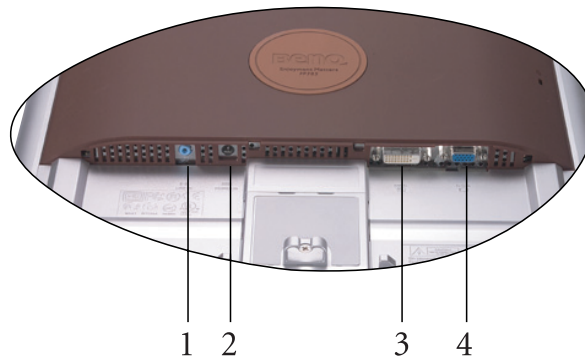

1. Audio Connector
2. Power AC Input Jack
3. DVI-D Connector
4. D-Sub Connector



### ③ How to install your monitor hardware

☞ **If the computer is turned on you must turn it off before continuing. Do not plug-in or turn-on the power to the monitor until instructed to do so.**

1. Unpack the monitor and remove the stuff filling in the seams. Then place the monitor face down on a stable surface and release the locks to detach the back cover.



☞ **Place the foam packing sheet from the monitor on the flat surface to prevent damage to the bezel.**

2. Connect the signal cables (D-Sub and DVI-D) to the monitor as shown.



3. Connect the other end of the signal cable to your computer as shown.



4. Connect the power adaptor plug to your monitor as shown.



5. Connet your monitor and computer with the audio cable.



6. Put the back cover back and then separate the legs of the stand and place the monitor on a stable surface.



7. Connect the Power Cord to the power adaptor then plug the other end into a nearby wall socket. (Use only power supplies listed in the user's manual)



8. Press the Power button on the side panel of the monitor. The power indicator will light up.



## Using the Monitor Mounting Kit (Optional)




Your FP785 allows "Location Free" installation. You may wish to mount your LCD monitor to the wall after completing the installation procedures above. Before starting to install a monitor mounting kit, please read the precautions carefully.

 **This function is available for PC application only.**

### Precautions


- Install your monitor and monitor mounting kit on a wall with flat surface.
- Ensure that the wall material is stable to support the weight of the monitor. It is recommended that you consult a qualified tradesman prior to mounting the device.
- To avoid the possibility of damage, use the provided materials to complete the installation.

### Installing the Pivot software

1. Execute "START\_PIVOT.EXE" from the folder named "Pivot" on the provided CD.
2. Follow the on-screen instructions to install the software.
3. After restarting your system, you will see a Pivot Software Control icon, , appearing in the system tray. Click on the icon and choose "Rotate 180 degrees", , to pivot the display. To cancel this action, choose "Rotate 0 degree", .
4. Turn the power off and keep following the steps below..

## Installing the monitor mounting kit

1. Adhere the mounting position reference chart to the wall.
2. Use a suitable drill and bit to drill two holes in on the wall according to the reference chart.
3. Insert the supplied screws into the holes and then attach the monitor mounting kit to the wall.
4. Mount the LCD panel to the fixed monitor mounting kit. Now you may turn the monitor power on.

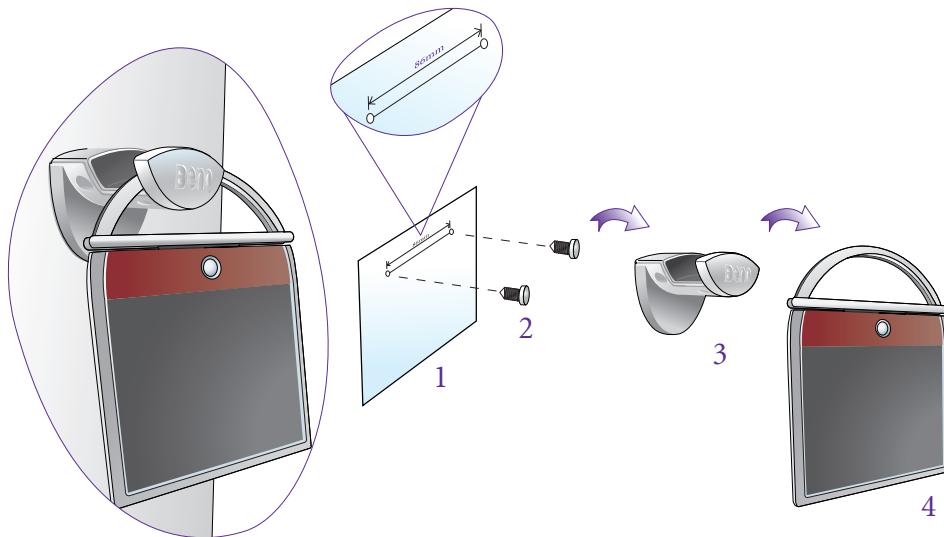

## Adjusting the viewing angle

Your LCD monitor is designed with a tilt feature that allows you to achieve your optimal viewing angle.



## 4 Getting the most from your BenQ monitor

### How do I gain the most benefit from my new monitor?


To gain the most benefit from your new BenQ color LCD flat screen monitor, you should install the custom BenQ LCD Monitor driver software as provided on the BenQ LCD Monitor CD-ROM.

The circumstances under which you connect and install your BenQ LCD Monitor will determine which process you need to follow to successfully install the BenQ LCD Monitor driver software. These circumstances relate to which version of Microsoft Windows you are using, and whether you are connecting the monitor and installing the software onto a new computer (without existing monitor driver software), or whether you are upgrading an existing installation (which already has existing monitor driver software) with a newer monitor.

In either case however, the very next time you turn on your computer (after connecting the monitor to your computer), Windows will automatically recognise the new (or different) hardware, and will launch its **Found New Hardware** wizard.


Follow the wizard instructions until it asks you to select a monitor model. At that point, click the **Have Disk** button, insert the BenQ LCD Monitor CD-ROM and select the appropriate monitor model. Further details and step-by-step instructions for both an automatic (new) or upgrade (existing) installation follow. See:

- [How to install the monitor on a new computer.](#)
- [How to upgrade the monitor on an existing computer](#)

 If you require a User Name and Password to login to your Windows computer, you must be logged on as an Administrator or as a member of the Administrators group in order to install the monitor driver software. Furthermore, if your computer is connected to a network which has security access requirements, network policy settings may prevent you from installing software on your computer.

## How to install the monitor on a new computer

This instruction details the procedure for selecting and installing the BenQ LCD Monitor driver software on a new computer which has never had a monitor driver installed before. This instruction is only suitable for a computer which has never been used before, and for which the BenQ LCD Monitor is the first ever monitor to be connected to it.


 **If you are adding the BenQ LCD Monitor to an existing computer that has already had another monitor connected to it (and has monitor driver software installed), you should not be following these instructions. You should instead be following the instructions for How to upgrade the monitor on an existing computer.**

1. Follow the instructions in [How to install your monitor hardware](#).  
When Windows (2000 or later) starts, it will automatically detect the new monitor and launch the **Found New Hardware Wizard**. Follow the prompts until it displays the option to **Install Hardware Device drivers**.
2. Insert the BenQ LCD Monitor CD-ROM into a CD drive on the computer.
3. Check **Search for a suitable driver for my device** option, and click **Next**.
4. Check the option for **CD-ROM drives** (uncheck all others) and click **Next**.
5. Look to confirm that the wizard has selected the correct name of your monitor as "BenQ FP785" and click **Next**.
6. Click **Finish**.
7. Restart the computer.



## How to upgrade the monitor on an existing computer

This instruction details the procedure for manually updating the existing monitor driver software on your Microsoft Windows computer. It is currently tested as compatible (and recommended only) for Windows 98, Windows ME, Windows 2000, and Windows XP Operating System (OS).

 **The BenQ LCD Monitor driver for your model may well function perfectly with other versions of Windows, however, as at the time of writing, BenQ has done no testing of this driver on other versions of Windows and cannot guarantee its operation on those systems.**

Installing monitor driver software involves selecting an appropriate information file (.inf) on the BenQ LCD Monitor CD-ROM for the particular model monitor you have connected, and letting Windows install the corresponding driver files from the CD. You need only steer it in the right direction. Windows has an Upgrade Device Driver Wizard to automate the task and guide you through the file selection and installation process.

See:

- [How to install on Windows XP systems.](#)
- [How to install on Windows 2000, ME, & 98 systems.](#)

## How to install on Windows XP systems

### 1. Open **Display Properties**.

The quickest shortcut to **Display Properties** is through the Windows desktop. Right-click the desktop and select **Properties** from the popup menu.

Alternatively, the Windows menu to **Display Properties** is located in **Control Panel**.

In Windows XP version, **Control Panel** is located directly under the main **Start** menu item. The menu options displayed will depend upon which type of view is selected for your system.

- Under the Classic view, click **Start | Control Panel | Display**.
- Under the Category view, click **Start | Control Panel | Appearance and Themes | Change the screen resolution**.

The **Display Properties** window will display.

### 2. Click the **Settings** tab and the **Advanced** button.

The **Advanced Display Properties** window will display.

### 3. Click the **Monitor** tab and select the 'Plug and Play Monitor' from the list.

If there is only one monitor in the list, it will already be selected for you.

### 4. Click the **Properties** button.

The **Monitor Properties** window will display.

If the driver provider is listed as BenQ, and the model matches that of your new monitor, the proper drivers are already installed, and you need do nothing further. Cancel out of these property windows.

However, if BenQ is not listed as the manufacturer, or the correct model is not currently shown, you will need to continue with these instructions.

### 5. Click the **Driver** tab and the **Update Driver** button.

The **Hardware Update Wizard** will display. Follow the wizard instructions noting the steps below:

### 6. Insert the BenQ LCD Monitor CD-ROM into a CD drive on the computer you attached the monitor to.

### 7. Check the option 'Install from a list or specific location' and click **Next**.

### 8. Check the option 'Search for the best driver in these locations' and also check 'Search removable media', then click **Next**.

Please wait while the wizard searches for drives and the BenQ LCD Monitor CD inserted in step 6. When complete, the wizard should have found and selected the BenQ driver on the CD appropriate to your monitor model, in this case 'BenQ FP785' in the location 'd:\driver\fp785.inf' or similar.

 **The drive letter for your CD drive may differ from the example above depending upon your system – it may be 'D:' or 'E:' or 'F:' etc.**

### 9. Select (single-click) the file named 'BenQ FP785' on the CD, and click the **Next** button.

This will copy and install the appropriate monitor driver files to your computer.

### 10. Click **Finish**.


This will close the wizard and return you to the **Monitor Properties** window, now renamed **BenQ FP785 Properties**.

### 11. Click **Close**, **OK**, and **OK**.

This will close the **Display Properties** windows. You do not need to restart Windows XP, as the BenQ LCD monitor drivers will operate immediately with no further action required by you.



## How to install on Windows 2000, ME, & 98 systems

 **You do not need to follow this instruction if you are installing onto a computer which has a Windows XP (or later) version system. In that case, see the instructions at [How to install on Windows XP systems](#).**

1. Open **Display Properties**.

The quickest shortcut to **Display Properties** is through the Windows desktop.

Right-click the desktop and select **Properties** from the popup menu.

Alternatively, the Windows menu to **Display Properties** is located in **Control Panel**.

In Windows 2000, ME, & 98 versions, **Control Panel** is located under the **Settings** menu item.

Click **Start | Settings | Control Panel | Display**.

The **Display Properties** window will display.

2. Click the **Settings** tab and the **Advanced** button.

The **Advanced Display Properties** window will display.

3. In Windows 2000, click the **Monitor** tab and the **Properties** button.

The **Monitor Properties** window will display.

Alternatively, on Windows ME or 98, click the **Monitor** tab and the **Change** button.

This will jump you directly to the **Upgrade Device Driver Wizard**, skipping the next step.

4. In Windows 2000, click the **Driver** tab and the **Update Driver** button.

The **Upgrade Device Driver Wizard** will display.

See [How to complete the Windows Upgrade Device Driver Wizard](#).

## How to complete the Windows Upgrade Device Driver Wizard

1. Load the BenQ LCD Monitor CD-ROM which came with your monitor.  
Insert the CD-ROM into a CD drive on the computer you attached the monitor to.  
The autorun User's Guide language selection page will display in your web browser.  
You can select a language and view the online version of this manual from the next window.  
You could then print it out for reference if you wish to work off-line. When you're ready, **Cancel** the browser as it is not required for the Windows **Upgrade Device Driver Wizard**.
2. Launch the Windows **Upgrade Device Driver Wizard** and click **Next**.  
For instructions, see [How to install on Windows 2000, ME, & 98 systems](#).
3. Check the option '**Display a list of known drivers ...**' and click **Next**.
4. Click the **Have Disk** button.  
The **Install From Disk** window will display.
5. Click the **Browse** button and navigate to the BenQ LCD Monitor CD-ROM.  
This is the CD you loaded in step 1 above. The CD Drive will have a Windows designated drive letter (like D: or E: or F:). Select the drive letter corresponding to the drive you put the CD into.
6. Double-click the folder labelled '**Driver**'.  
The contents of the 'Driver' folder will display.
7. Click the **Open** button.  
This will return you to the **Install from Disk** window, and it will have entered the address to the BenQ LCD Monitor CD 'Driver' folder into the field titled '**Copy manufacturer's files from:**'.  
The field will contain something like "D:\Driver", or "E:\Driver", or "F:\Driver".
8. Click the **OK** button.  
This will return you to the **Upgrade Device Driver Wizard**.
9. Select (single-click) the file named **BenQ FP785**, and click the **Next** button.
10. Click **Next**.  
This will copy the appropriate monitor driver files to your computer.
11. Click **Finish**.  
On Windows 2000, this will close the wizard and return you to the **Monitor Properties** window, now renamed '**BenQ FP785 Properties**'.  
Alternatively, on Windows ME and 98, this will return you to the **Advanced Display Properties** window, skipping the next step.  
Should you wish to do so, this is where you can change the screen refresh rate and other monitor properties to suit your needs. See [How to adjust the screen refresh rate](#) for details.
12. In Windows 2000, click **Close**.  
This will close the **BenQ FP785 Properties** window and return you to the **Advanced Display Properties** window.  
Should you wish to do so, this is where you can change the screen refresh rate and other monitor properties to suit your needs. See [How to adjust the screen refresh rate](#) for details.
13. In Windows 2000, click **OK**, or in Windows 98 or ME, click **Close**.  
This will close the **Advanced Display Properties** window, and return you to the **Display Properties** window.

Should you wish to do so, this is where you can change the screen resolution (area and color). See [How to adjust the screen resolution](#) for details.


14. Click **OK**.

This will close the **Display Properties** window, and if you made any changes to the screen resolution, Windows 2000 will prompt you for confirmation to effect the changes, and further confirmation to accept the changes. Click **OK** and **Yes** respectively.

Alternatively, Windows ME or 98 will ask you if want to make the changes and reboot or not reboot. You should select the reboot option as this causes Windows to load the new drivers when it next restarts.

## 5 How to adjust the screen resolution

Due to the nature of liquid crystal display (LCD) technology, the picture resolution is always fixed. The best possible picture for your FP785 is achieved with a resolution of 1280x1024. This is called “Native Resolution” or maximal resolution – that is, the clearest picture. Lower resolutions are displayed on a full screen through an interpolation circuit. However flaws do occur with the interpolated resolution.

 **To take full advantage of LCD technology you should select the native resolution setting of 1280x1024.**

1. Open **Display Properties** and select the **Settings** tab.  
You can open **Display Properties** by right-clicking on the Windows desktop and selecting **Properties** from the pop-up menu.
2. Use the slider in the ‘Screen area’ section to adjust the screen resolution.  
Select the recommended resolution of 1280x1024 then click **Apply**.



**If you select some other resolution, be aware that this other resolution is interpolated and may not accurately display the screen image as well as it could do at the native resolution setting.**

3. Click **OK** then **Yes**.
4. Close the **Display Properties** window.

## 6 How to adjust the screen refresh rate

You don't have to choose the highest possible refresh rate on an LCD display, because it is not technically possible for an LCD display to flicker. The best results are obtained by using the factory modes already set in your computer. There is a table with the factory modes in the specification section of this User's Manual.



**You can choose 60, 70 and 75 Hertz, (but not 72Hz) for the native resolution of 1280x1024.**

1. Double click the **Display** icon in **Control Panel**.
2. From the **Display Properties** window, select the **Settings** tab and click the **Advanced** button.
3. Select the **Adapter** tab, and select an appropriate refresh rate to match one of the applicable factory modes as listed in the specification table.
4. Click **Change**, **OK**, then **Yes**.
5. Close the **Display Properties** window.

## 7 How to set the picture optimization

The easiest way to obtain an optimal display is to use the *i*key function. Press the *i*key to optimize and adjust the screen settings automatically for you. Refer to [How to adjust your monitor](#) for button locations and functionality.


If you wish to, you can always adjust the screen settings manually using the buttons on the monitor panel. To assist you in this endeavour, BenQ has provided a screen test image utility which you can use to check for screen color, grayscale and line gradient display.

1. Run the test program auto.exe from CD-ROM. You could also use any other image, such as the desktop of your operating system. However, we recommend that you use auto.exe. As you run auto.exe, a test pattern displays.
2. Press the **Enter** key to access the monitor On-Screen Display (OSD) menu.
3. If you notice a vertical noise, press the ◀ or ▶ keys to select **Geometry** and press the **Enter** key. Then press the ◀ or ▶ keys to select **Pixel Clock** and press the **Enter** key again. Then, press the ◀ or ▶ key to adjust the monitor until the noise disappears.
4. If you notice a horizontal noise, press the ◀ or ▶ keys to select **Geometry** and press the **Enter** key. Then press the ◀ or ▶ keys to select **Phase** and press the **Enter** key again. Then, press the ◀ or ▶ keys to adjust the monitor until the noise disappears.

To make sure the *i*key function performs well, you have to select one of the supported modes. If the *i*key does not work properly and the **NON PRESET MODE** message is on the OSD, it means you are not using one of the supported modes. Please set your monitor to use one of the supported modes as listed at the end of this manual.

## 8 How to adjust your monitor

### A Look at the Control Panel

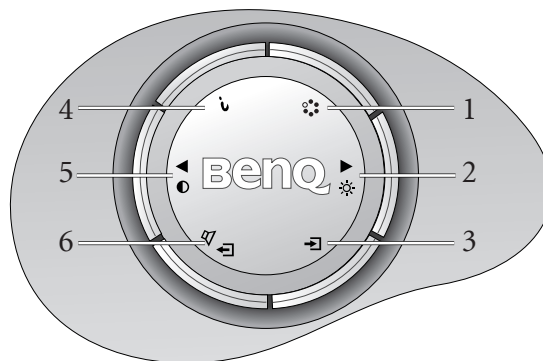

There are 6 keys for user's control including "Mode", "▶", "Enter", "Exit", "◀", and "iKey". The following descriptions are the introduction of these keys & switch.

1. "Mode" key: Switch between different modes, including Standard, Movie 1, Movie 2, and Photo.
2. ▶ (Right) key: For Right/Increase adjustment. The key is also the hot key for Brightness.
3. "Enter" key: Activate OSD, enter sub menu, select items, confirm selection.
4. "Exit" key: Back to previous menu or exit OSD. The key is also the hot key for the volume of the speaker.
5. ◀ (Left) key: For Left/Increase adjustment. The key is also the hot key for Contrast.
6. "iKey": Adjust vertical position, phase, horizontal position and pixel clock automatically.

### Hot Key Mode

#### Mode hot key

Select your desired mode from these four options: Standard, Movie 1, Movie 2, and Photo. The specified mode will optimise the image properties to best suit the image type. Standard mode is suggested for basic PC application; Movie 1, enhancing color and contrast level, is for viewing videos, while the Movie 2 mode best suits landscape-specific videos; Photo is designed for viewing still images.

When done, press "Exit" to leave the OSD.





## Brightness and Contrast hot key

Press ► to enter Brightness menu, press the ◀ or ► key to adjust the degree of brightness and press “Exit” to exit OSD.




Press ◀ to enter Contrast menu, press the ◀ or ► key to adjust the degree of Contrast and press “Exit” to exit OSD.



## Volume hot key

Press the "Volume" key to enter Volume menu, and press ◀ or ► key to adjust the volume of the speaker and press “Exit” to exit OSD.

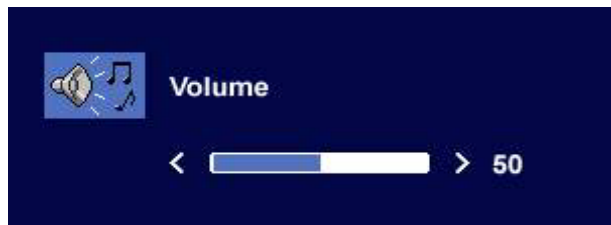

## Main Menu Mode

### Control Functions Available in Main Menu

#### Main Menu

The operation mode is displayed in the top right corner of the main menu.





## Luminance sub menu




Press the ◀ or ▶ key to adjust the degree of Brightness, press “Exit” to return to the previous menu.




Press the ◀ or ▶ key to adjust the degree of Contrast, press “Exit” to return to the previous menu.




## Geometry sub menu

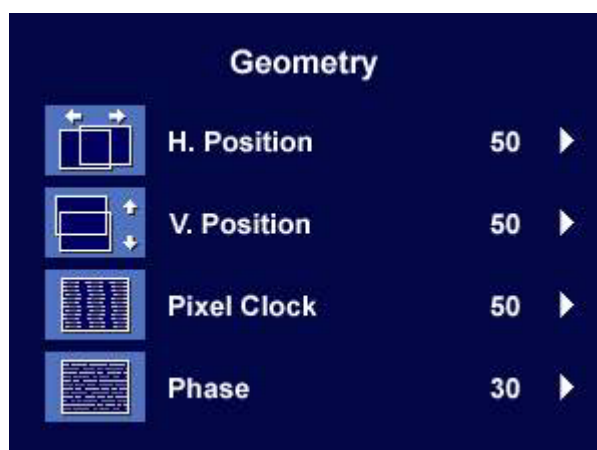


Press the ◀ or ▶ key to adjust the Horizontal Position, press “Exit” to return to previous menu.

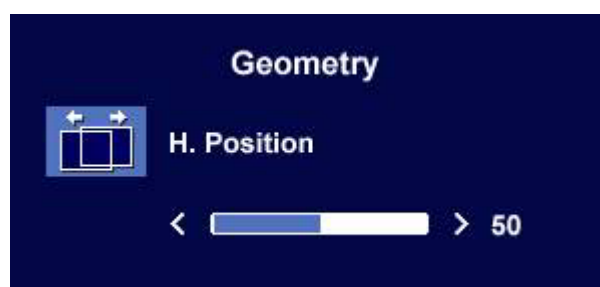


Press the ◀ or ▶ key to adjust the Vertical Position, press “Exit” key to return to the previous menu.

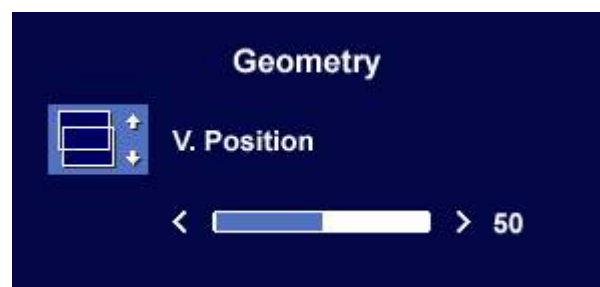


Press the ◀ or ▶ key to adjust the value of the Pixel Clock, press “Exit” to return to the previous menu.

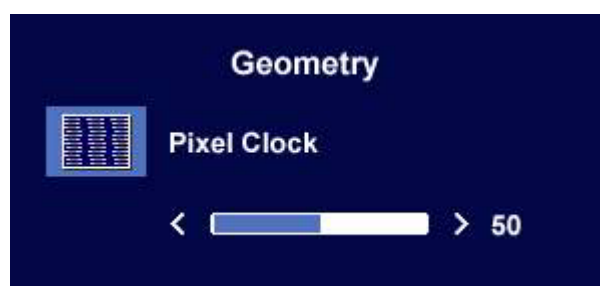

Press the ◀ or ▶ key to adjust the degree of Phase, press “Exit” to return to the previous menu.

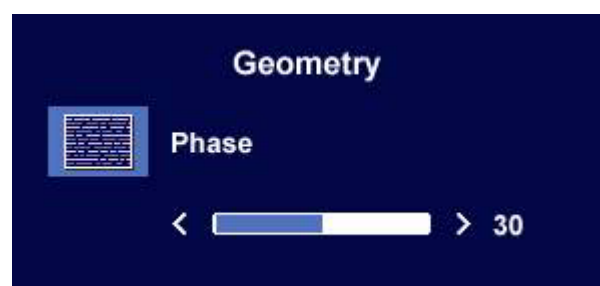

## Color sub menu

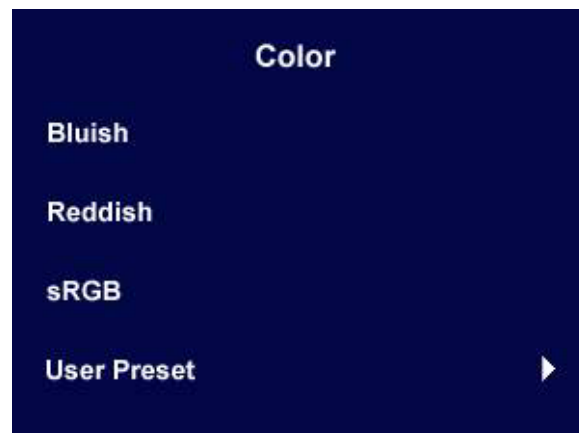

User Preset:

User may set the color balance of Red, Green and Blue.



## OSD sub menu



Press the ◀ or ▶ key to adjust the Horizontal Position of the OSD, press “Exit” to return to the previous menu.



Press the ◀ or ▶ key to adjust the Vertical Position of the OSD, press “Exit” to return to the previous menu.




Press the ◀ or ▶ key to adjust the display time of the OSD, press “Exit” to return to the previous menu.



Press the ◀ or ▶ key to determine activation or inactivation of OSD Rotate. When done, press “Enter” to activate the settings. Press “Exit” to return to the previous menu.


👉 **When the monitor is mounted to the wall, please make sure that the OSD Rotate function is off.**

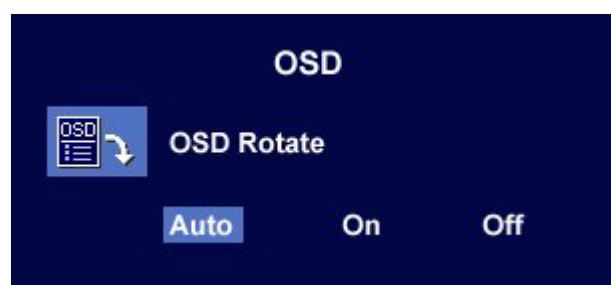

## Language sub menu



## Recall sub menu

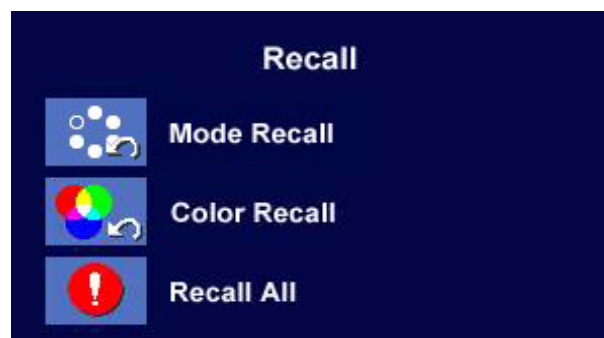


Press the ◀ or ▶ key to confirm Mode Recall.  
When you choose "Yes", it will recall the current mode to default settings.

Press "Exit" will return to the previous menu.



Press the ◀ or ▶ key to confirm Color Recall.  
When you choose "Yes", it will recall the current color settings to default settings.


Press "Exit" will return to the previous menu.

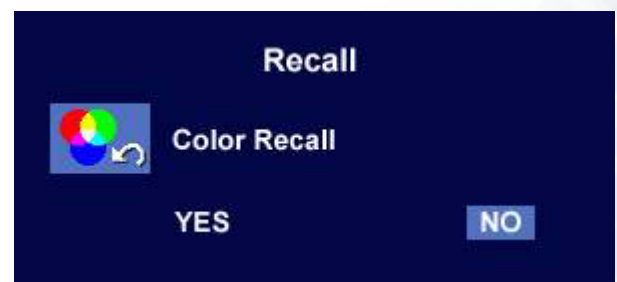

Press the ◀ or ▶ key to confirm Recall All.  
 When you choose "Yes", it will recall all the current settings to default settings.  
 Press "Exit" will return to the previous menu.




### Miscellaneous sub menu

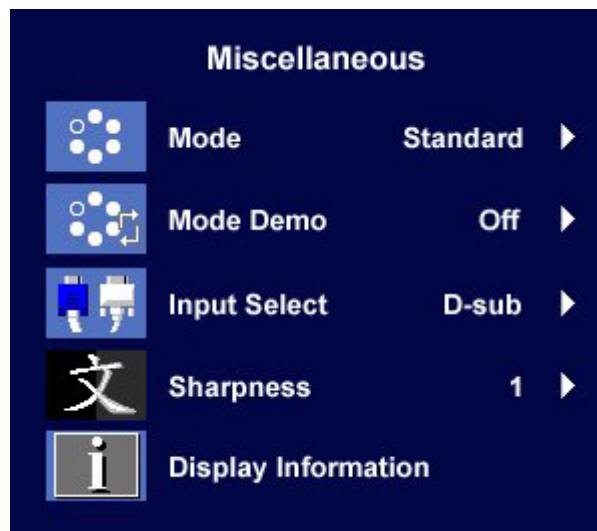

### Mode:

Select your desired mode from these four options: Standard, Movie 1, Movie 2, and Photo. The specified mode will optimise the image properties to best suit the image type. Standard mode is suggested for basic PC application; Movie 1, enhancing color and contrast level, is for viewing videos, while the Movie 2 mode best suits landscape-specific videos; Photo is designed for viewing still images.

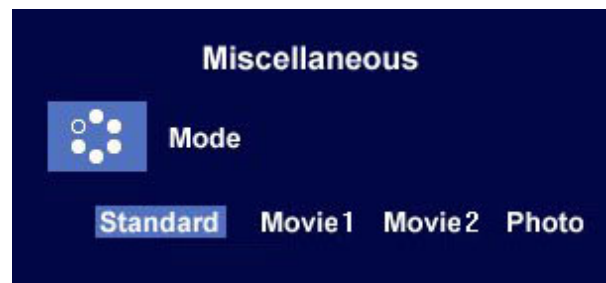


When done, press "Enter" to activate the settings. To return to the previous menu, press "Exit."

### Mode Demo:

Mode Demo allows you to preview the effects of the selected Mode from Mode menu.

When you choose "On" and press "Enter" to activate Mode Demo, the display will be divided into two windows; the left window demonstrates images of Standard mode, while the right window presents the images under the specified mode.

To return to the previous menu, press "Exit."

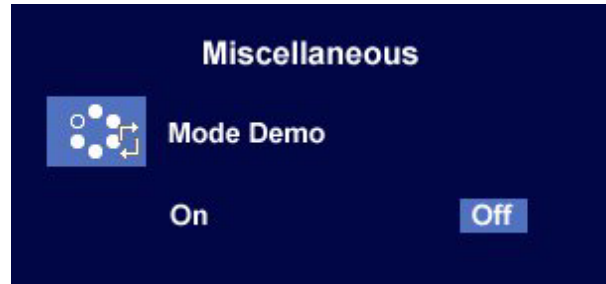

### Input Select:

Select D-sub (analog) or DVI (digital) input to activate the new settings.



### Sharpness:

Press ◀ or ▶ key to adjust the degree of Sharpness and activate the new settings.



### Display Information.






## Audio sub menu




### Volume:

Press the ◀ or ▶ key to adjust the degree of Volume.

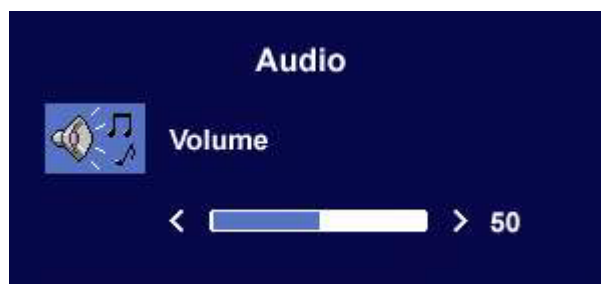

### SRS:

Press the ◀ or ▶ key to select “ON” or “OFF” for SRS function.

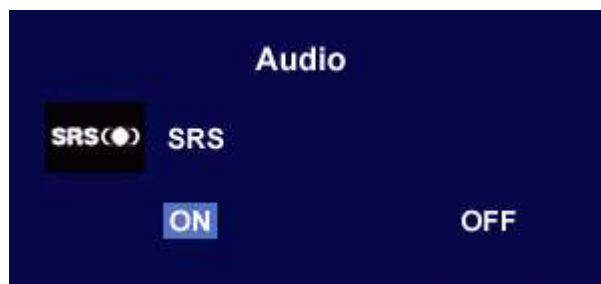

### Mute:

Press the ◀ or ▶ key to select “ON” or “OFF” for Mute.





## 9 Troubleshooting

### Frequently Asked Questions (FAQ)

#### ? The image is blurred:

☞ Read the [How to adjust the screen resolution](#) section, and then select the correct resolution, refresh rate and make adjustments based on these instructions.

#### ☞ How do you use a VGA extension cable?

Remove the extension cable for the test. Is the image now in focus? If not, optimize the image by working through the instructions in the [How to adjust the screen refresh rate](#) section. It is normal for blurring to occur due to conduction losses in extension cables. You can minimize these losses by using an extension cable with better conduction quality or with a built-in booster.

#### ☞ Does the blurring only occur at resolutions lower than the native (maximum) resolution?

Read the [How to adjust the screen resolution](#) section. Select the native resolution.

#### ? Pixel errors can be seen:

☞ One of several pixels are permanently black, one or more pixels are permanently white, one or more pixels are permanently red, green, blue or another color.

- Clean the LCD screen.
- Cycle power on-off.
- These are pixels that are permanently on or off and is a natural defect that occurs in LCD technology.

#### ? The image has a faulty coloration:

☞ It has a yellow, blue or pink appearance.

On the monitor, press “Enter” key and press ◀ or ▶ key to move to the “Recall” icon and press “Enter” key to enter “Recall” sub menu. Press ◀ or ▶ key to select “Color Recall” and select “Yes” in “Color Recall” sub menu, then press “Enter” key to recall to factory settings. If the image is still not correct and the OSD also has faulty coloration, this means one of the three primary colors is missing in the signal input. Now check the signal cable connectors. If any pin is bent or broken off, please contact your dealer to get necessary support.

#### ? No image can be seen:

☞ Is the prompt on the display illuminated in green?

If the LED is illuminated in green and there is a message “Out of Range” on the screen, this means you are using a display mode that this monitor does not support, please change the setting to one of the supported mode. Please read the [Supported operating modes](#) section.

☞ Is the prompt on the display illuminated in orange?

If the LED is illuminated in orange, the power management mode is active. Press any button on the computer keyboard or move the mouse. If that does not help, check the signal cable connectors. If any pin is bent or broken off, please contact your dealer to get necessary support.

☞ Is the prompt on the display not illuminated at all?

Check the power supply mains socket, the external power supply and the mains switch.

⑦ The image is distorted, flashes or flickers:

☞ Read the [How to adjust the screen resolution](#) section and then select the correct resolution, refresh rate and make adjustments based on these instructions.

⑦ The image is displaced in one direction:

☞ Read the [How to adjust the screen resolution](#) section and then select the correct resolution, refresh rate and make adjustments based on these instructions.

## Need More Help?


If your problems remain after checking this manual, please contact your place of purchase or e-mail us at: [Support@BenQ.com](mailto:Support@BenQ.com)


## 10 Supported operating modes

Incoming display mode (Input timing)					Multi-scan operation
Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Pixel Frequency (MHz)	Comment	Actual display resolution
640x350	31.47	70.08	25.17	DOS	full screen 1280 x 1024
720x400	31.47	70.08	28.32	DOS	
640x480	31.47	60.00	25.18	DOS	
640x480	35.00	67.00	30.24	Macintosh	
640x480	37.86	72.80	31.50	VESA	
640x480	37.50	75.00	31.50	VESA	
800x600	37.88	60.32	40.00	VESA	
800x600	48.08	72.19	50.00	VESA	
800x600	46.87	75.00	49.50	VESA	
832x624	49.72	74.55	57.29	Macintosh	
1024x768	48.36	60.00	65.00	VESA	
1024x768	56.48	70.10	75.00	VESA	
1024x768	60.02	75.00	78.75	VESA	
1024x768	60.24	74.93	80.00	Macintosh	
1152x864	67.50	75.00	108.00	VESA	
1152x870	68.68	75.06	100.00	Macintosh	
1152x900	61.80	66.00	94.50	SUN 66	
1152x900	71.81	76.14	108.00	SUN	
1280x1024	64.00	60.00	108.00	VESA	
1280x1024	75.83	71.53	128.00	IBM1	
1280x1024	80.00	75.00	135.00	VESA	
1280x1024	81.18	76.16	135.09	SPARC2	

- Modes not listed in the table may not be supported. For an optimal picture, we recommended you choose a mode listed in the table above.
- There are 22 available modes that are compatible with Windows.
- Image disruption may occur as a result of signal frequency differences from VGA cards which do not correspond with the usual standard. This is not, however, an error. You may improve this situation by altering an automatic setting or by manually changing the phase setting and the pixel frequency from the “Geometry” menu.
- If you switch off the monitor, interference lines can occur on your screen. But do not be concerned about this, as it is normal.
- To extend the service life of the product, we recommend that you use your computer's power management function.

## 11 Specifications

Model	FP785
Display type	17.0" , active, TFT
Viewable diagonal	43.2 cm
Native (maximum) resolution	1280 x 1024
Colors	16.7 million
Contrast / Brightness	1000:1 / 280 cd/m <sup>2</sup>
Response time	25 ms
Viewing angle (left/right, up/down)	79/79, 79/79 (CR=10)
Line frequency	30 - 83 kHz Multi- frequency monitor
Image frequency	50 - 76 Hz modes within these parameters
Image checks	Digital, <i>Screen</i> OSD Technology, <i>iKey</i> (automatic image setting)
Controls	6 buttons and <i>iKey</i> .
iScreen functions	Contrast, brightness, vert. & hor. image position, phase, pixel clock, color balance, color palette, choice of language (8 language OSD), OSD position, status indicator, display-mode availability
Power Adapter	BenQ ADP-50SH Rev. B.
Power Management	VESA DPMS, EPA
Max. power consumption	50 Watt Max (with speaker)
DC input voltage	12 V
DC input current	4.16A
Power saving mode	<1 Watts (110 Volts) < 2 Watts (240 Volts)
	 This product comply with ENERGY STAR® Program Requirements Computer Monitors. Version 4.0

Input signal	RGB analog 0.7 Vpp/75 Ohm positive
PC	Digital: DVI-D
Speaker	2W x 2  is a trademark of SRS Labs, Inc. SRS technology is incorporated under license from SRS Labs, Inc.
Synchronisation	TTL separate signal connection 15-pin mini D-sub cable
Temperature (operating)	0 °C - 40 °C
Air humidity (operating)	10% - 90%
Certifications	TCO 99, TÜV/Ergonomics, TÜV/ GS, FCC Class B, ISO 13406-2, VCCI, UL, CB Report, CE, C-Tick, BSMI, Fimko, GOST
Operating voltage	Automatic switched mode power supply, 90-264 V, 47-63Hz
Dimensions (L x W x H)	380 x 55 x 496.5 mm (with stand)
Weight	5.0 kg